



INSTALLATION INSTRUCTIONS

Accessory
FRONT BUMPER TRIM
P/N 08F01-SZT-100B

Application
2016 CR-Z

Publications No.
VERSION 1
Issue Date
OCT 2015

PARTS LIST

Front bumper trim



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Masking tape


Blanket

10 mm Open end wrench

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search" Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)

Illustration of the Front Bumper Trim on the Vehicle

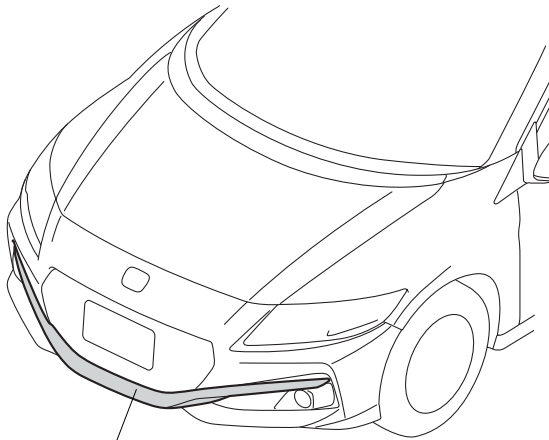

FRONT BUMPER TRIM


QE32302AA

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: Do not damage the vehicle body paint finish.


1. Disconnect the negative cable from the battery.
2. Apply masking tape to the front bumper, headlights, and front fenders as shown.

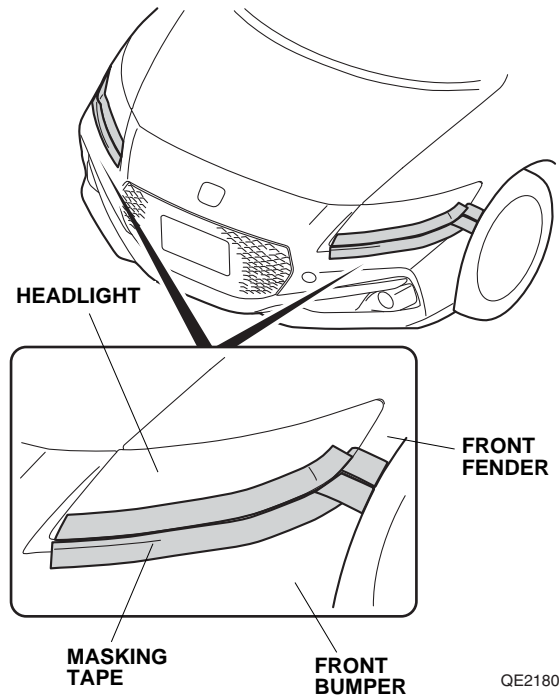


3. Remove the front bumper.
 - Remove the left and right front bumper side covers.

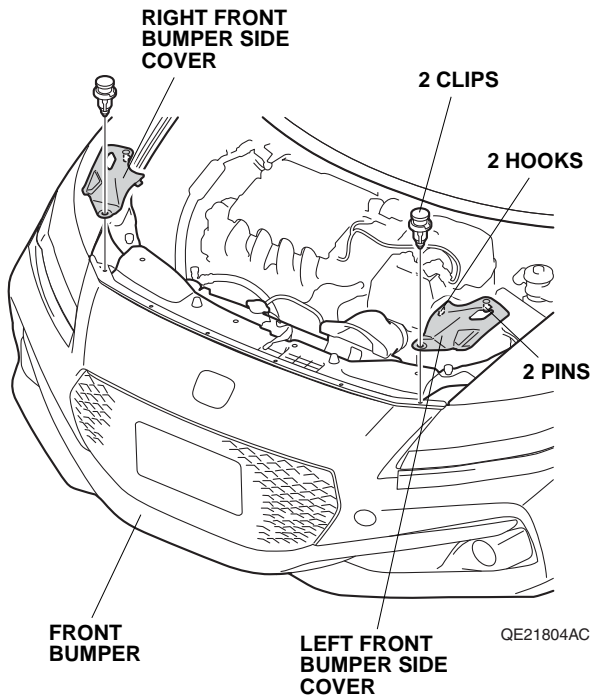


- Remove the front bumper molding.

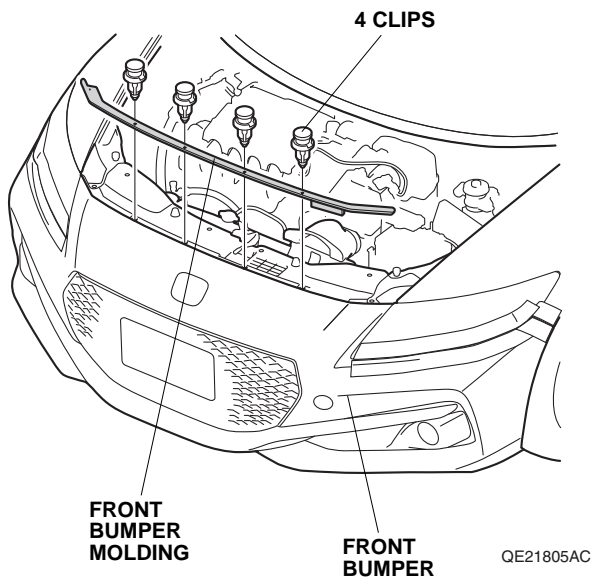


- Remove the four self-tapping screws, two washer-screws, and eleven clips.

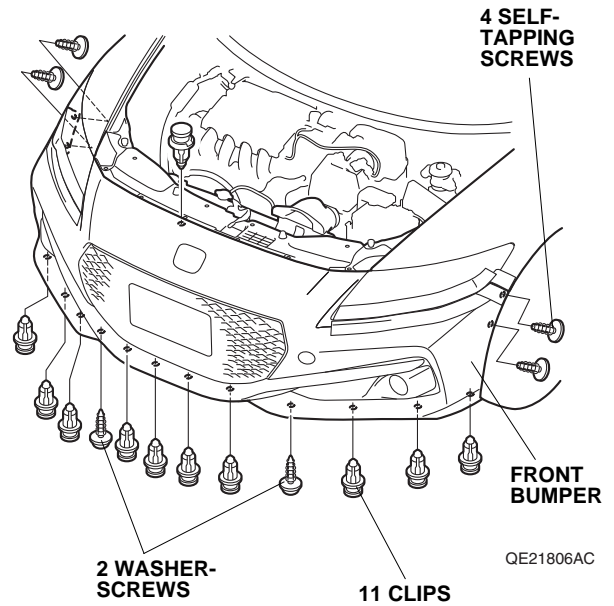


- With the help of an assistant, release the two retaining tabs on each side.

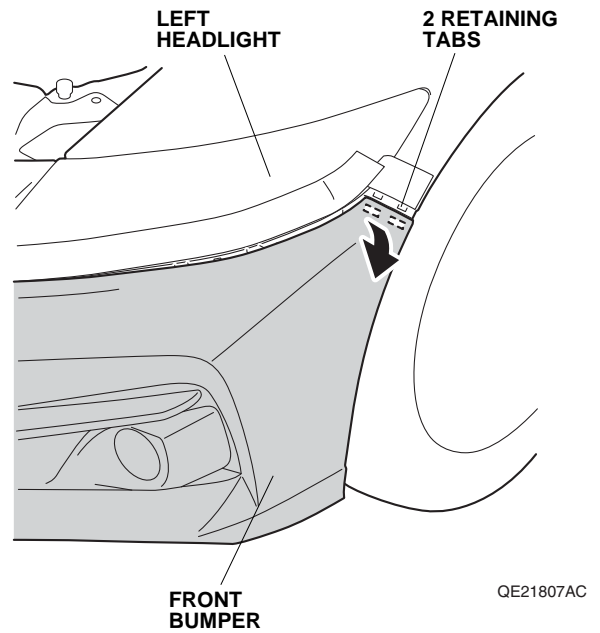


- With the help of an assistant, release the four retaining tabs on each side.

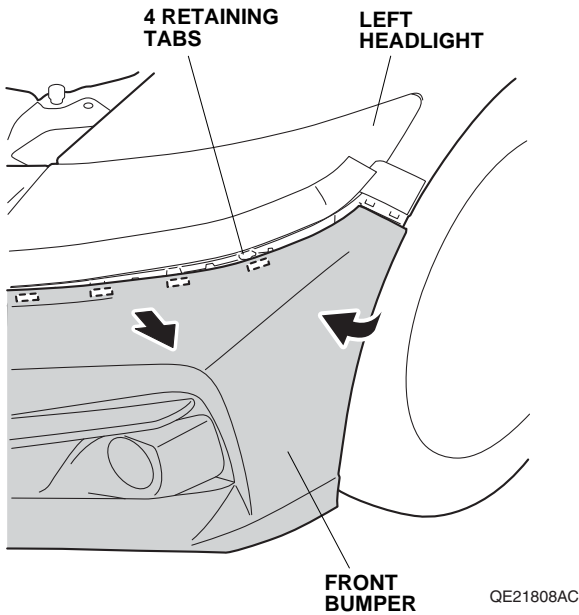


- With the help of an assistant, remove the front bumper. If the vehicle is equipped with fog lights, unplug the vehicle connectors.
- Place the front bumper on a blanket.

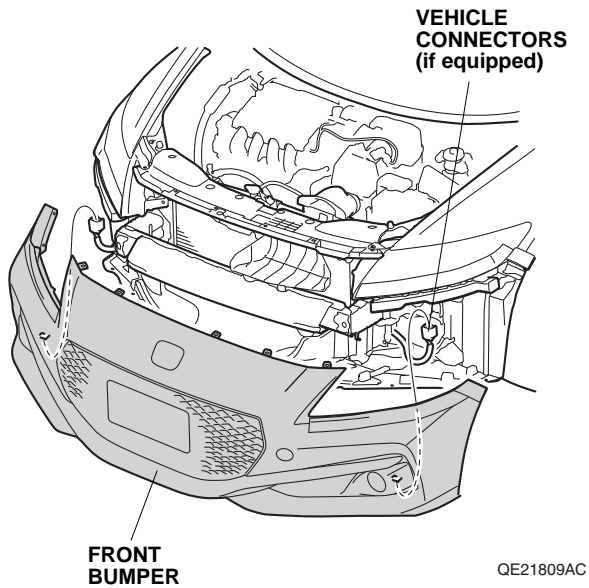

4. Remove the left air spoiler.

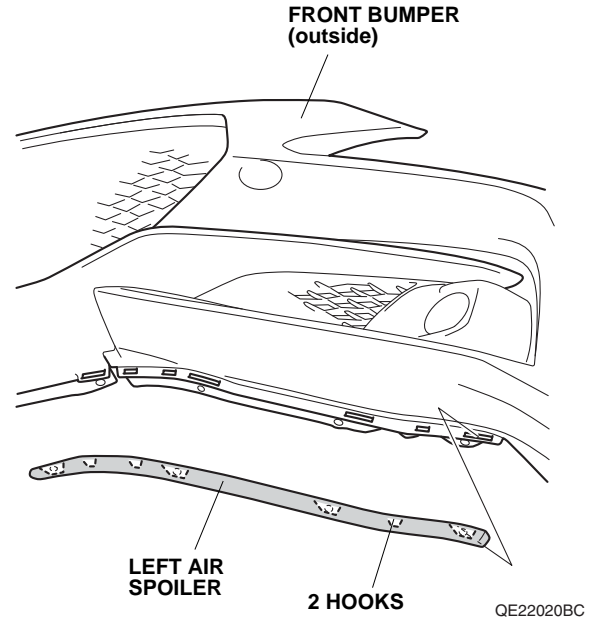


5. Remove the two self-tapping screws.

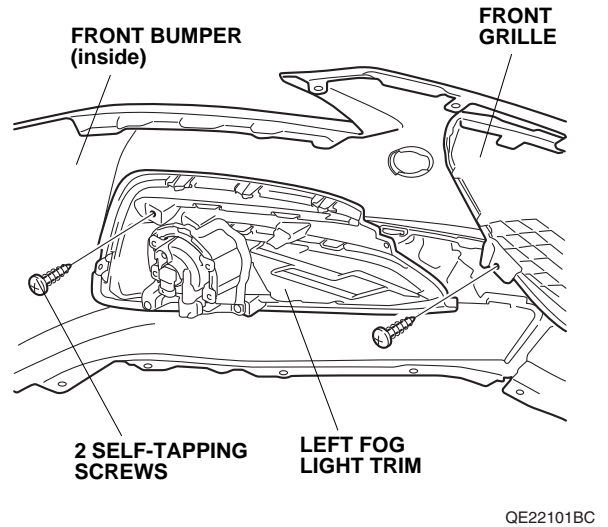


6. Repeat steps 4 and 5 on the right side.


7. Remove the front bumper trim.

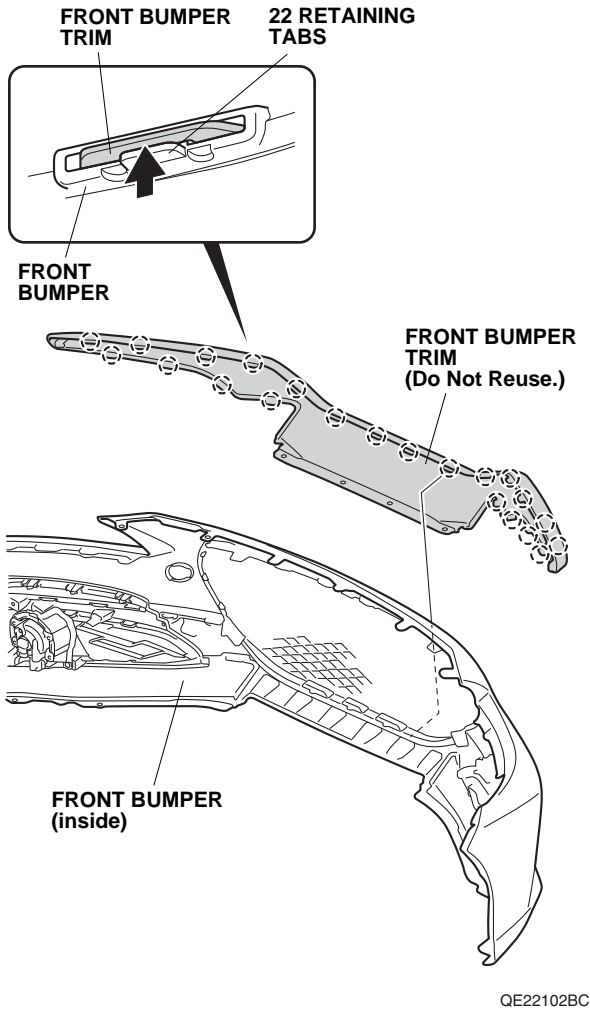

8. Install the front bumper trim on the front bumper with 22 retaining tabs.

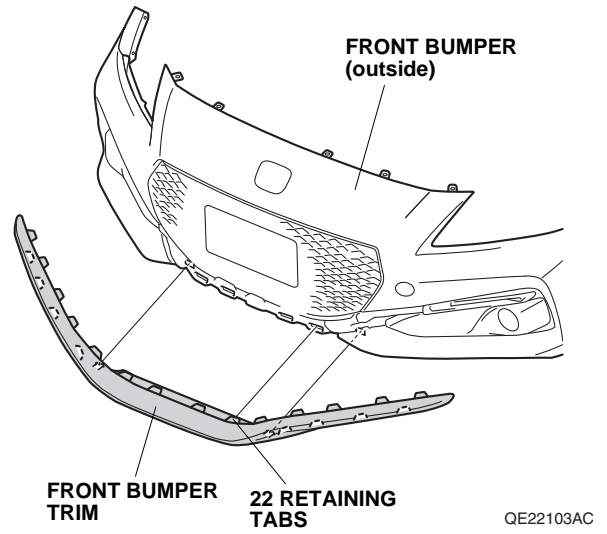

9. Secure the front bumper trim to the front bumper with the two self-tapping screws removed in step 5.

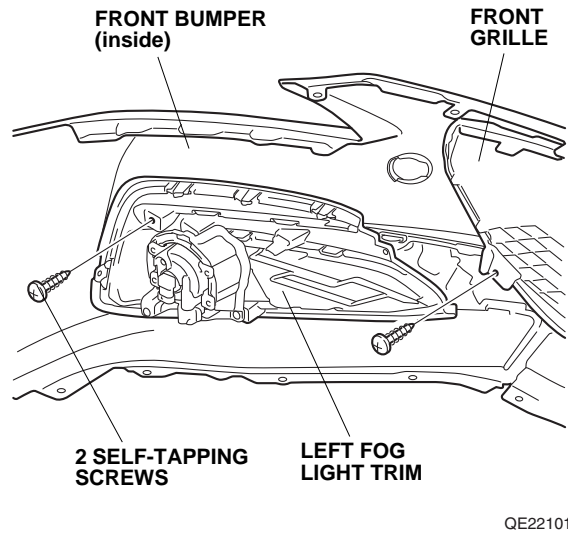

10. Repeat the same procedure on the right side.

11. With the help of an assistant, install the front bumper.
12. Check that all wire harnesses are routed properly and all connectors are plugged in.
13. Install all removed parts.
14. Connect the negative cable to the battery.
15. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
16. Set the clock on vehicle without navigation.
17. If the IMA battery charge level indicator is at zero, start the engine, and hold it between 3,500 and 4,000 rpm (without load) in Park or Neutral until the IMA battery charge level indicator is at least half charged.