



INSTALLATION INSTRUCTIONS


Accessory
REAR BUMPER APPLIQUE
P/N 08P48-SZT-100A

Application
2016 CR-Z


Publications No.
VERSION 1
Issue Date
OCT 2015

PARTS LIST


Rear Bumper Applique




Applicator



Soft sleeve

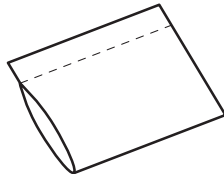

Alcohol wipe

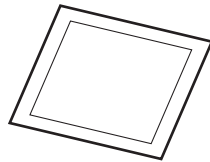


TOOLS AND SUPPLIES REQUIRED

Shop towel

Spray bottle

3M Protective tape application solution

Illustration of the Rear Bumper Applique on the Vehicle

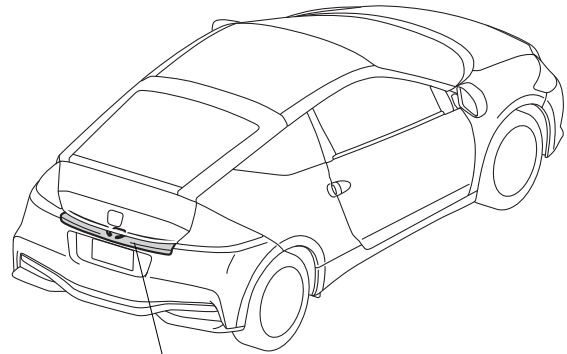

REAR BUMPER APPLIQUE

QE33004AA

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Do not damage the vehicle body paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.
- Wash your hands thoroughly with soap and water before handling the rear bumper applique.

Installing the Rear Bumper Applique


1. Open the hatch. Using the alcohol wipe, thoroughly clean the area where the rear bumper applique will attach.

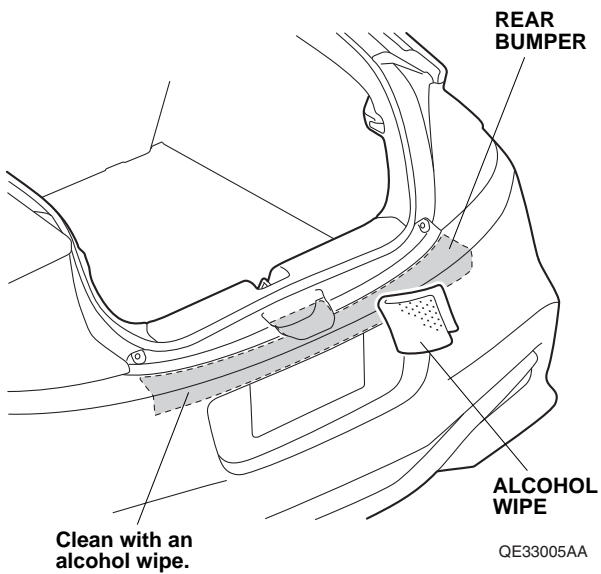


2. Using a spray bottle with 3M protective tape application solution, spray the area where the rear bumper applique will attach.

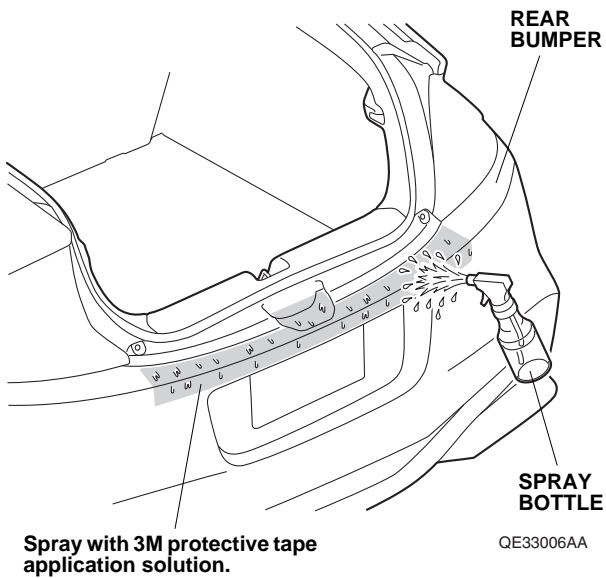


3. Remove the adhesive backing (the side marked 3M) from the rear bumper applique.

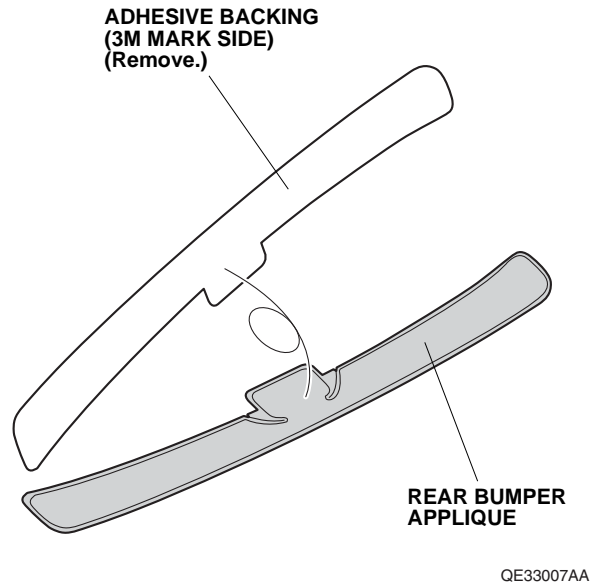


4. Using a spray bottle with 3M protective tape application solution, spray the rear bumper applique as shown.

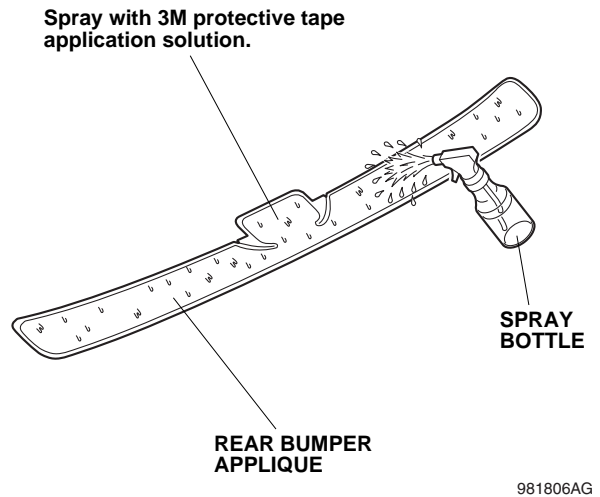

- Align the end of the rear bumper applique with the character line, and attach it to the rear bumper.

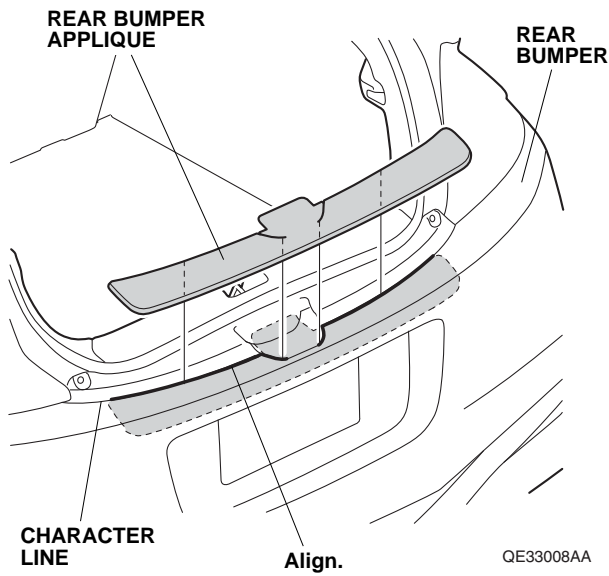


- Insert the applicator into the soft sleeve.

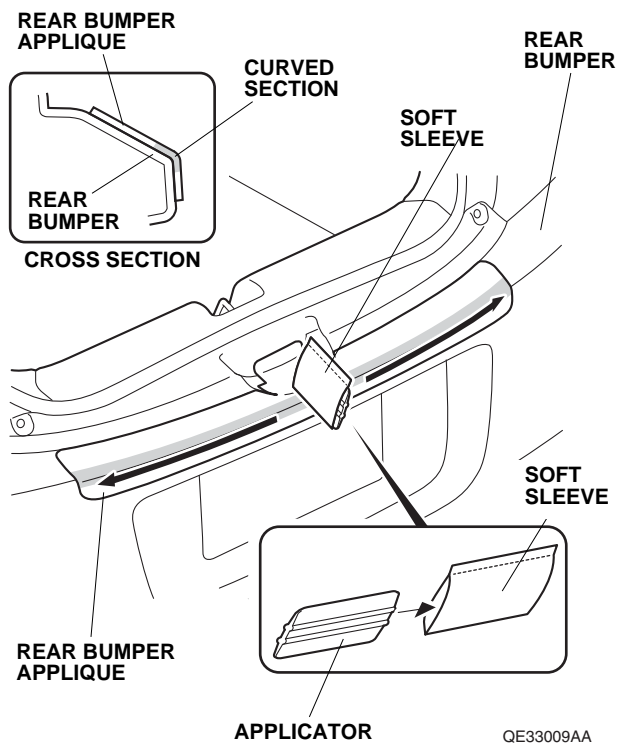


- Starting from the center and working outward, use the applicator and soft sleeve to smooth out the curve end section of the rear bumper applique against the rear bumper.
NOTE: Move the applicator in one direction only. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly and keep pressure against the rear bumper applique.

- Repeat step 7 for the upper middle section and the upper side section of the rear bumper applique.

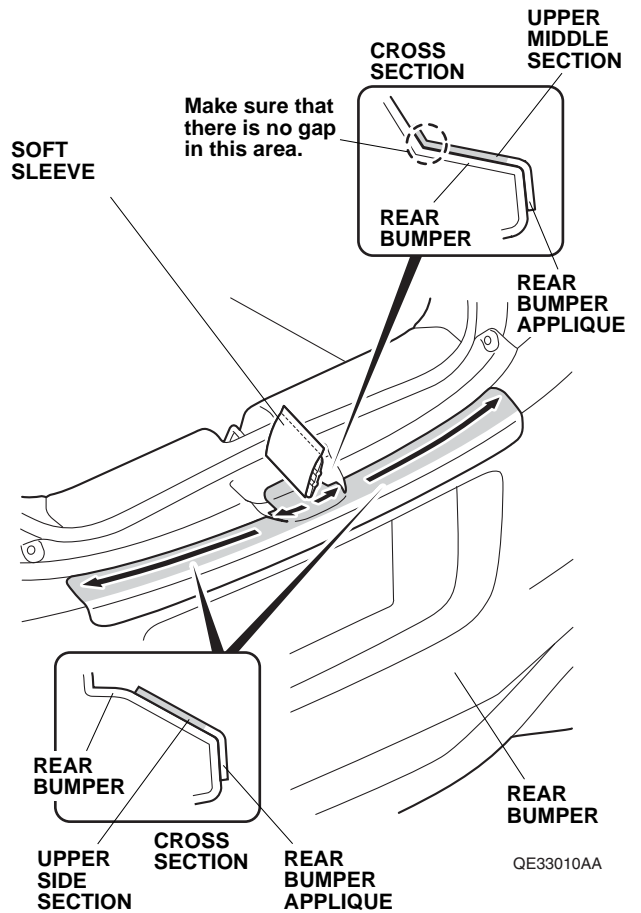


9. Slowly remove the protective film from the rear bumper applique.

NOTE: Do not pull up on the protective film.

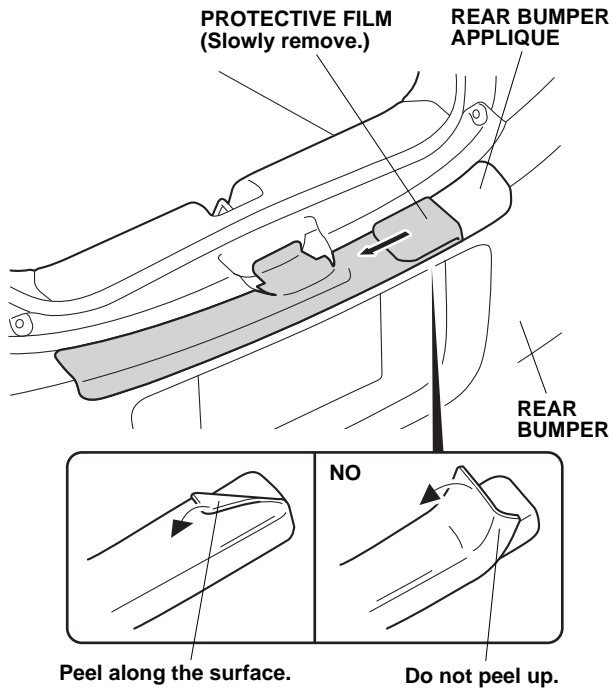

QE33011AA


10. Repeat step 7 for the lower section of the rear bumper applique.

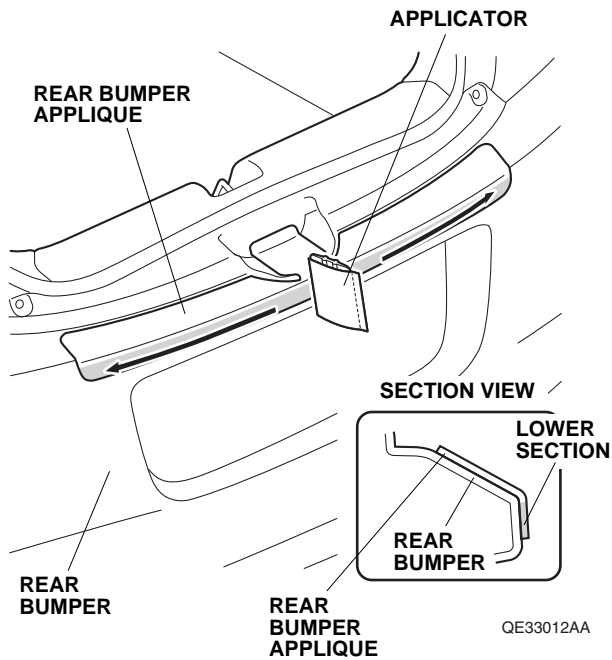

QE33012AA

11. Using a shop towel, wipe the excess 3M protective tape application solution from the rear bumper applique.

NOTE: Allow the rear bumper applique to dry thoroughly.

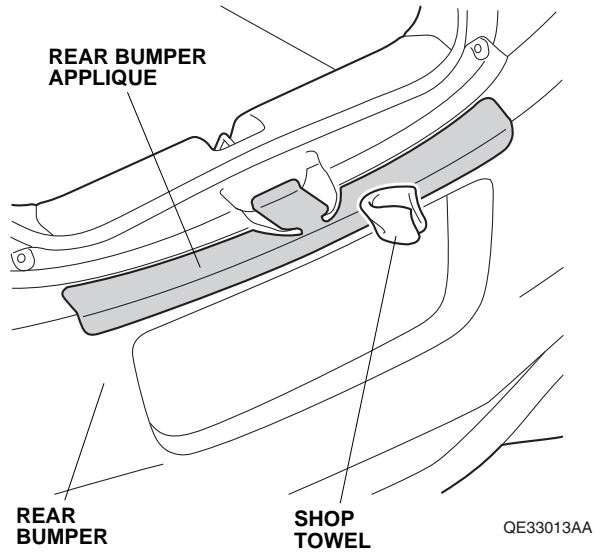

QE33013AA