



INSTALLATION INSTRUCTIONS

Accessory
REAR BUMPER TRIM
P/N 08F03-SZT-100B

Application
2016 CR-Z

Publications No.
VERSION 1
Issue Date
OCT 2015

PARTS LIST

Rear bumper trim



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Stubby Phillips screwdriver

5 mm Hex wrench

Masking tape


Blanket

10 mm Open end wrench

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search" Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)

Illustration of the Rear Bumper Trim on the Vehicle

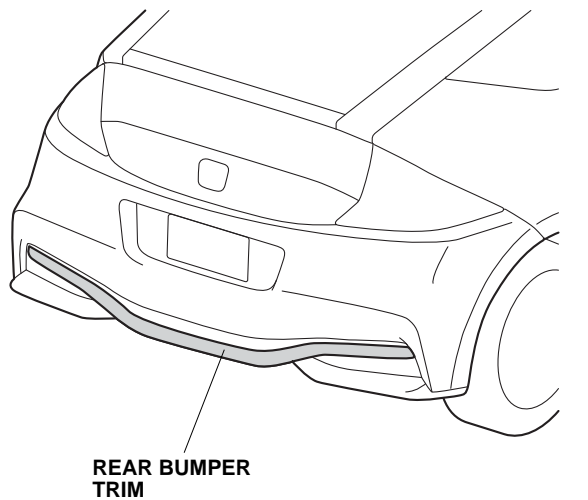


QE32305AA

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: Do not damage the vehicle body paint finish.

1. Disconnect the negative cable from the battery.
2. Apply masking tape to the rear bumper, taillights, and rear fenders as shown.

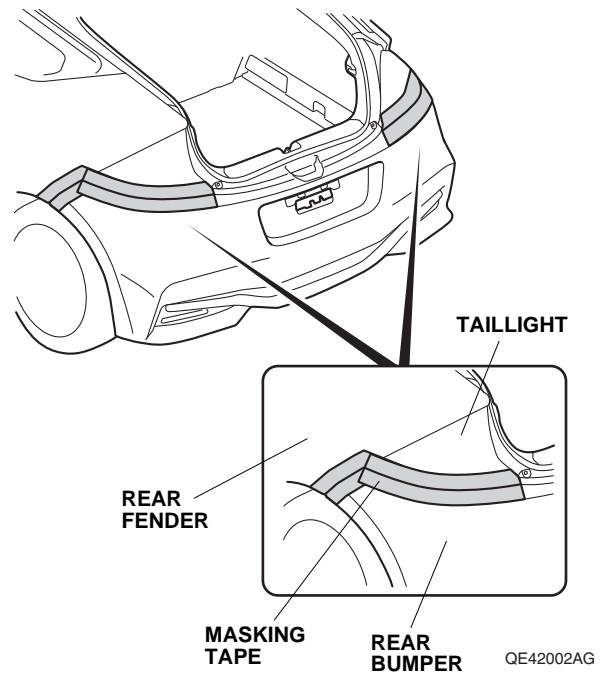


3. Remove the rear bumper.
 - Remove the six self-tapping screws, two hex bolts, and seven clips.

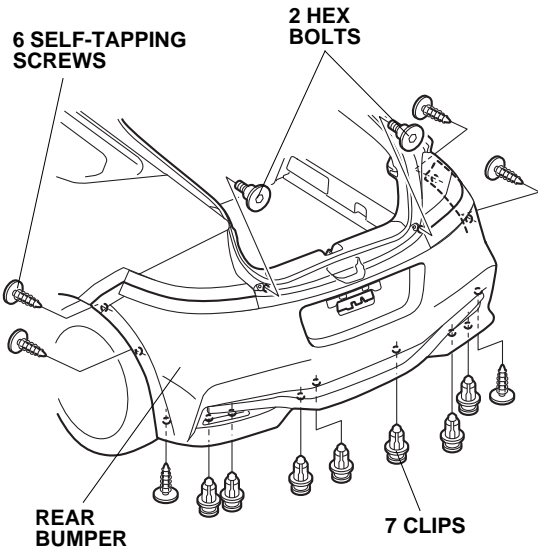


QE42003AG

- With the help of an assistant, release the six retaining tabs on each side.

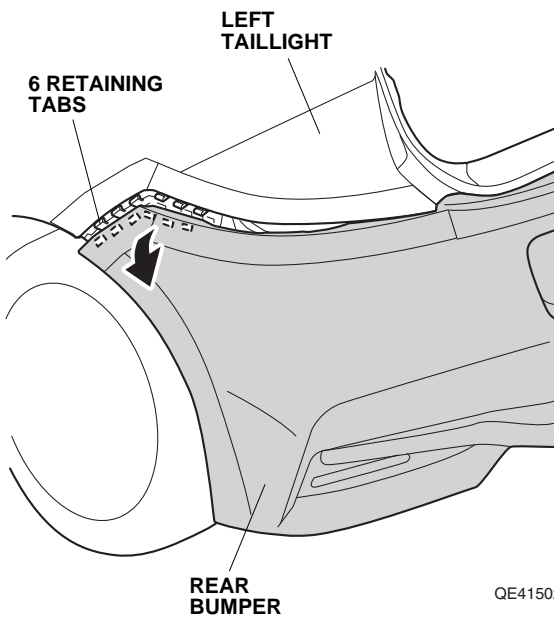



QE41502BG

- With the help of an assistant, release the two retaining tabs on each side.

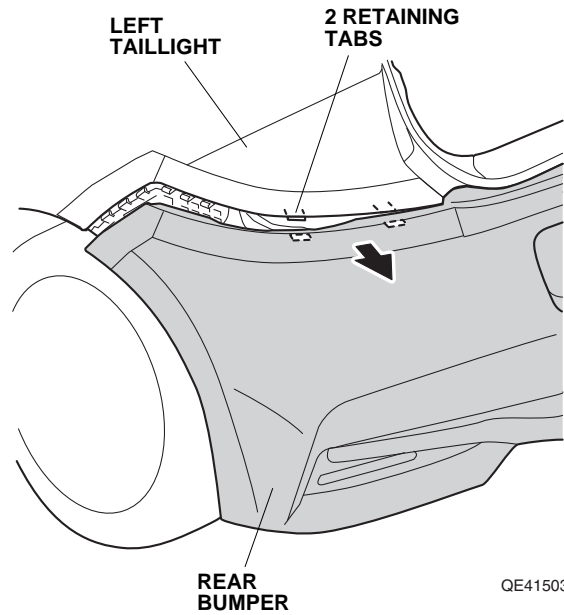


QE41503BG

- With the help of an assistant, remove the rear bumper, unplug the vehicle connector and release the vehicle connector from the holder.
- Place the rear bumper on a blanket.

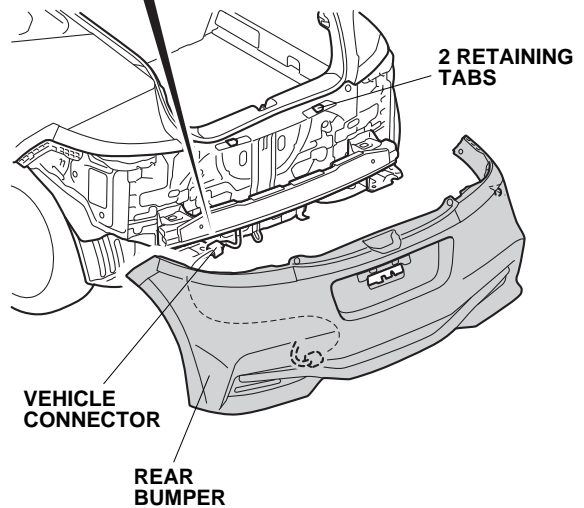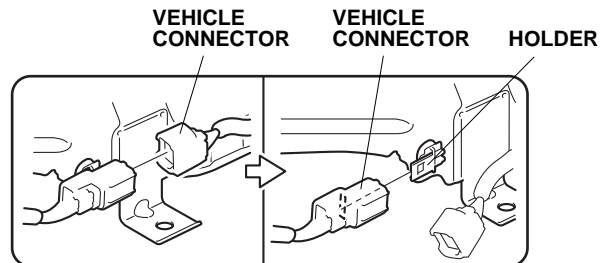


QE32306BA


- Remove the two self-tapping screws.

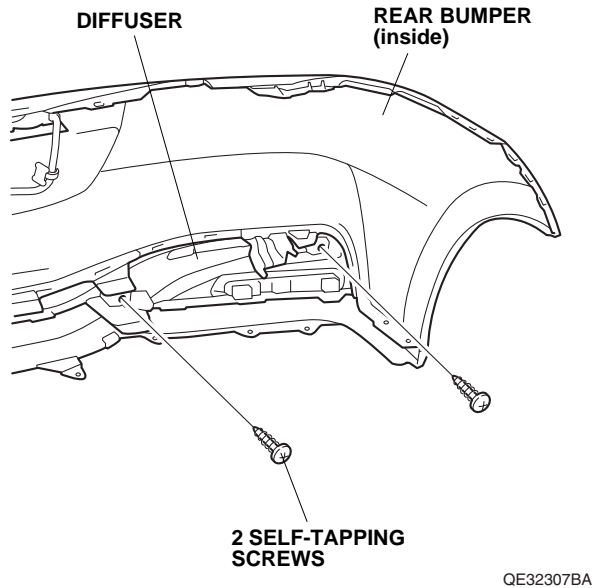


- Repeat same procedure on the right side.
- Remove the diffuser molding.

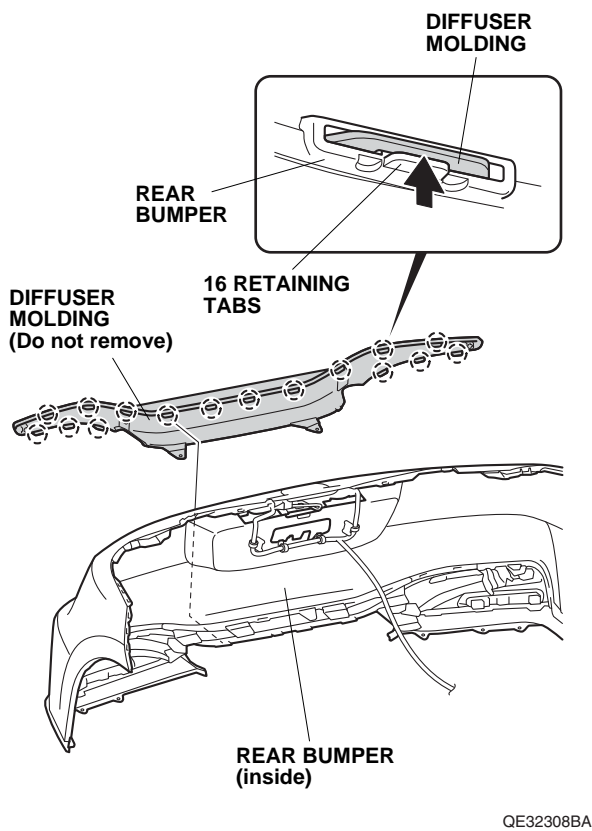

- Install the rear bumper trim on the rear bumper with 16 retaining tabs.

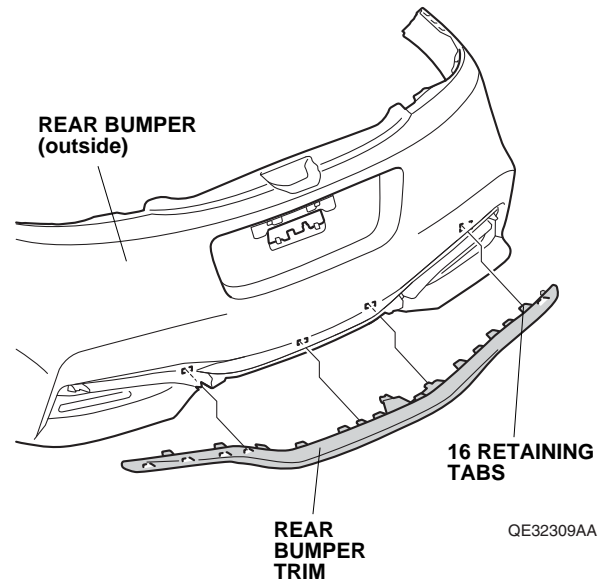

- Secure the rear bumper trim on the rear bumper with the two self-tapping screws removed in step 4.

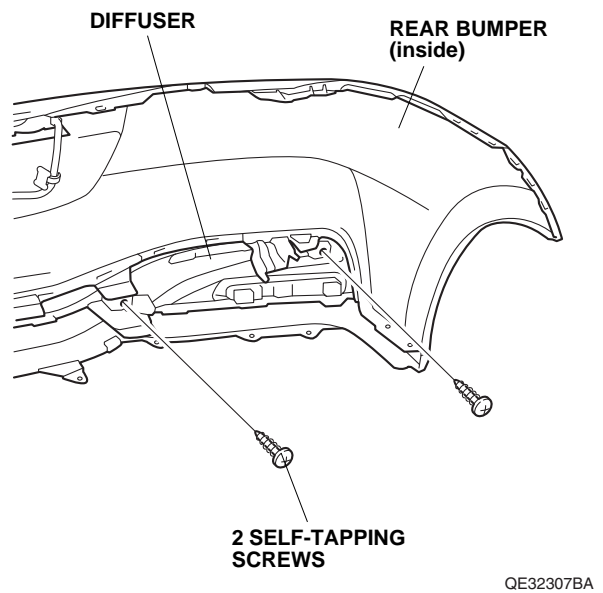

- Repeat the same procedure on the right side.

10. With the help of an assistant, install the rear bumper.
11. Check that all wire harnesses are routed properly and all connectors are plugged in.
12. Install all removed parts.
13. Connect the negative cable to the battery.
14. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
15. Set the clock on vehicles without navigation.
16. If the IMA battery charge level indicator is at zero, start the engine, and hold it between 3,500 and 4,000 rpm (without load) in Park or Neutral until the IMA battery charge level indicator is at least half charged.