



INSTALLATION INSTRUCTIONS


Accessory
**ILLUMINATED DOOR
SILL TRIM**
P/N 08E12-T5A-100

Application
2016 FIT


Publications No.
VERSION 1
Issue Date
MAR 2015

PARTS LIST

Left front illuminated door sill trim

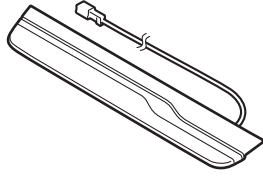


Right front illuminated door sill trim

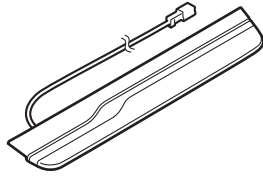


Left rear door sill trim




Right rear door sill trim




Door sill trim harness

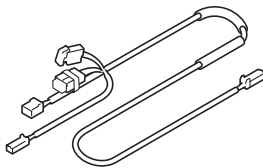


Fuse label

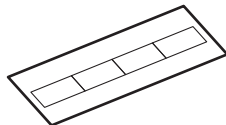


18 Wire ties

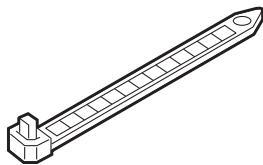

Urethane tape




Protective tape




2 Protective clips



2 Alcohol swabs

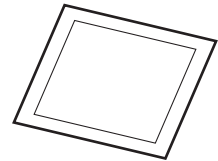


Wire tie with clip

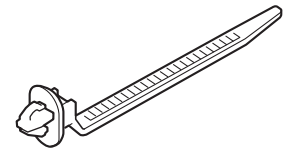

Clip



Aluminum tape

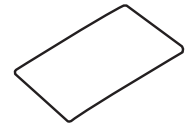


TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
Ruler
Masking tape
Tape
Felt-tip pen
Scissors
Utility knife
File
Needle nose pliers
Diagonal cutters
Isopropyl alcohol
Shop towel

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)


Illustration of the Illuminated Door Sill Trim in the Vehicle

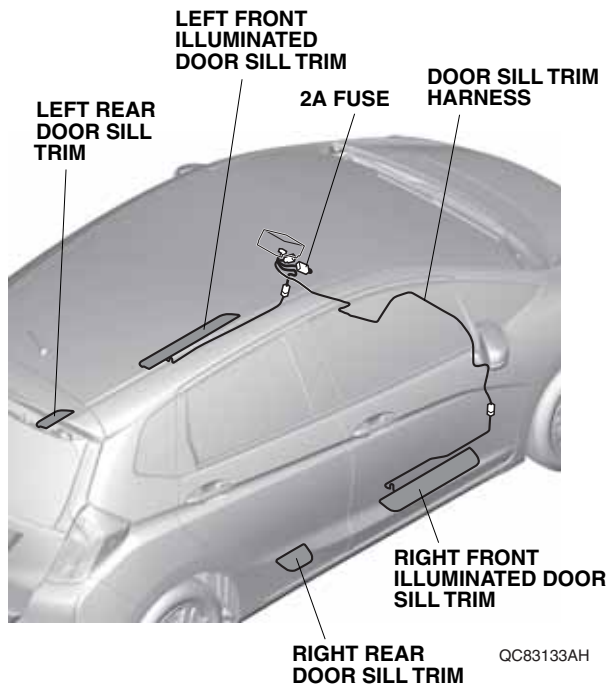

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.
2. Remove the passenger's under cover.

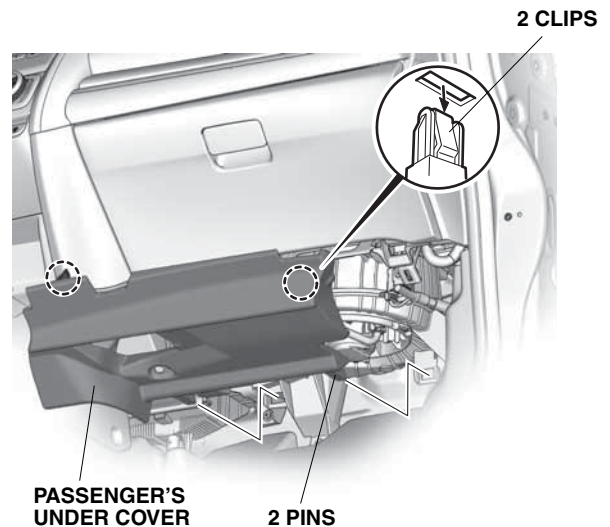


QC90301AJ


- Open the glove box, push inward on the stops, and remove the glove box.

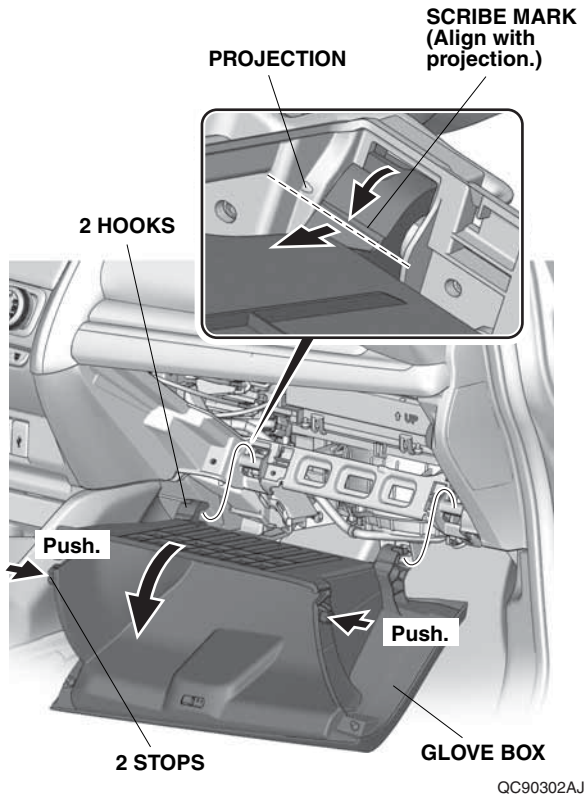


- Pull back the door opening seal, and remove the passenger's front door sill trim.

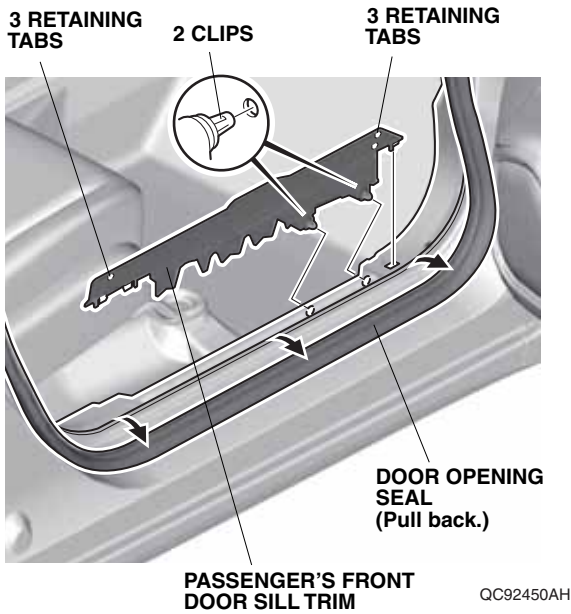


- Pull back the door opening seal, and remove the passenger's kick panel.

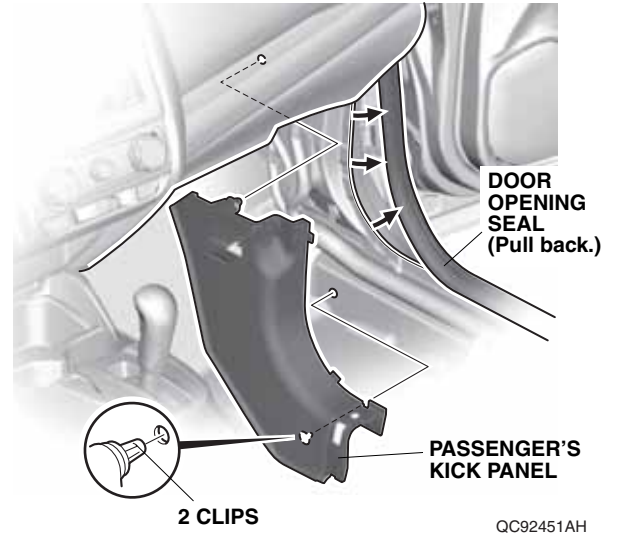


- Pull back the door opening seal, and remove the driver's front door sill trim.

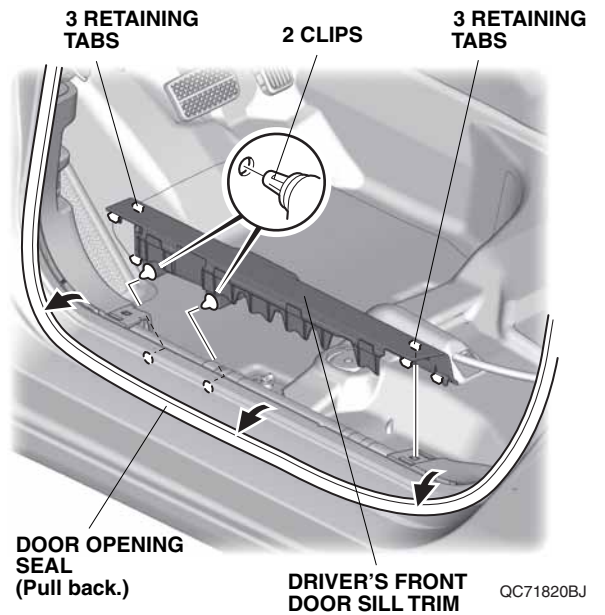


- Pull back the door opening seal, and remove the driver's kick panel.

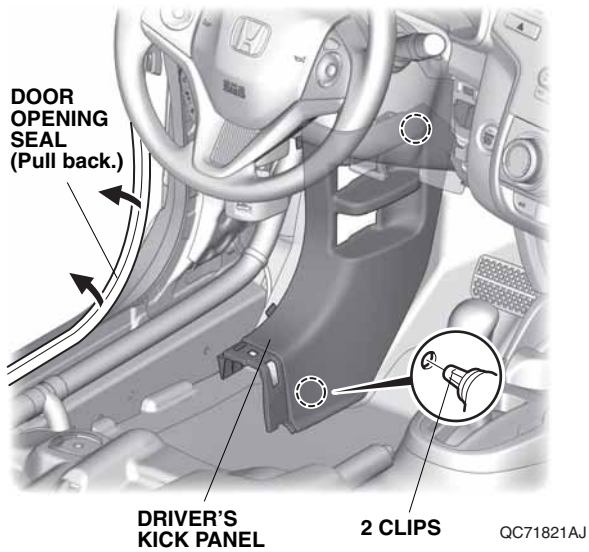


- Apply tape to the areas shown.

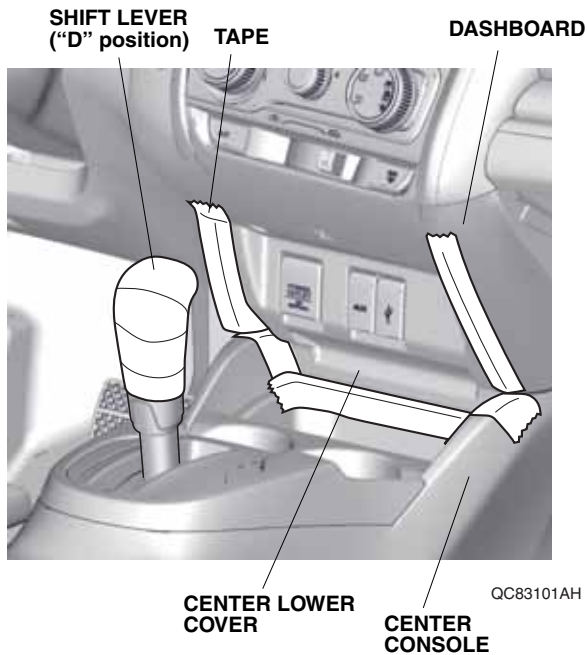

- Remove the center lower cover, and unplug the vehicle connectors.

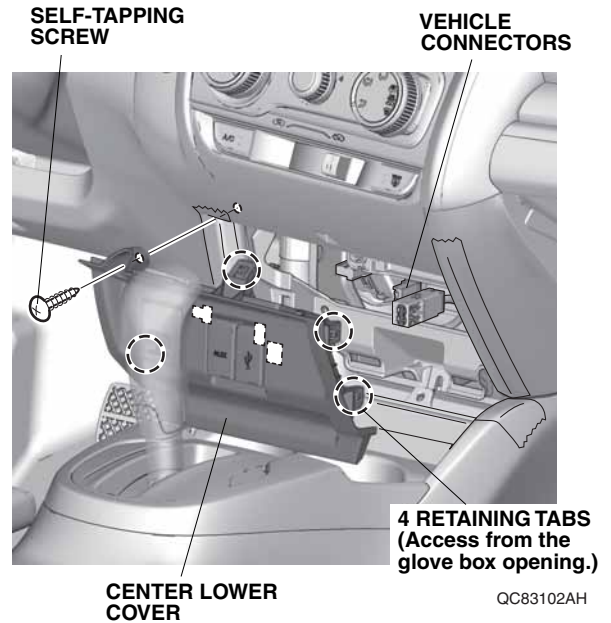


- Using isopropyl alcohol on a shop towel, thoroughly clean the area where the fuse label will attach.

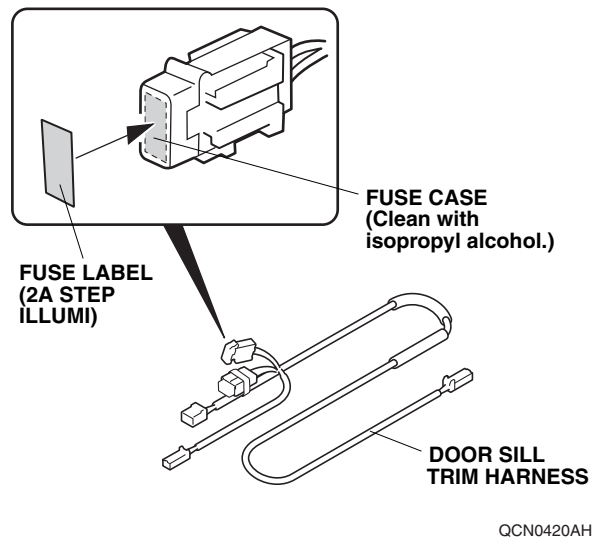

- Attach the fuse label to the door sill trim harness fuse case.

Without Other Accessory Harness 8-pin Connector


12. Plug the door sill trim harness 8-pin connector into the fuse box. Go to step 15.

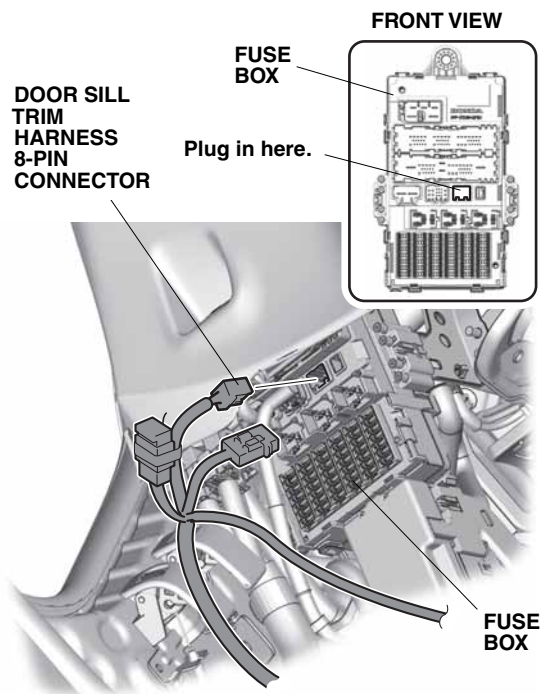

QC83103AH


With Other Accessory Harness 8-pin Connector

13. If other accessory harness 8-pin connector is plugged into the fuse box, unplug it from the fuse box. Remove and discard the dummy connector from the door sill trim harness 8-pin connector, and plug other accessory harness 8-pin connector into the door sill trim harness 8-pin connector.

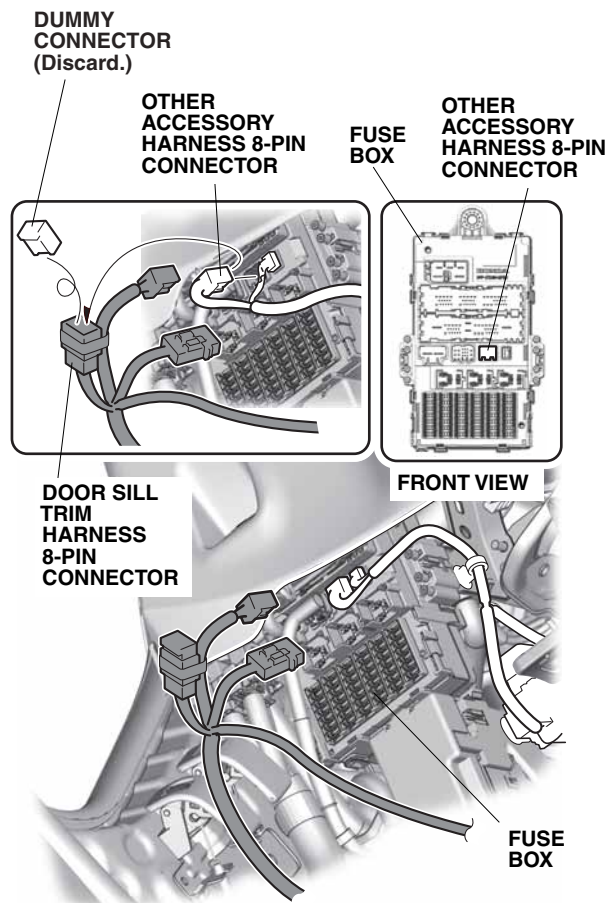


QC83104AH

14. Plug the door sill trim harness 8-pin connector into the fuse box.

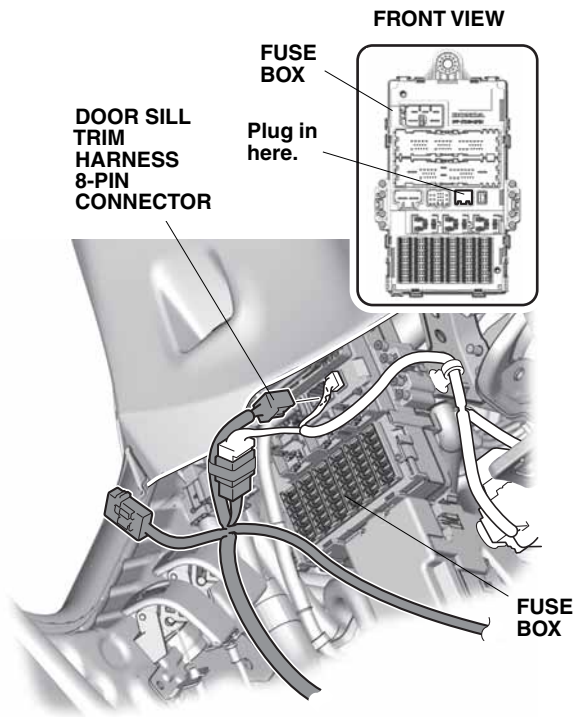


QC83105AH

15. Attach the door sill trim harness fuse case to the vehicle connector.

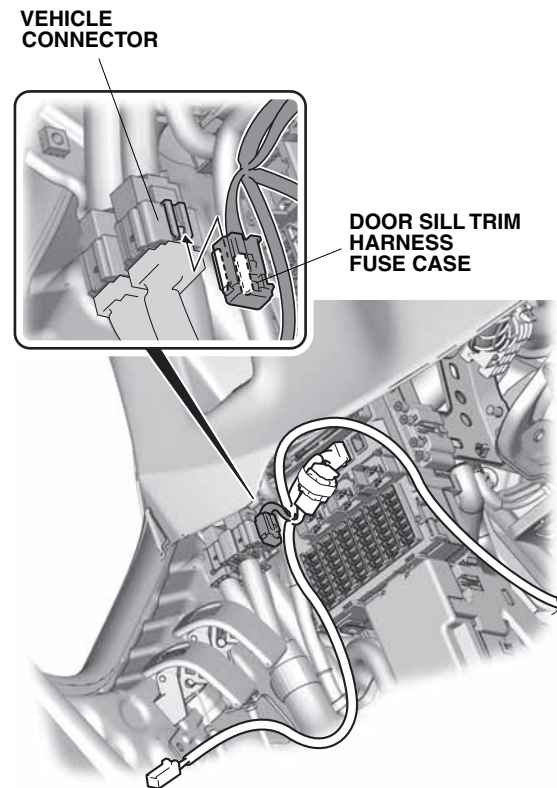


QC83106AH

16. Secure the door sill trim harness to the vehicle harness with two wire ties.

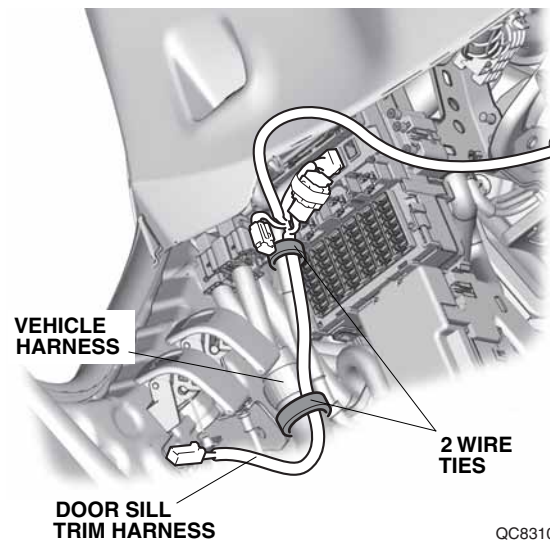


QC83106BH


17. Route the door sill trim harness as shown. Secure the door sill trim harness to the vehicle harness with two wire ties. If other accessory harness is already secured to the vehicle harness, secure the door sill trim harness to other accessory harness with two wire ties.

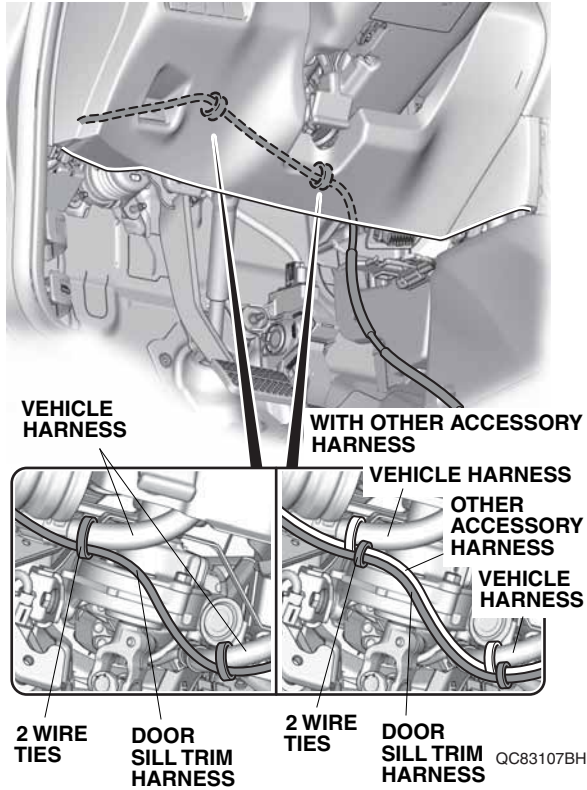


18. Route the door sill trim harness as shown. Secure the door sill trim harness to the vehicle frame with one wire tie. If other accessory harness is already secured to the vehicle frame, secure the door sill trim harness to other accessory harness with one wire tie.

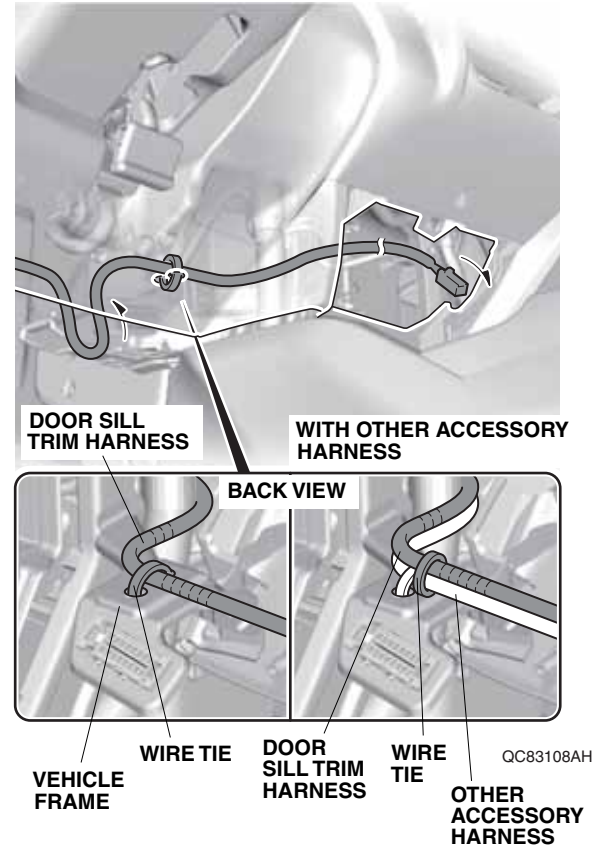


19. Secure the door sill trim harness to the vehicle harness with one wire tie.

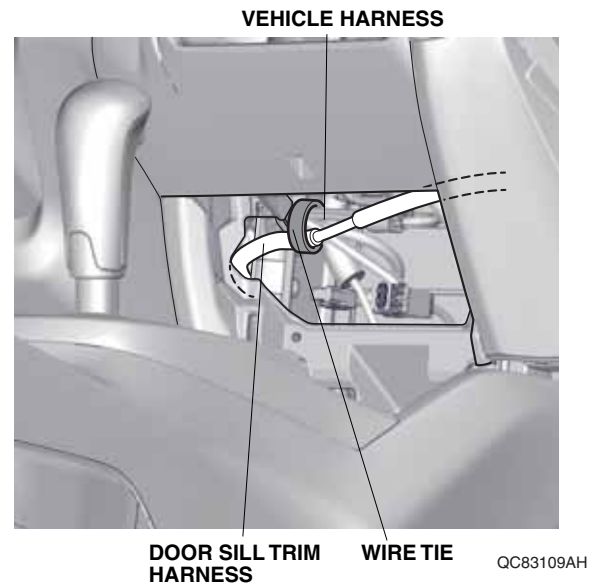


20. Route the door sill trim harness as shown. Align the green tape on the door sill trim harness with the vehicle wire tie, and secure the door sill trim harness to the vehicle harness with one wire tie.

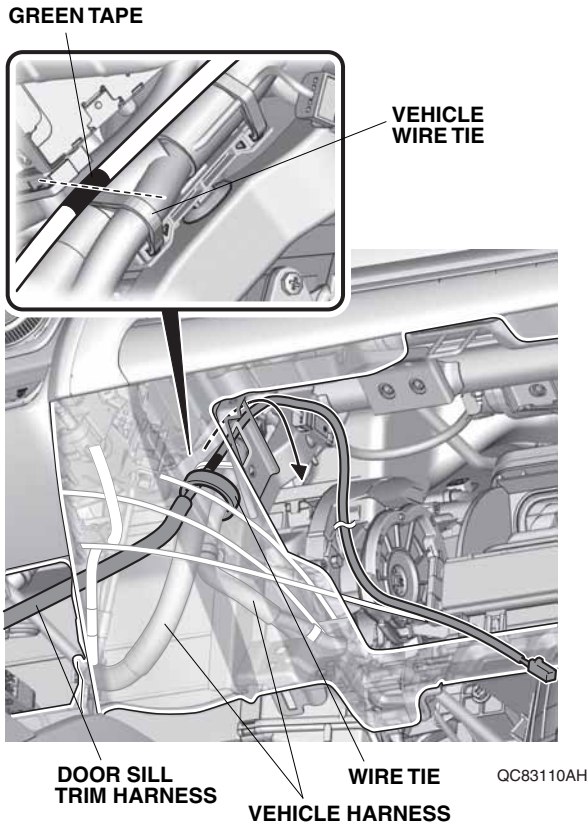


21. Route the door sill trim harness as shown. Then secure it to the steering hanger beam with three wire ties.

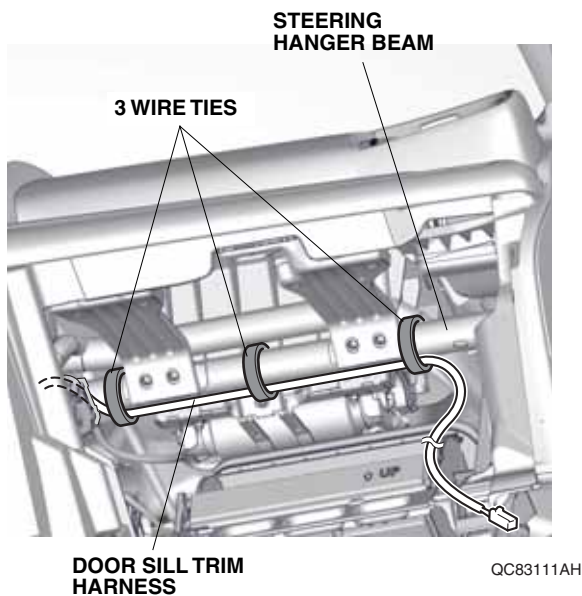


22. Route the door sill trim harness as shown. Then secure it to the vehicle harness with two wire ties.

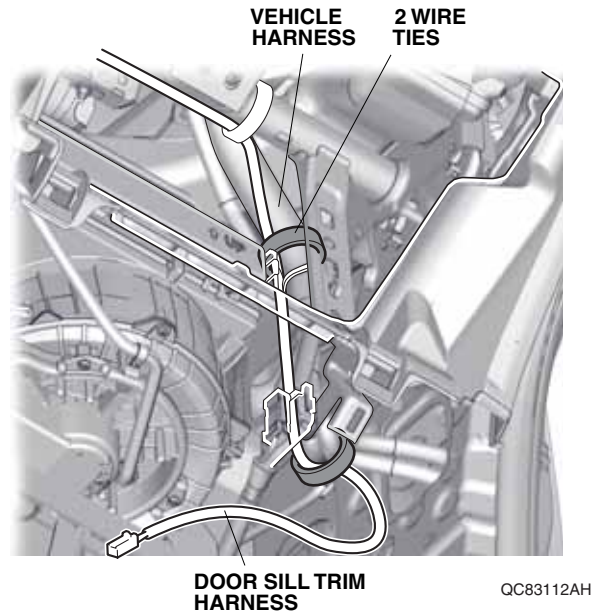


23. Using scissors, cut the protective tape at the measurements shown.

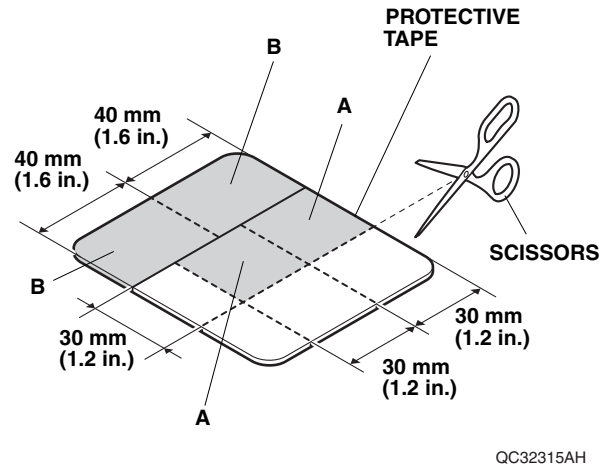


24. Attach masking tape to the vehicle panel at the measurement shown.

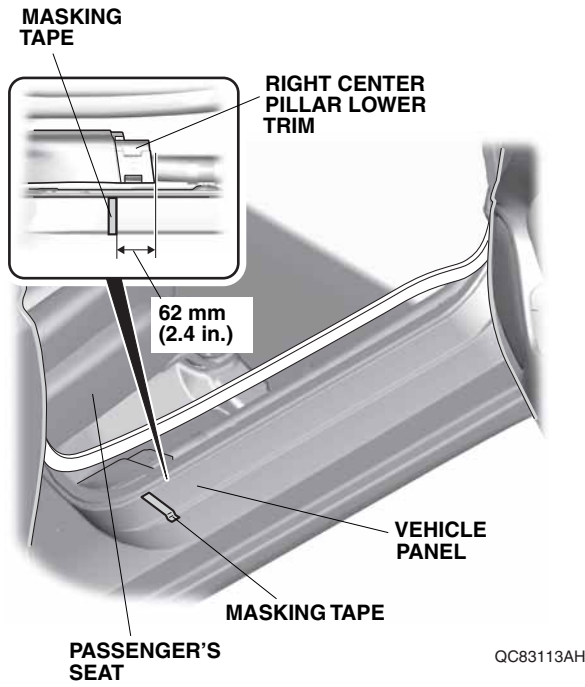


25. Align the edge of the right front illuminated door sill trim with the edge of the masking tape.

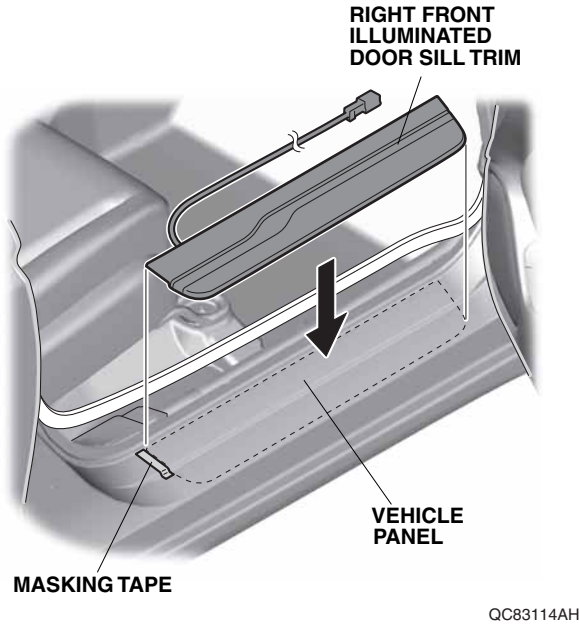


26. Using a felt-tip pen, mark the door opening seal and vehicle panel as shown.

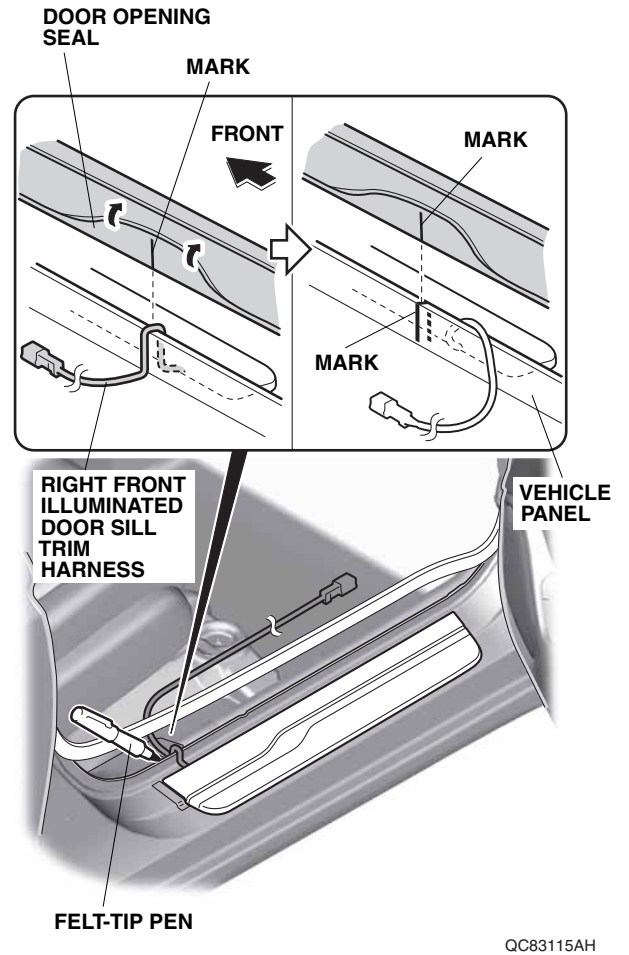


27. Remove the right front illuminated door sill trim.

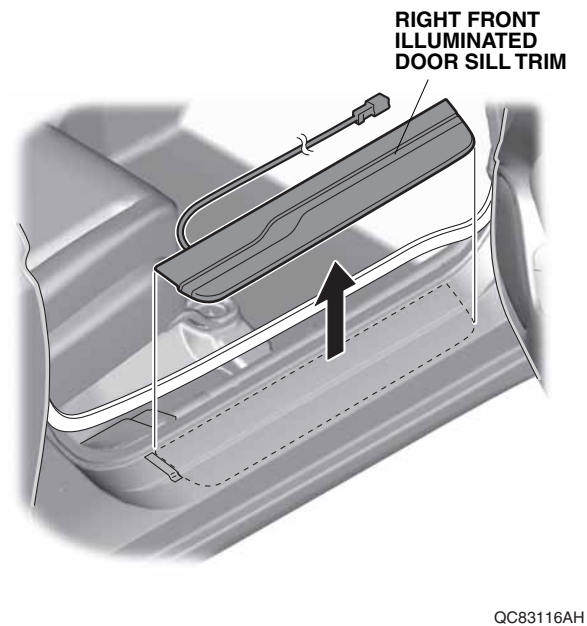


28. Using a utility knife, cut out the door opening seal at the measurements shown.

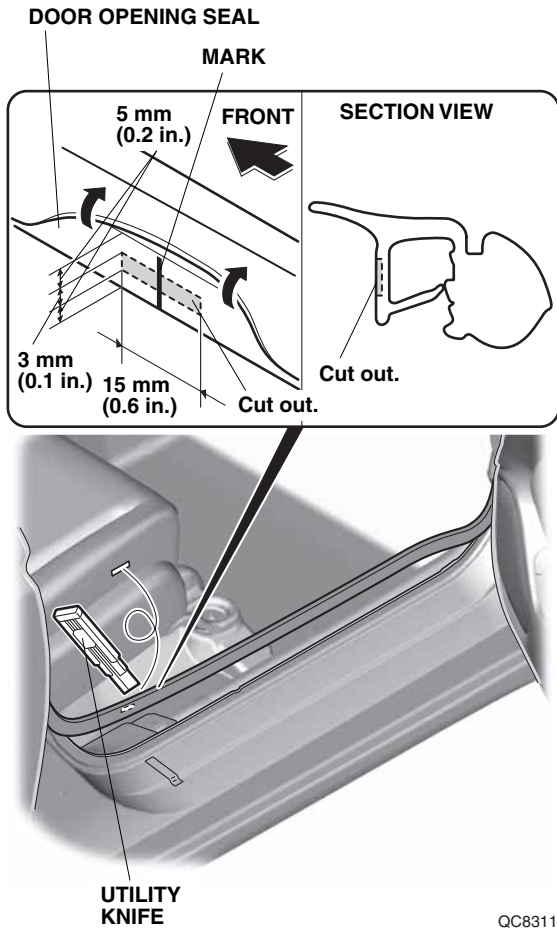

29. Using needle nose pliers, remove three steel wires from the door opening seal.

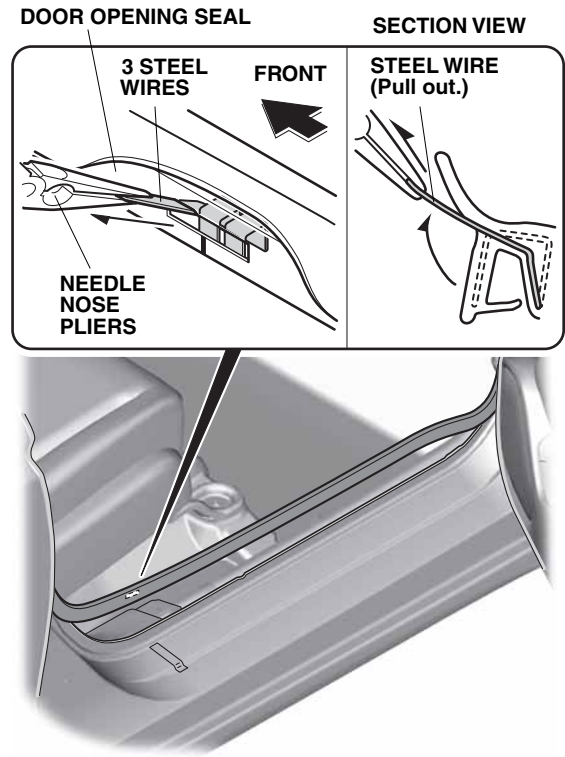


30. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the protective tape will attach. Attach one piece of protective tape A to the vehicle panel.

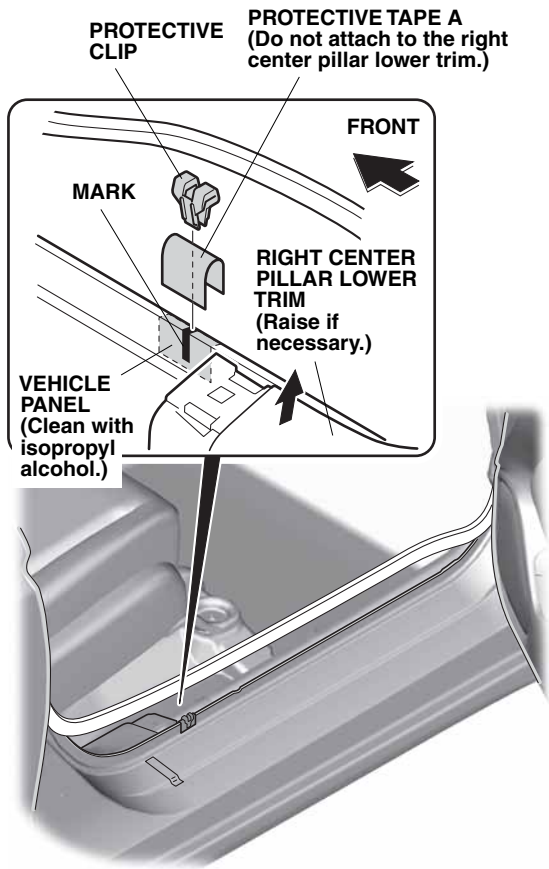

QC83119AH

31. Install the protective clip to the protective tape A.


32. Peel back the ends of four adhesive backings on the right front illuminated door sill trim and attach them to the front of the trim with masking tape.

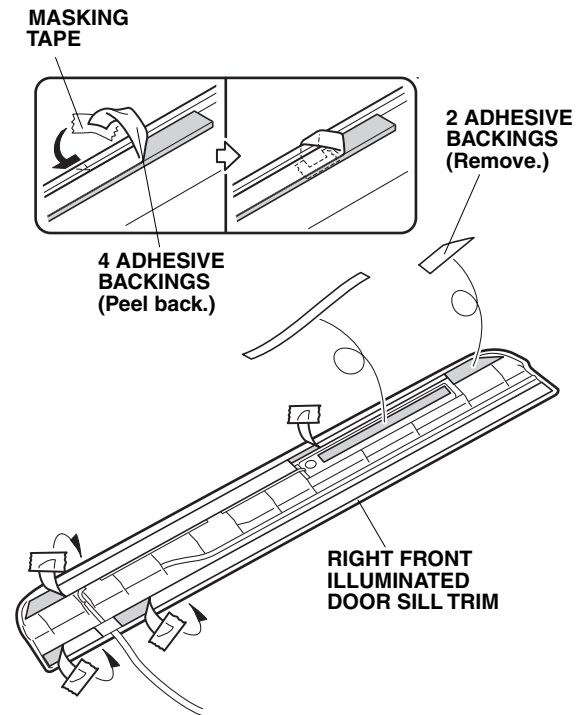

QC92303AH


33. Remove two adhesive backings.

34. Using an alcohol swab, thoroughly clean the area where the right front illuminated door sill trim will attach.

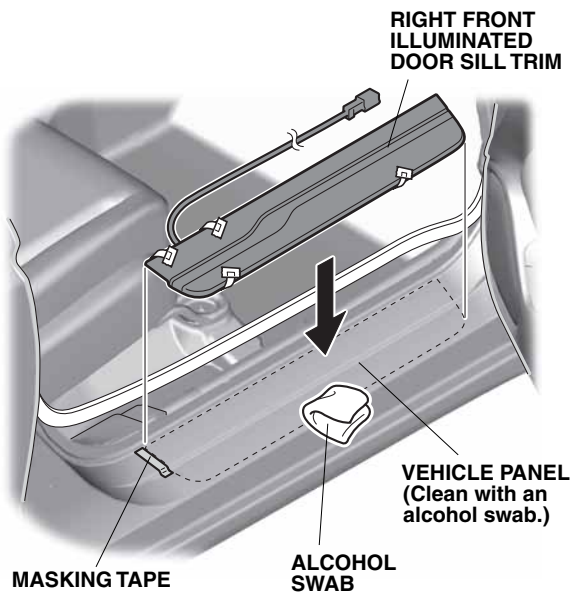

QC83120AH


35. Align the edge of the right front illuminated door sill trim with the edge of the masking tape.
36. Attach the right front illuminated door sill trim to the vehicle panel by removing the four adhesive backings, then press on the trim firmly with your hands.

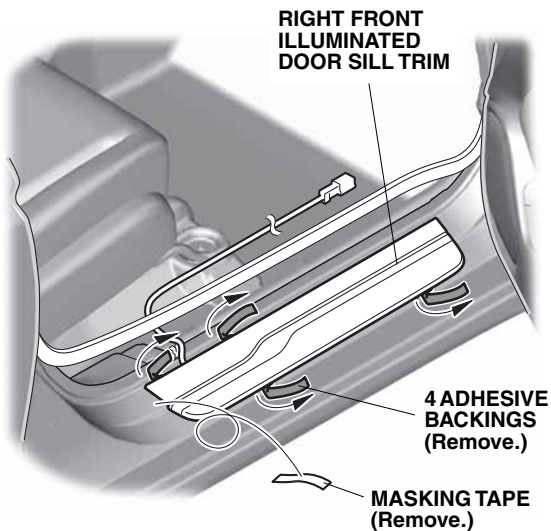

QC83121AH

37. Remove the masking tape.


38. Route the right front illuminated door sill trim harness over the protective clip as shown.

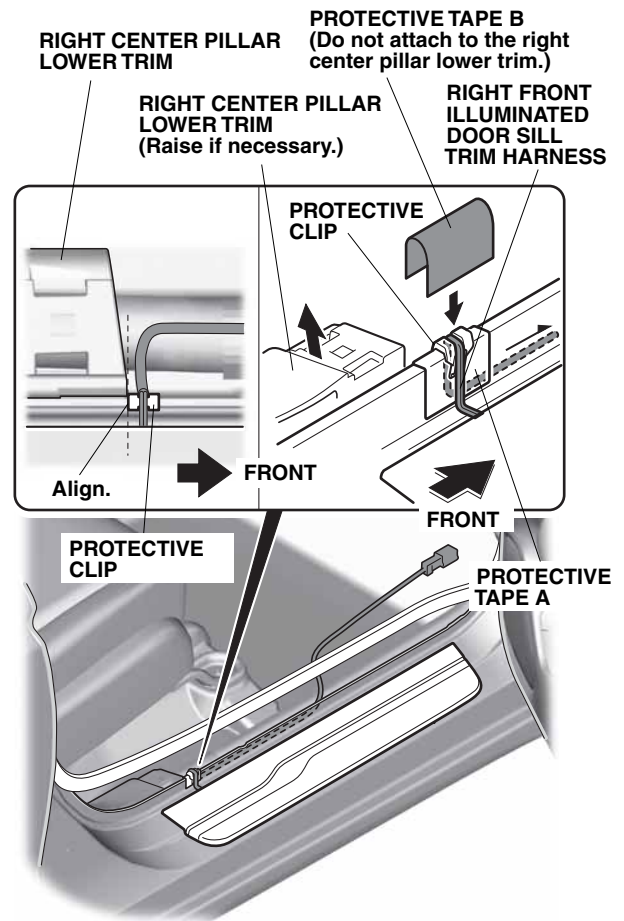

QC83122AH


39. Attach the one piece of protective tape B to the protective clip.
40. Repeat steps 24 through 39 to install the left front illuminated door sill trim on the left side of the vehicle.

- Using scissors, cut one urethane tape in half, and attach one piece of urethane tape around the left front illuminated door sill trim harness 2-pin connector.

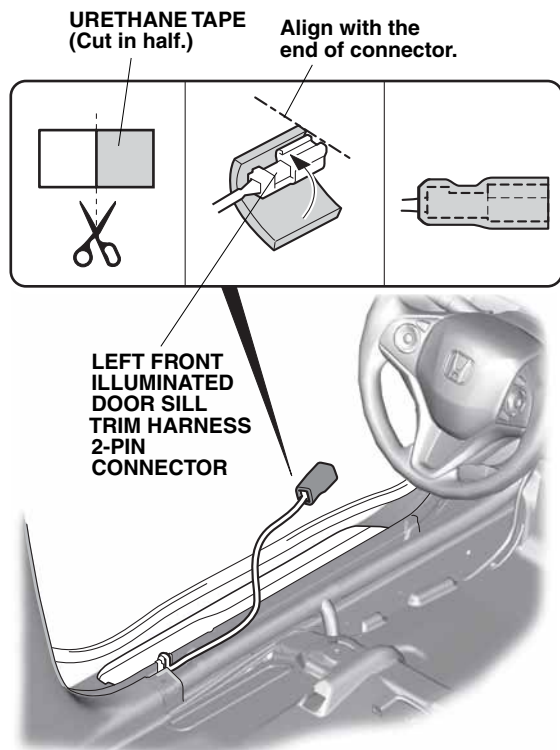


QC83123AH

- Plug the door sill trim harness 2-pin connector into the left front illuminated door sill trim harness 2-pin connector.

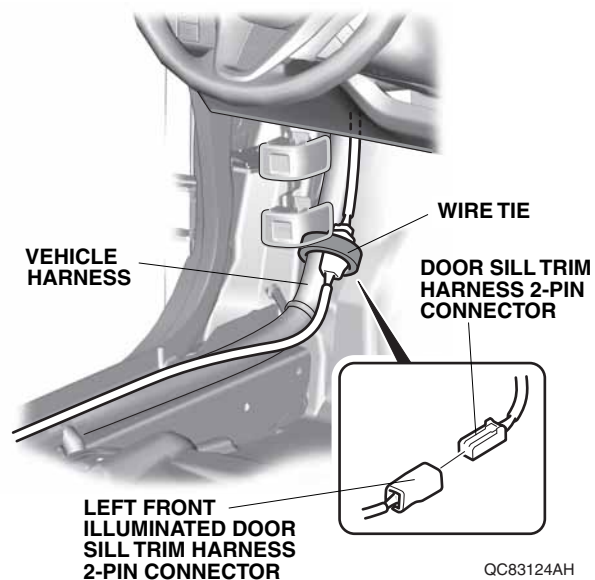


QC83124AH

- Secure the 2-pin connectors to the vehicle harness with one wire tie.
- Secure the left front illuminated door sill trim harness to the vehicle harness with three wire ties.

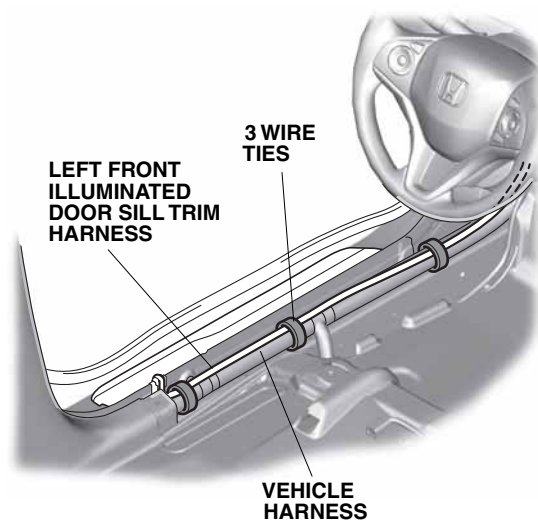

QC83126AH


45. Plug the door sill trim harness 2-pin connector into the right front illuminated door sill trim harness 2-pin connector.

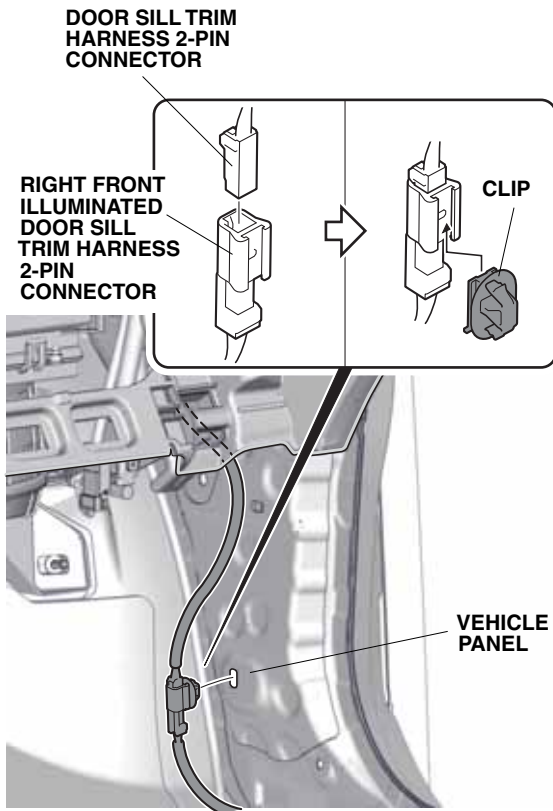

QC83128AH


46. Attach the clip to the right front illuminated door sill trim harness 2-pin connector, and secure the 2-pin connectors to the vehicle panel.

47. Secure the door sill trim harness to the vehicle panel with one wire tie with clip.

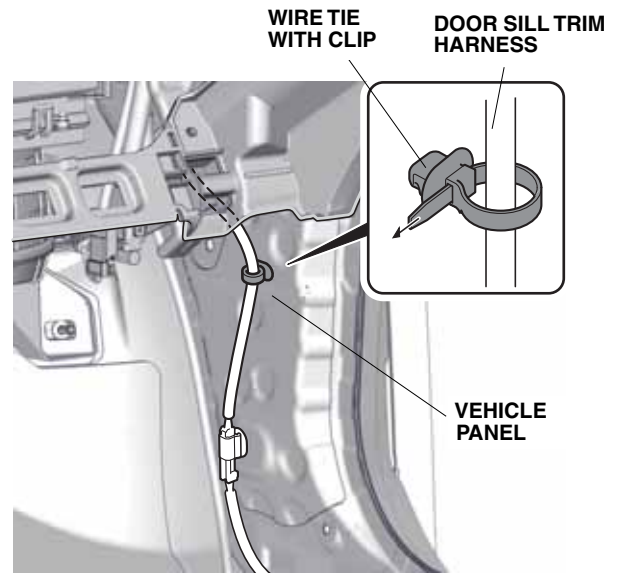

QC83129AH


48. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tape will attach.

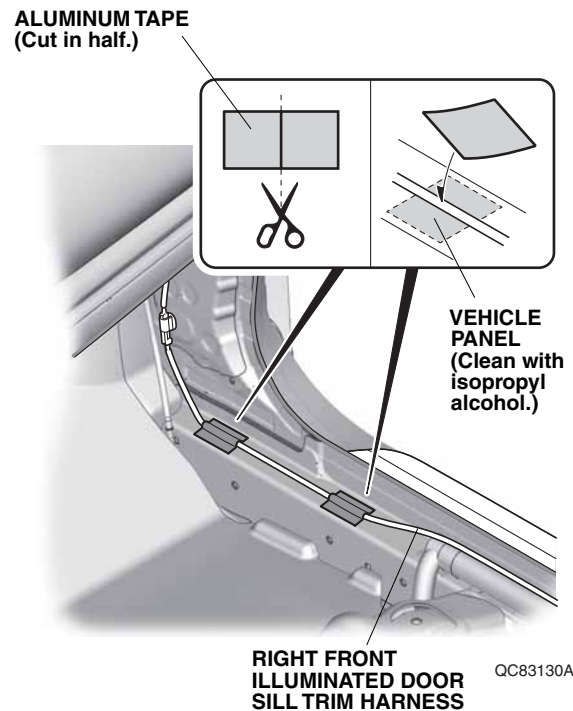


QC83130AH

49. Using scissors, cut one aluminum tape in half. Secure the right front illuminated door sill trim harness to the vehicle panel with aluminum tape.

50. Secure the right front illuminated door sill trim harness to the vehicle harness with two wire ties.

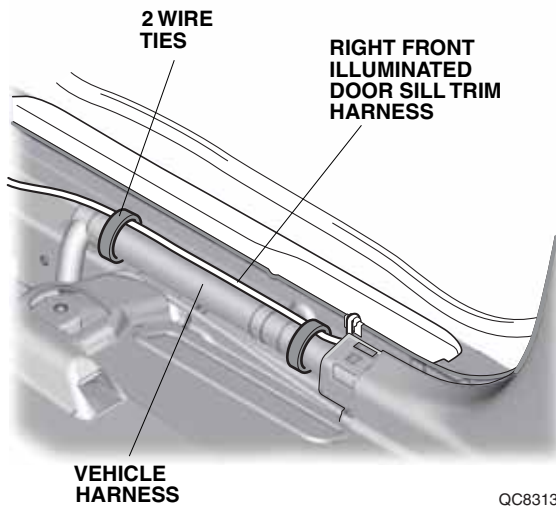


51. Using a utility knife, cut the driver's front door sill trim in the area shown.

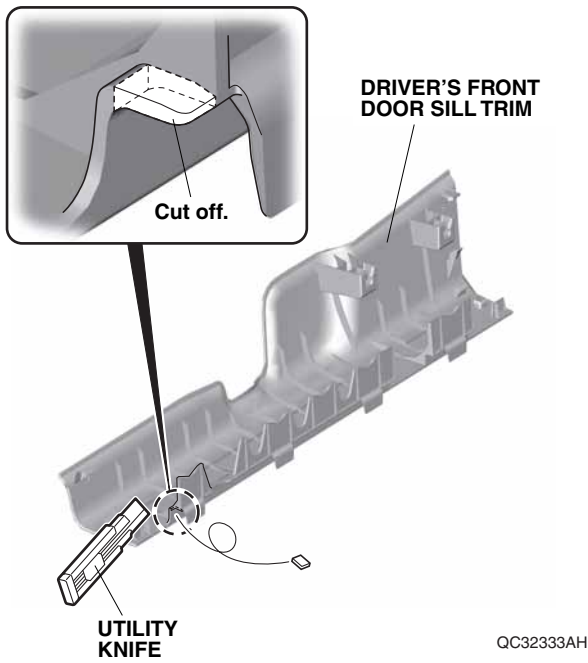


52. Using a file, remove any burrs from the edge.

53. Reinstall the driver's kick panel.

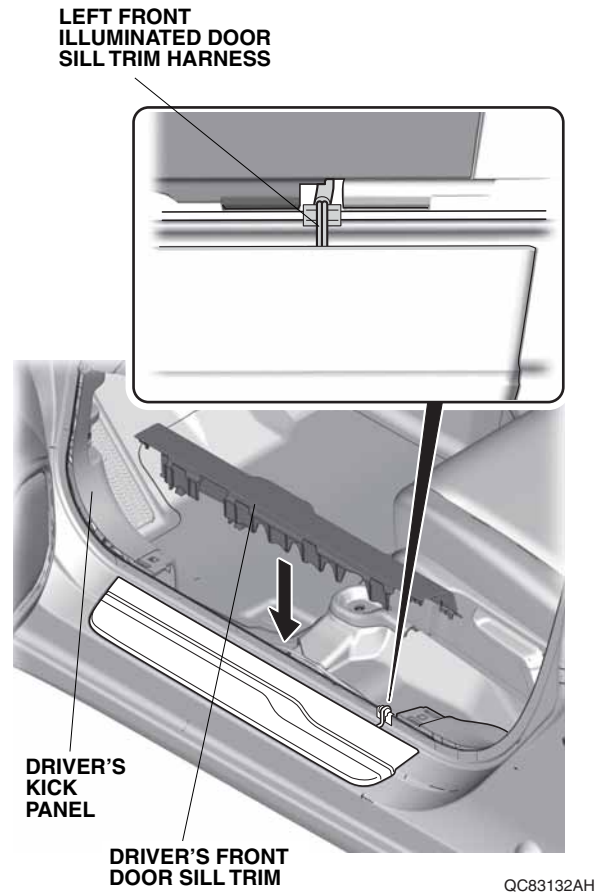


54. Reinstall the driver's front door sill trim.
55. Repeat steps 51 through 54 on the right side of the vehicle.

56. Pull back the door opening seal, and attach masking tape to the vehicle panel as shown.

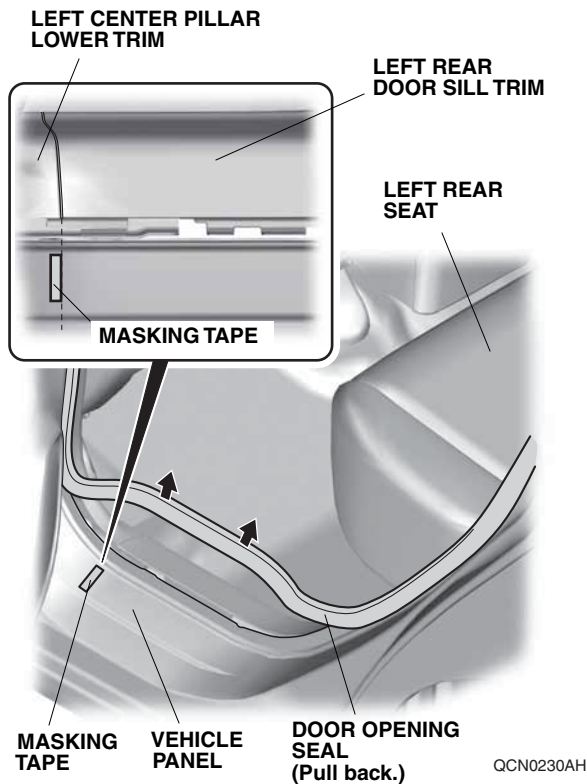


57. Peel back the ends of two adhesive backings on the left rear door sill trim and attach them to the front of the trim with masking tape.

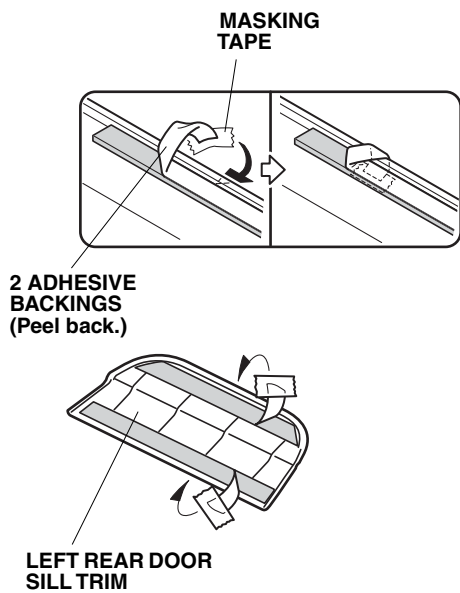


QC32336AH

58. Using an alcohol swab, thoroughly clean the area where the left rear door sill trim will attach.

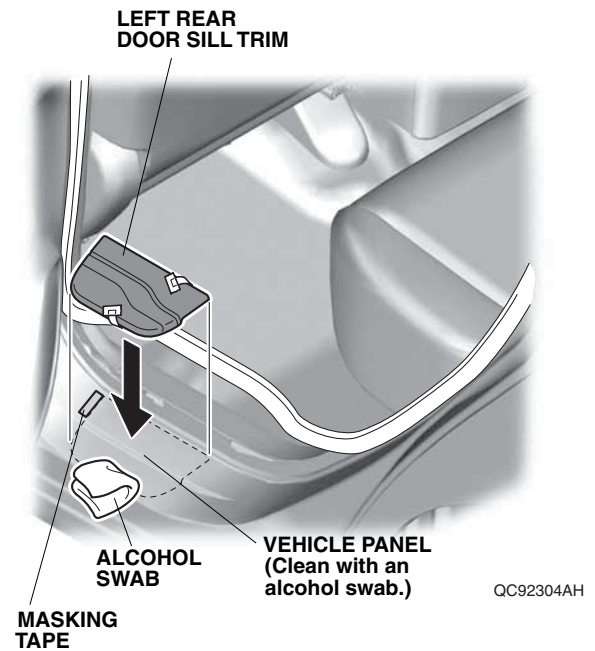

QC92304AH

59. Position the left rear door sill trim at the masking tape.
60. Attach the left rear door sill trim to the vehicle panel by removing the two adhesive backings, then press on the trim firmly with your hands.

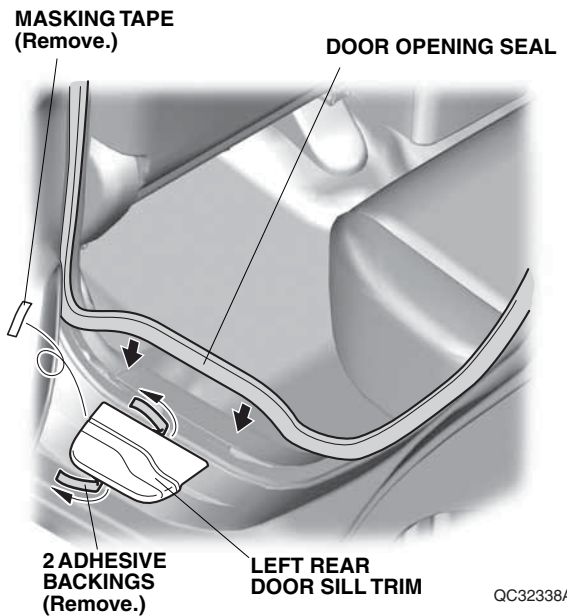

QC32338AH

61. Remove the masking tape.
62. Reinstall the door opening seal.
63. Repeat steps 56 through 62 to install the right rear door sill trim.

64. Check that all wire harnesses are routed properly and all connectors are plugged in.
65. Reinstall all removed parts.
66. Reconnect the negative cable to the battery.
67. Press and hold the radio power button for two seconds to restore the radio and navi (if equipped) system functions.
68. Reset the clock.
69. Make sure the light comes on when you open each front door.
70. Restore the systems back to normal operation as described in the Service Manual if necessary.