



INSTALLATION INSTRUCTIONS

Accessory
CARGO LINERS

Application
2017 CR-V


Publications No.
VERSION 1

Issue Date
DEC 2016


PARTS LIST

Cargo Liners Kit
P/N 08P42-TLA-100
P/N 08P42-TLA-100A

*: The part differs depending on the kits.
Center cargo liner

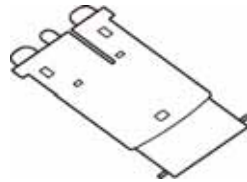


Left cargo liner

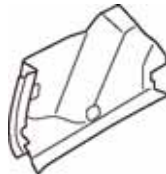

*Right cargo liner
(P/N 08P42-TLA-100)



*Right cargo liner
(P/N 08P42-TLA-100A)

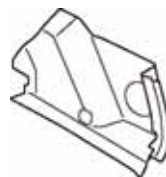

Template A



Template B



Template C



15 *Rivets
(P/N 08P42-TLA-100)



14 *Rivets
(P/N 08P42-TLA-100A)



TOOLS AND SUPPLIES REQUIRED

Flat-tip screwdriver

Utility knife

Drill

3 mm and 6 mm Drill bits

Pushpin

Masking tape


File

Ruler

Tape

Eye protection (face shield, safety goggles, etc.)

Illustration of the Cargo Liners in the Vehicle

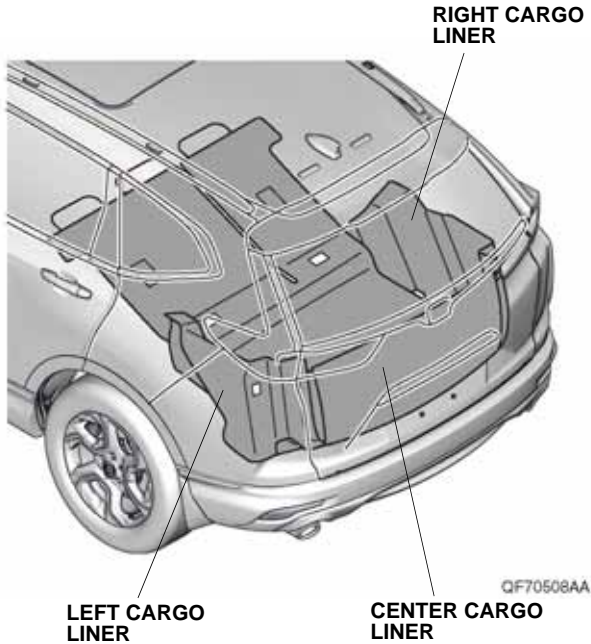

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE: Be careful not to damage the body.

With accessory power socket


If the vehicle is equipped with accessory power socket on the left rear trim panel, cut out the piece that covers it:

- Face the inside of the left cargo liner toward you.
- Carefully cut out the accessory power socket section with a utility knife at the top seam and remove the overcast stitching.

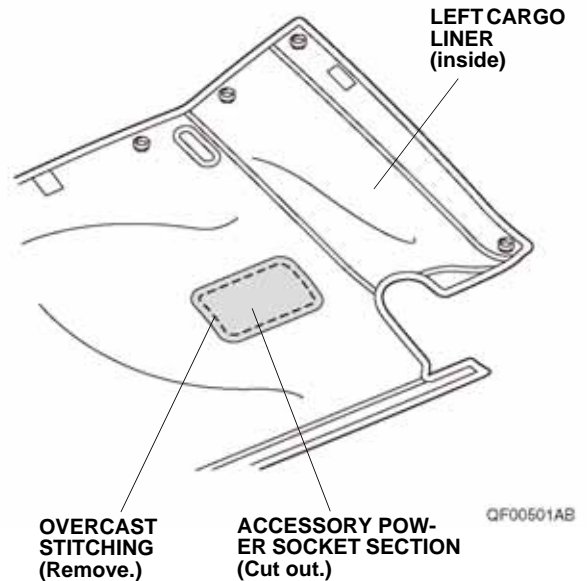


Installing the Cargo Liners


1. If equipped, remove the tonneau cover.

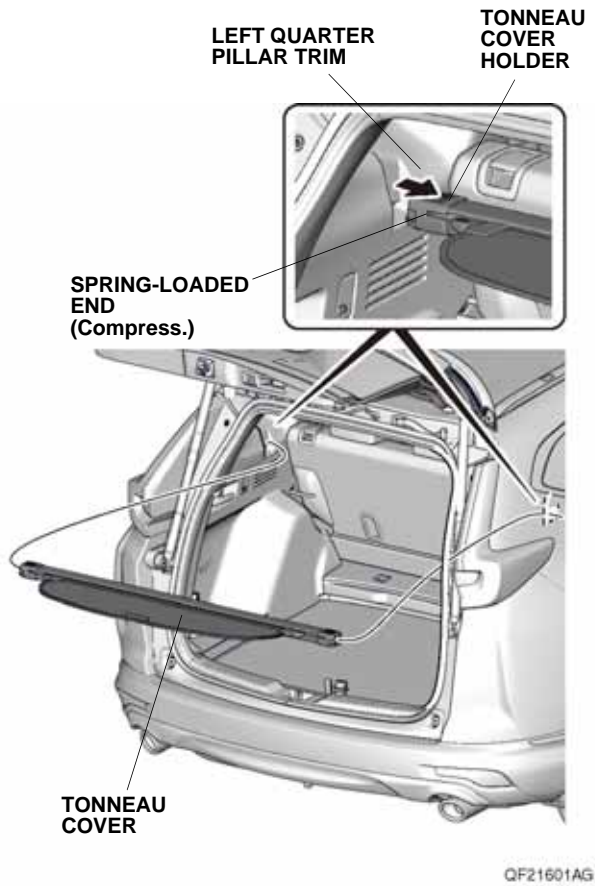


2. Fold down the left and right rear seat-backs.

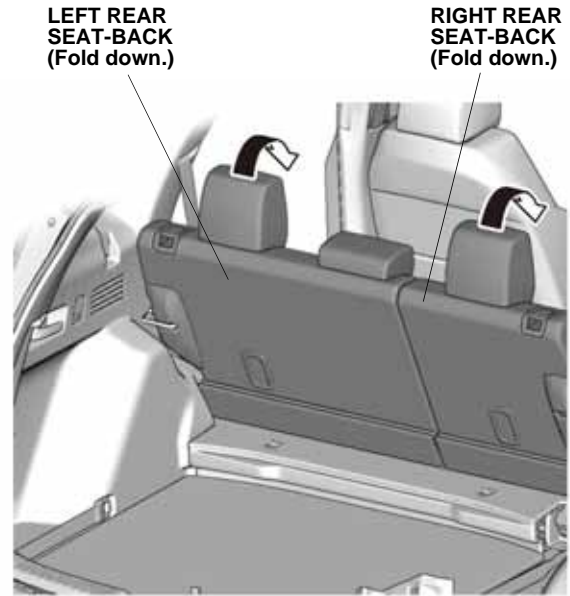

3. Using the printed lines as guides, fold the two tabs on template A as shown.

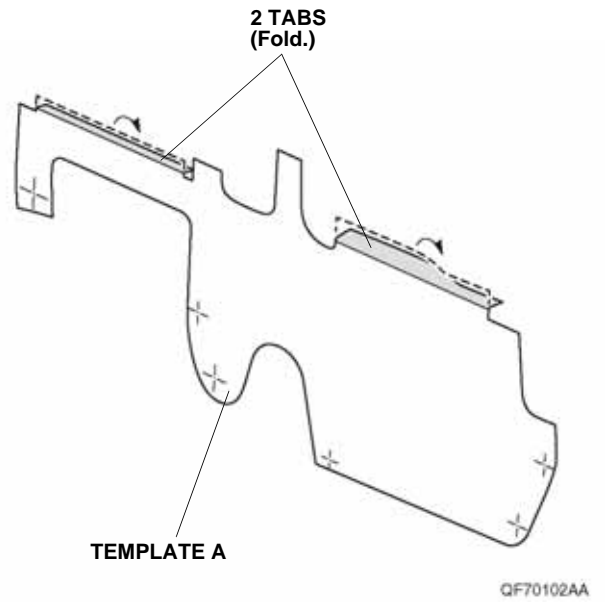

- Line up template A with the right rear side trim panel as shown. Tape template A to the right rear side trim panel with masking tape.

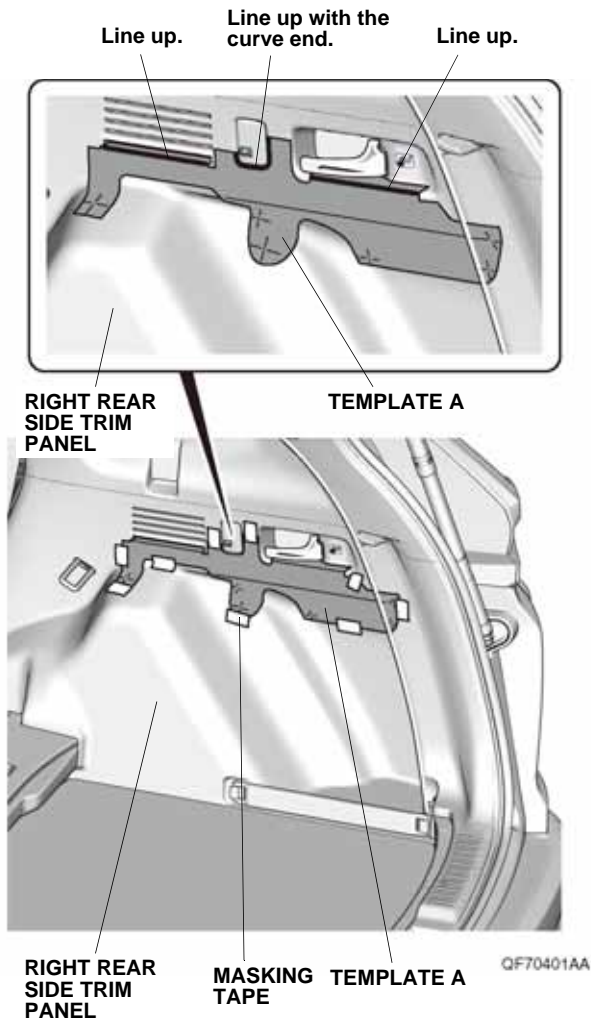


If the vehicle is equipped with a subwoofer, continue with step 5; otherwise, go to step 6.

With subwoofer


- Using a pushpin, pierce the right rear side trim panel through template A as shown. Remove template A. Go to step 7.

NOTE: There are several marks on template A. Before piercing the right rear side trim panel, verify you have the correct locations. Make sure to pierce the marks perpendicular to the right rear side trim panel.

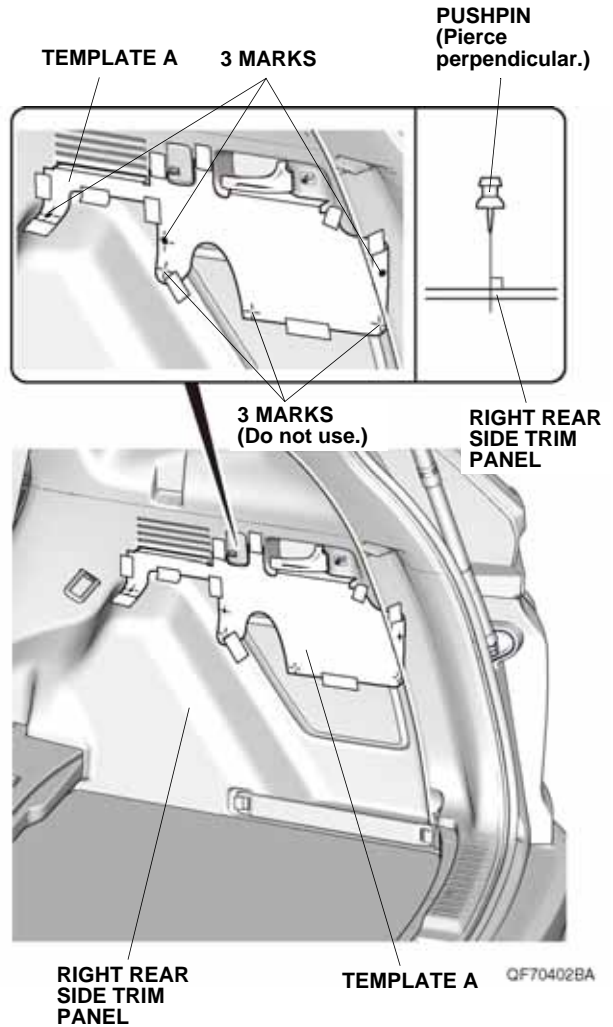


Without subwoofer


- 6. Using a pushpin, pierce the right rear side trim panel through template A as shown. Remove template A. NOTE: There are several marks on template A. Before piercing the right rear side trim panel, verify you have the correct locations. Make sure to pierce the marks perpendicular to the right rear side trim panel.

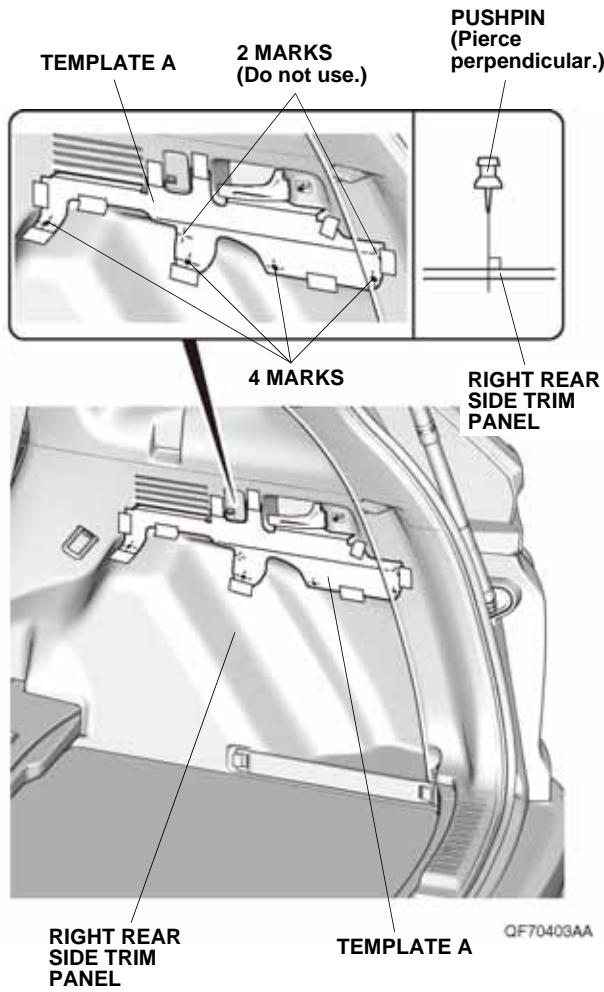

- 7. Using the printed lines as guides, fold the two tabs on template B as shown.

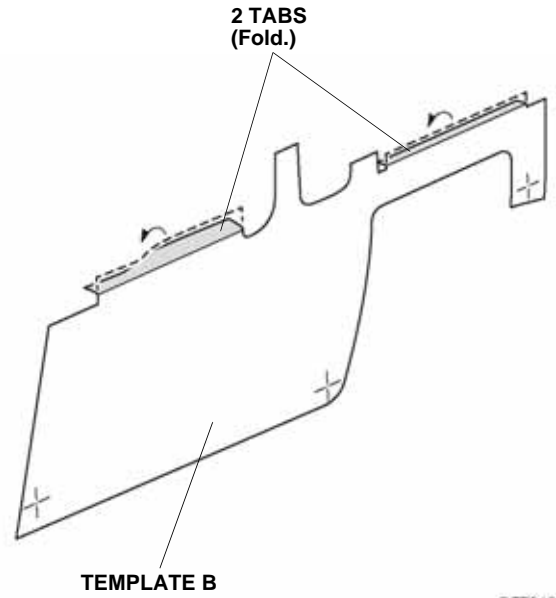


8. Line up template B with the left rear side trim panel as shown. Tape template B to the left rear side trim panel with masking tape.

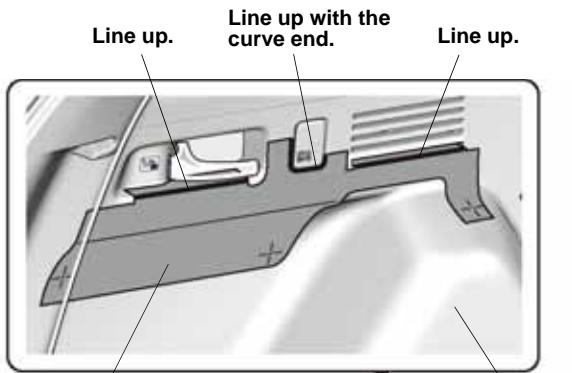

TEMPLATE B

LEFT REAR
SIDE TRIM
PANEL

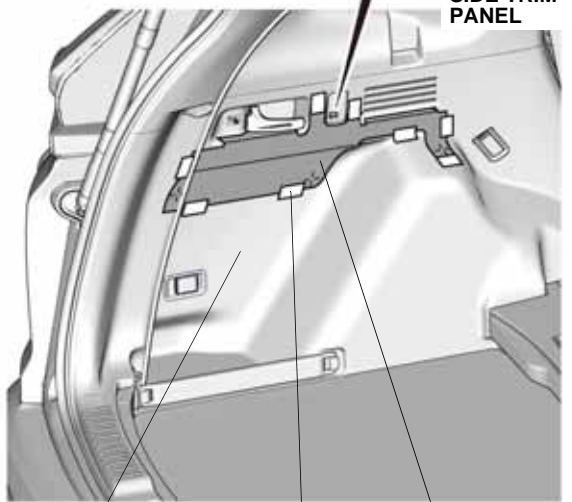


LEFT REAR
SIDE TRIM
PANEL

MASKING
TAPE

TEMPLATE B

QF72102BB

9. Using a pushpin, pierce the left rear side trim panel through template B as shown. Remove template B. NOTE: Make sure to pierce the marks perpendicular to the left rear side trim panel.

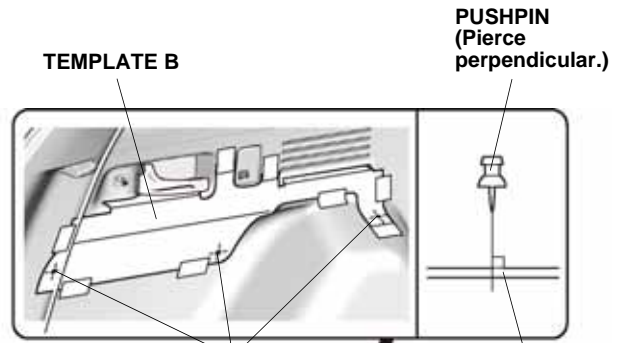


TEMPLATE B

PUSHPIN
(Pierce
perpendicular.)

3 MARKS

LEFT REAR
SIDE TRIM
PANEL

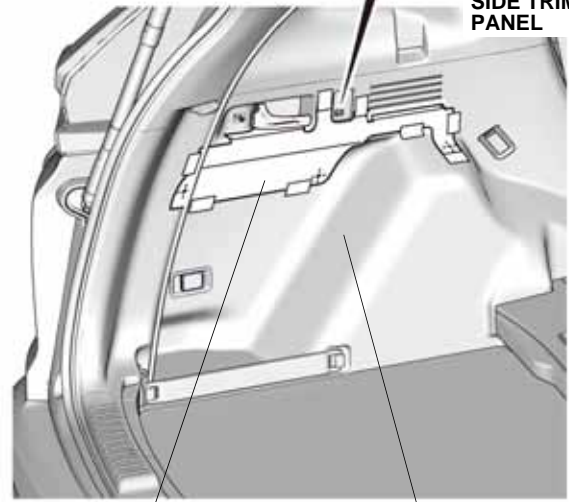


TEMPLATE B


LEFT REAR
SIDE TRIM
PANEL

QF72103BB

10. Pull away the weatherstrip. Line up template C with the right rear side trim panel as shown. Tape template C to the right rear side trim panel with masking tape.

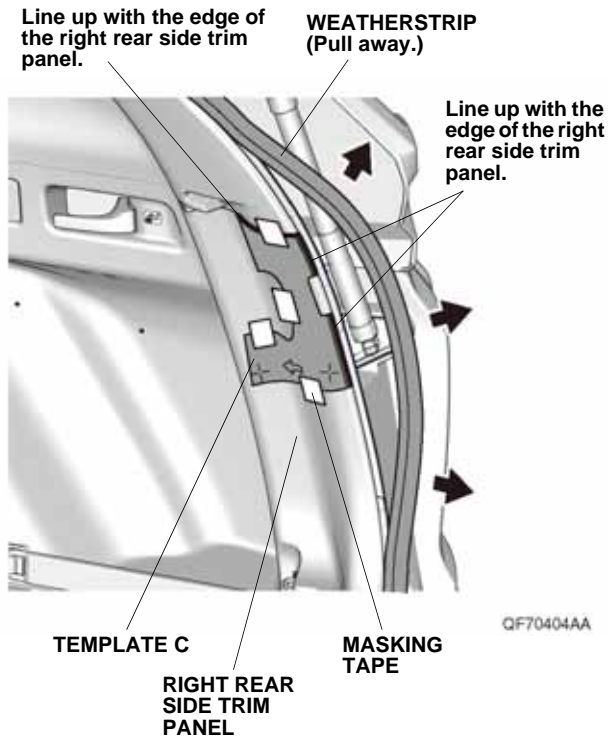


11. Using a pushpin, pierce the right rear side trim panel through template C as shown. Remove template C. NOTE: Make sure to pierce the marks perpendicular to the right rear side trim panel.

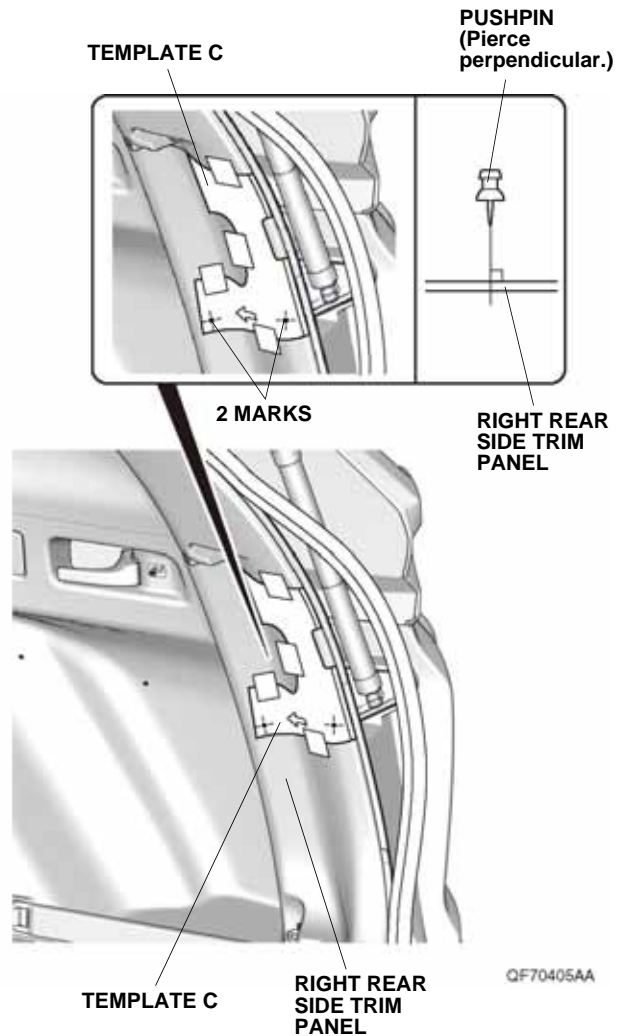


12. Turn template C over, and repeat steps 10 and 11 on the left side of the vehicle.
13. Install the weatherstrip.

14. Measure the location, and attach masking tape to the right rear side trim panel as shown. Using a pushpin, pierce the right rear side trim panel as shown. Remove the masking tape.
NOTE: Make sure to pierce the right rear side trim panel perpendicular.

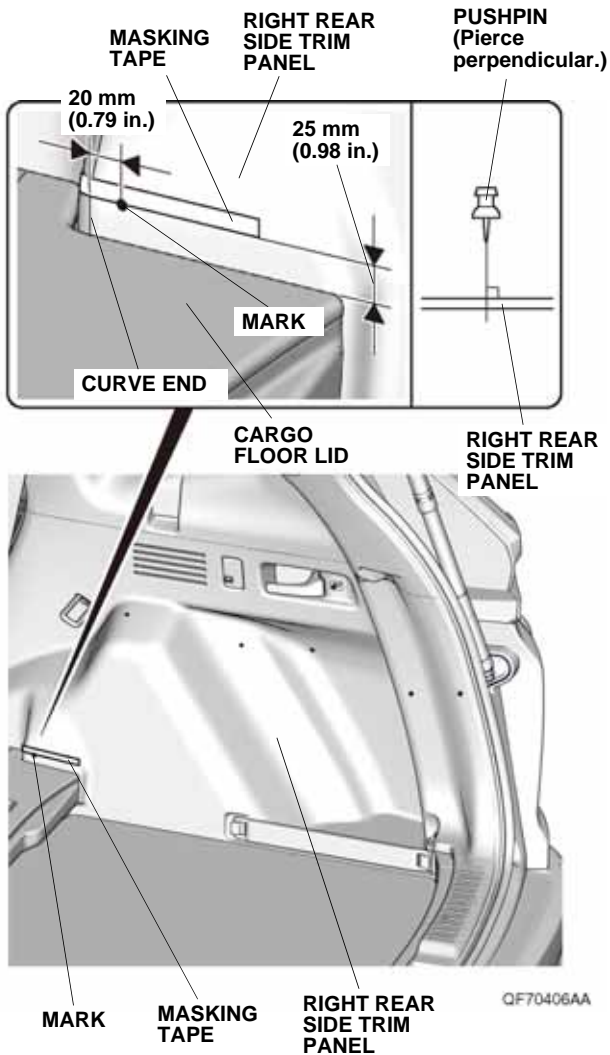

15. Measure the location, and attach masking tape to the right rear side trim panel as shown. Using a pushpin, pierce the right rear side trim panel as shown. Remove the masking tape.
NOTE: Make sure to pierce the right rear side trim panel perpendicular.

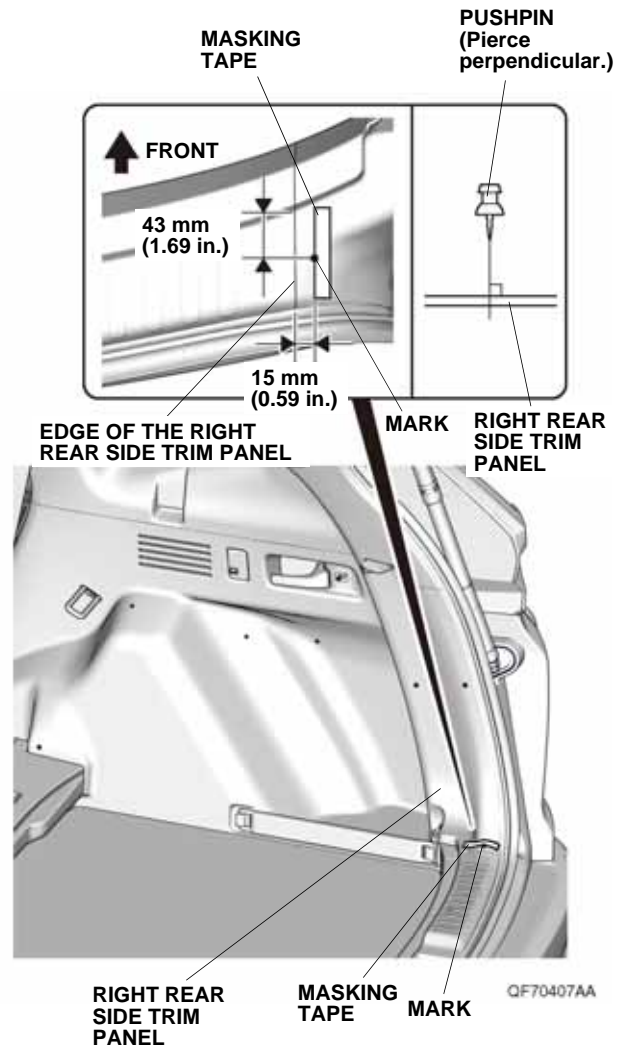


16. Repeat steps 14 and 15 on the left side of the vehicle.

If the vehicle is equipped with a subwoofer, continue with step 17; otherwise, go to step 19.


With subwoofer

17. While wearing eye protection, drill the seven pierced marks on the right rear side trim panel to 6 mm. First drill with a 3 mm drill bit, and finish with a 6 mm drill bit. Remove any burrs.

NOTE: Wrap tape around the 3 mm and 6 mm drill bits 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill perpendicular to the right rear side trim panel.

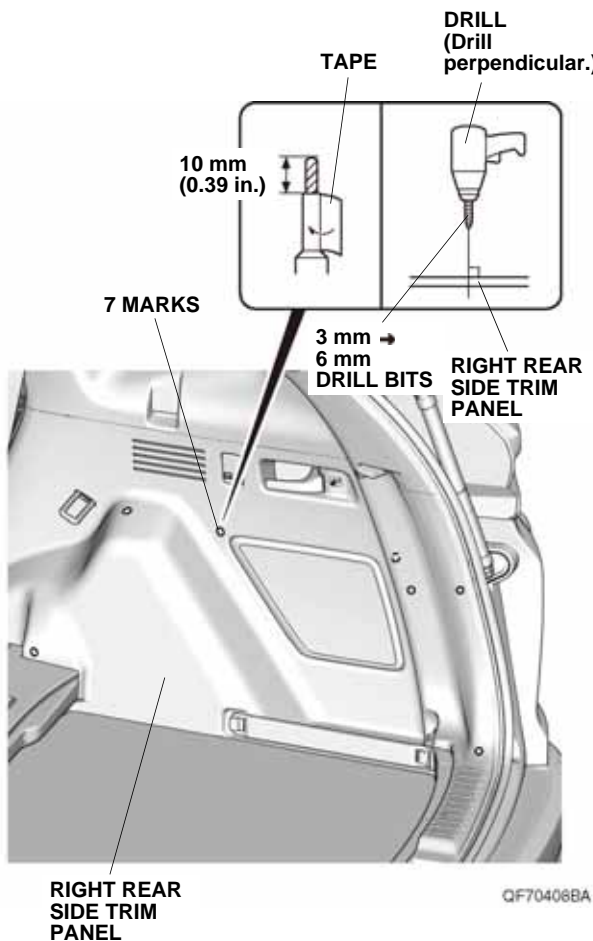


18. Install seven rivets into the seven holes on the right rear side trim panel as shown. Go to step 21.

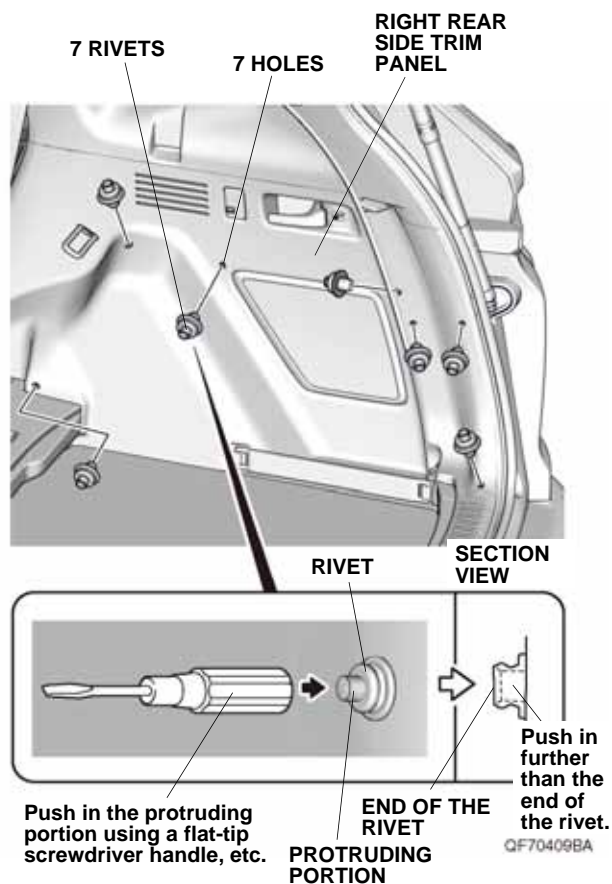


Without subwoofer

19. While wearing eye protection, drill the eight pierced marks on the right rear side trim panel to 6 mm. First drill with a 3 mm drill bit, and finish with a 6 mm drill bit. Remove any burrs.

NOTE: Wrap tape around the 3 mm and 6 mm drill bits 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill perpendicular to the right rear side trim panel.

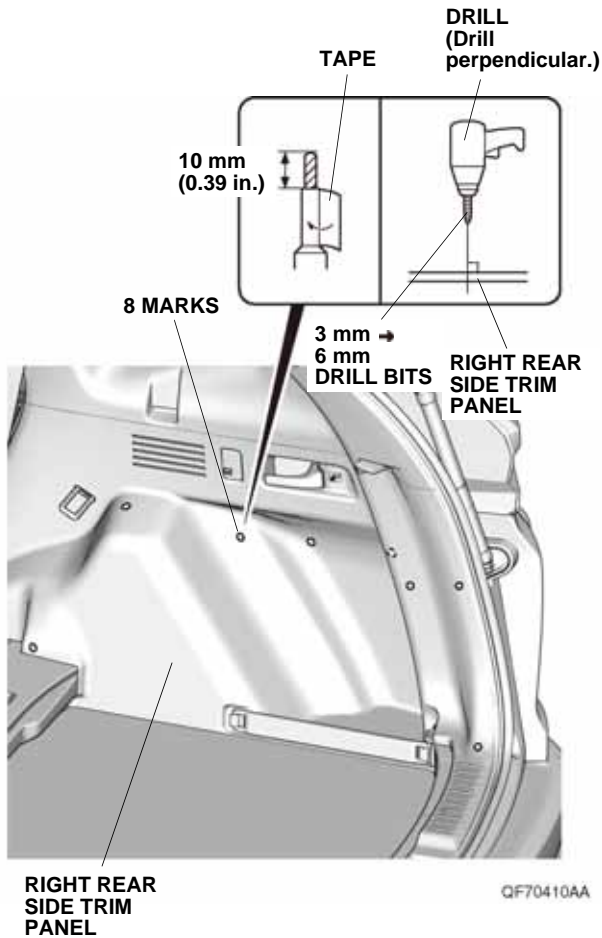


20. Install eight rivets into the eight holes on the right rear side trim panel as shown.

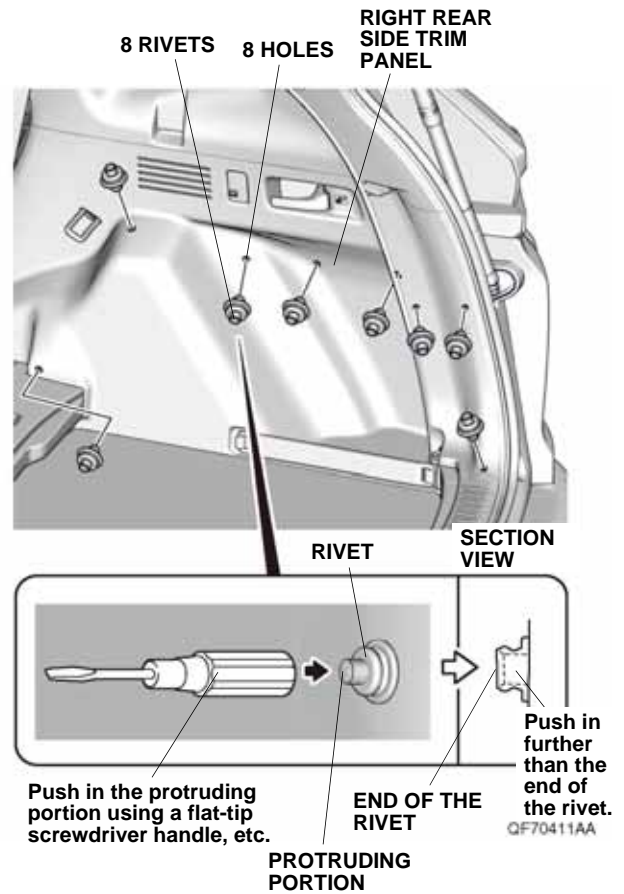


21. While wearing eye protection, drill the seven pierced marks on the left rear side trim panel to 6 mm. First drill with a 3 mm drill bit, and finish with a 6 mm drill bit. Remove any burrs.


NOTE: Wrap tape around the 3 mm and 6 mm drill bits 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill perpendicular to the left rear side trim panel.

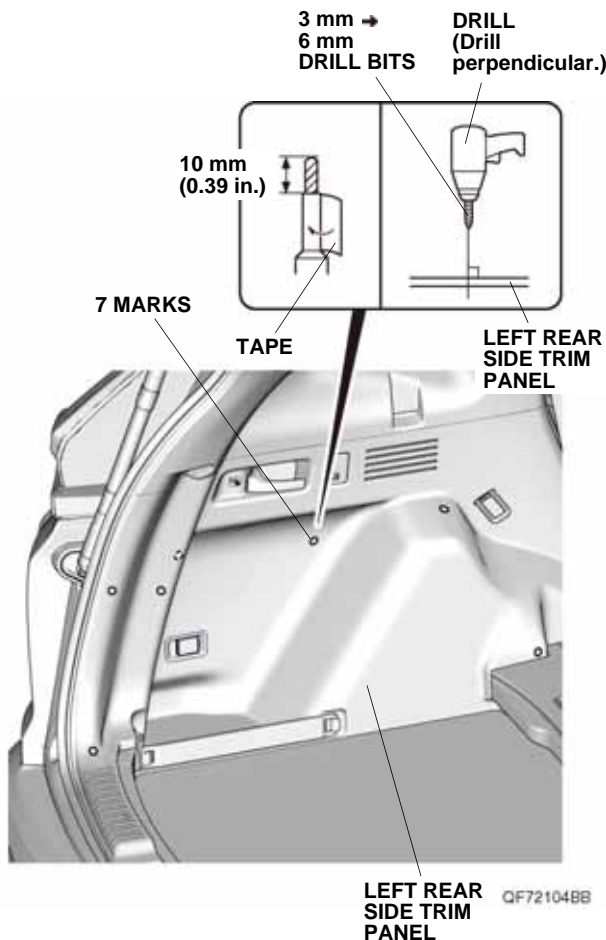


22. Install seven rivets into the seven holes on the left rear side trim panel as shown.

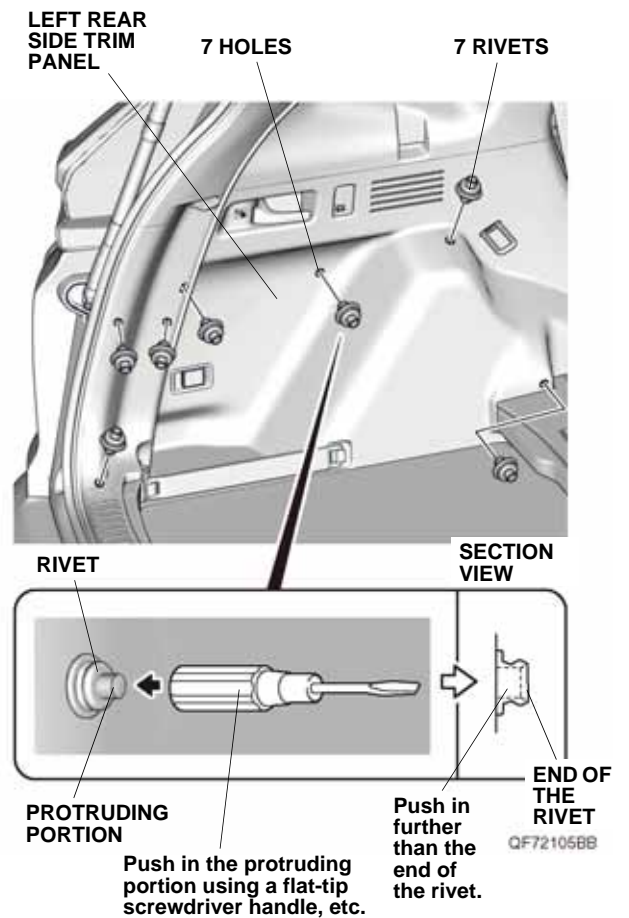


23. Release the divider from the right rear side trim panel.

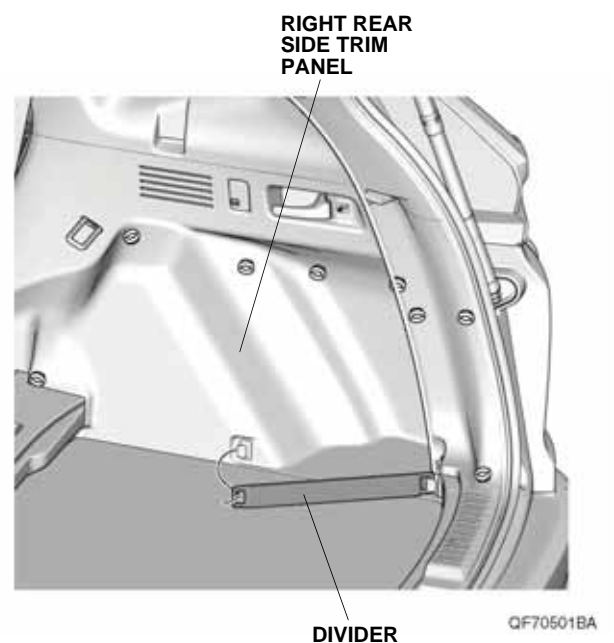


24. Fit the right cargo liner to the right rear side trim panel as shown. Secure the right cargo liner to the right rear side trim panel with eight hooks. Reinstall the divider.
NOTE: Follow the same procedure if the vehicle is equipped with a subwoofer.

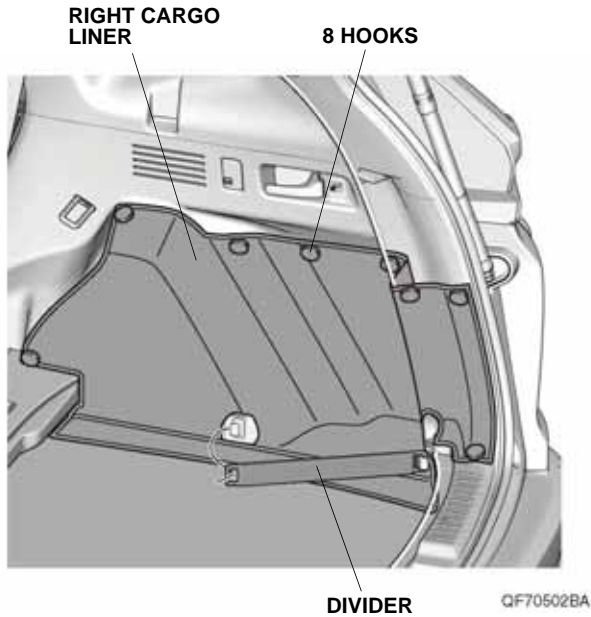

25. Repeat steps 23 and 24 on the left side of the vehicle.
26. Raise the rear end of cargo floor board and put the cargo floor board into the pocket of the center cargo liner.
NOTE: The cargo floor board should be kept in the lower position.

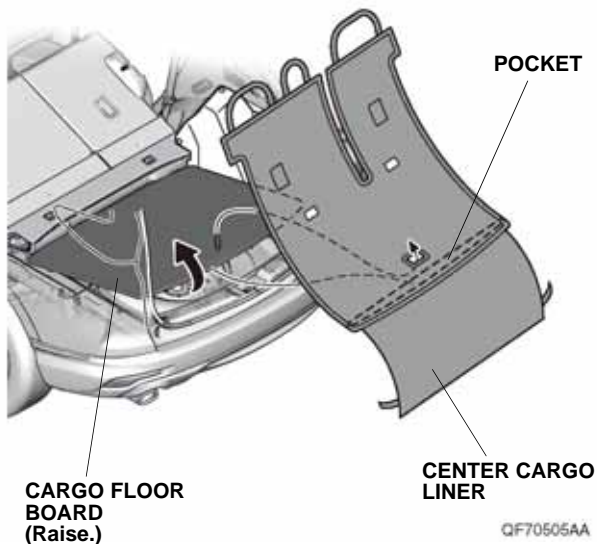

27. Spread the center cargo liner on the cargo area. Remove the headrests from the left and right rear seat-backs, then install three loops on the center cargo liner through the headrests as shown.

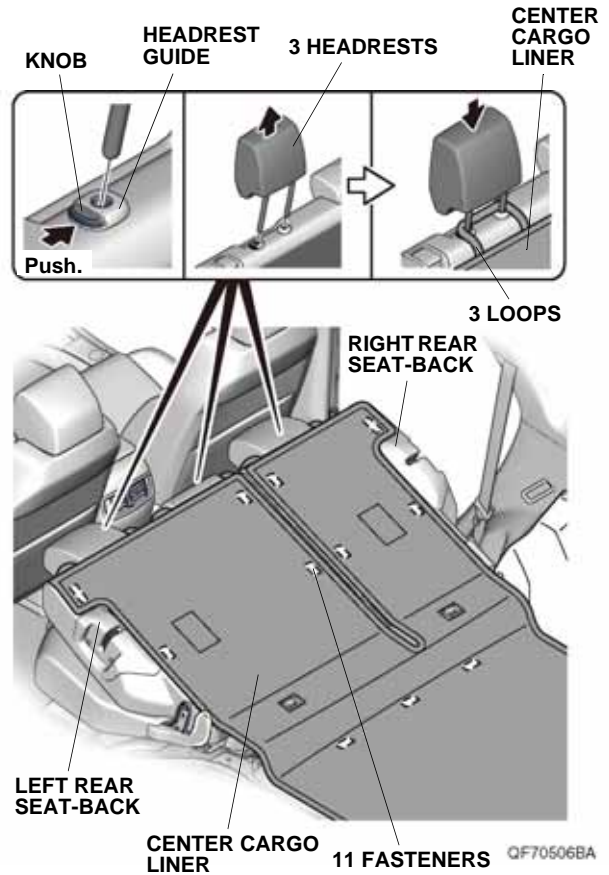

28. Secure the center cargo liner to the left and right rear seat-backs with 11 fasteners.

USE AND CARE

- To store the center cargo liner, secure the center cargo liner to the left and right cargo liners with two fasteners, or fold it under the cargo floor board.

