



INSTALLATION INSTRUCTIONS

| | | |
|---|---------------------------------|--------------------------------------|
| Accessory REAR BUMPER PROTECTOR P/N 08P01-TLA-100 | Application 2017 CR-V | Publications No. VERSION 1 |
| | | Issue Date DEC 2016 |

PARTS LIST

Rear bumper protector



Primer



Alcohol swab



TOOLS AND SUPPLIES REQUIRED

Masking tape

Felt-tip pen

Ruler

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Rubber Roller (T/N MHLE54D)

Illustration of the Rear Bumper Protector on the Vehicle



REAR BUMPER PROTECTOR

QF21601AC

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Be careful not to damage the paint finish.
- This rear bumper protector should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.

Installing the Rear Bumper Protector


1. Measure the rear bumper, and attach a piece of masking tape to the rear bumper as shown. Using a felt-tip pen, make a mark on the masking tape and line it up with the center of the striker.

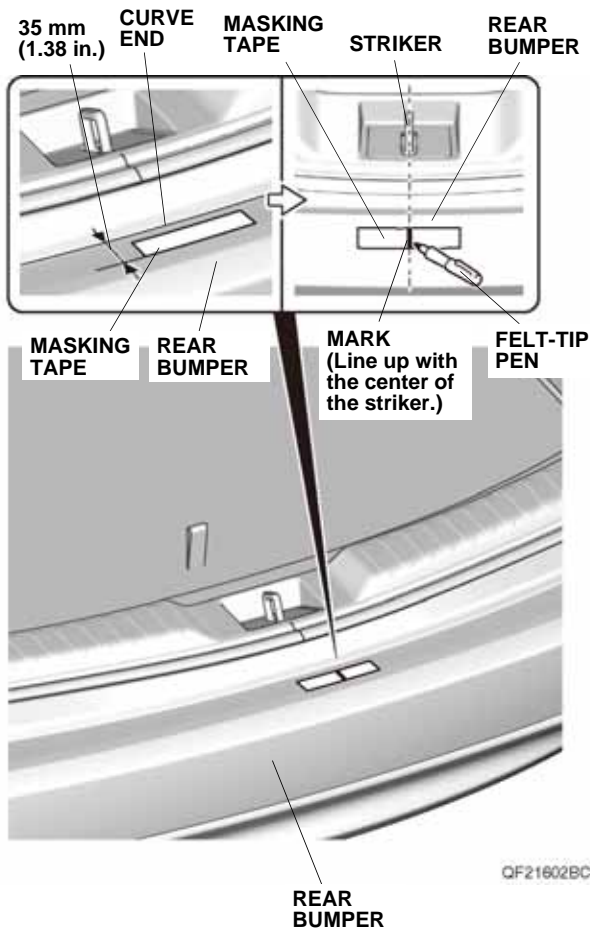


2. Line up the sticker on the rear bumper protector with the mark on masking tape as shown. Position the rear bumper protector on the rear bumper. Make sure that the rear end of the rear bumper protector is within the curve end of the rear bumper.

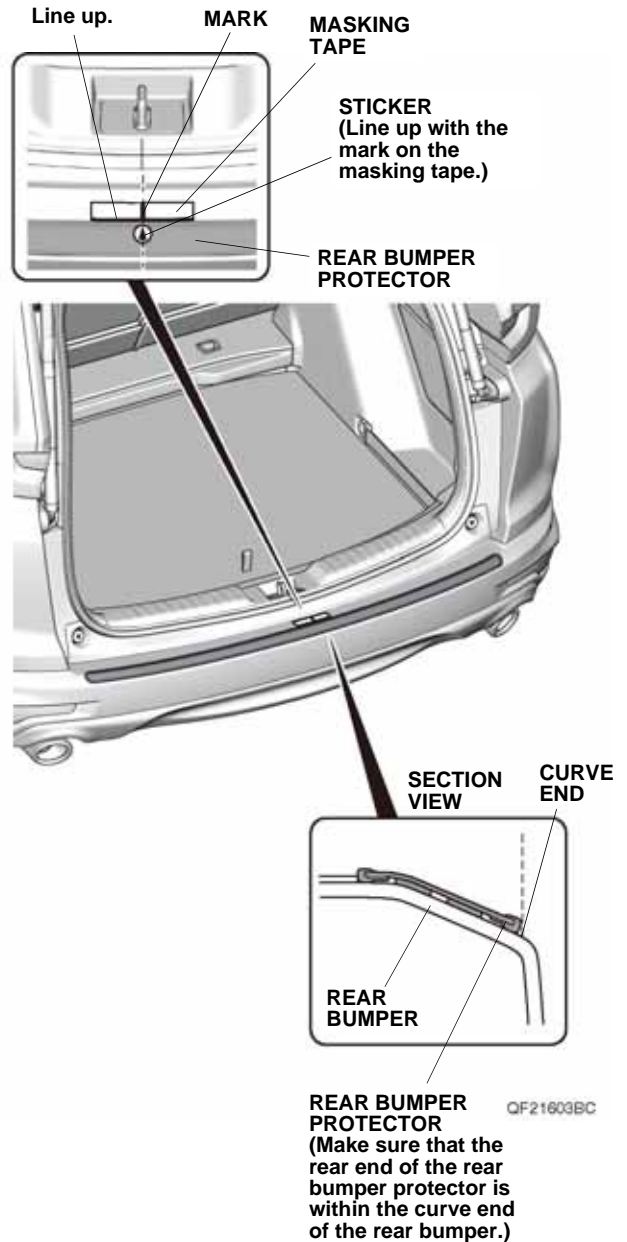

3. Attach masking tape along the rear bumper protector as shown.

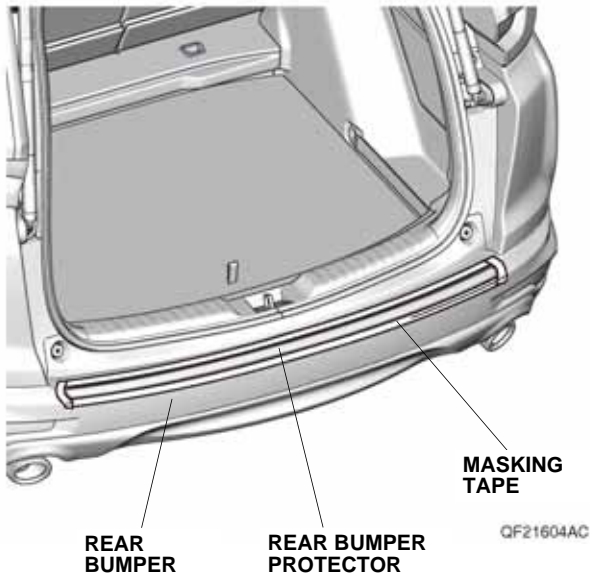


4. Remove the rear bumper protector from the rear bumper.
5. Using the alcohol swab, thoroughly clean the rear bumper where the rear bumper protector will attach.

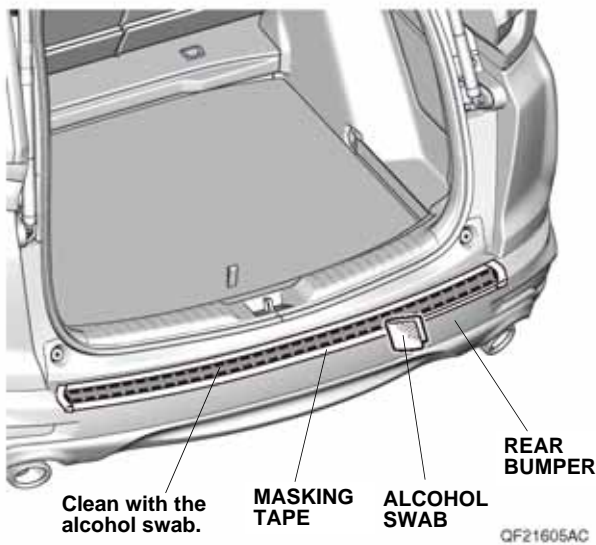


6. Apply the primer to the rear bumper.
- NOTE:


- Apply the primer evenly.
- Be careful not to apply the primer anywhere except the indicated area.
- Do not apply additional primer.
- Apply the primer, and let it dry for at least 10 minutes.
- Attach the rear bumper protector within 24 hours after applying the primer.

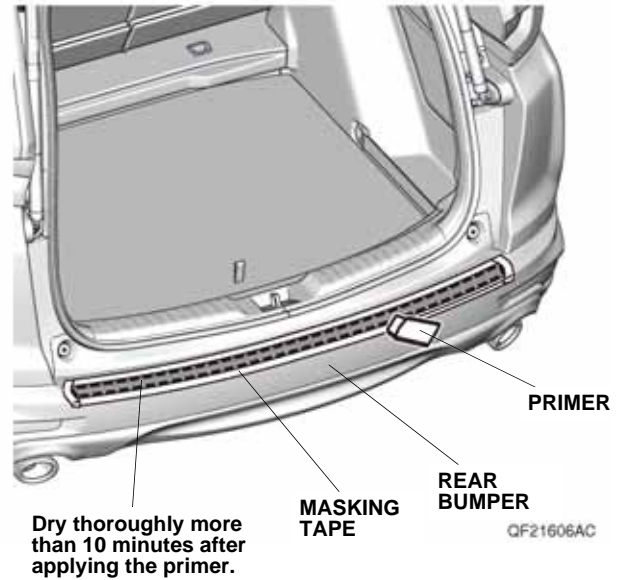


7. Peel back the adhesive backings, and tape them to the surface of the rear bumper protector with strips of masking tape. Remove the remaining adhesive backings.

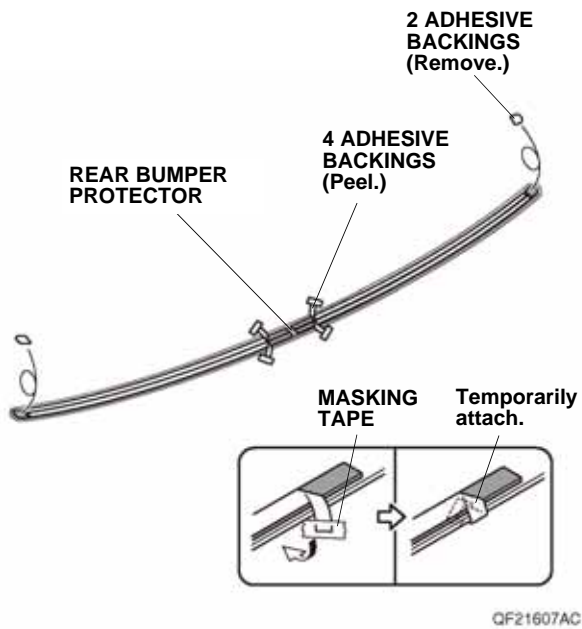


8. Align with masking tape, and attach the rear bumper protector as shown.

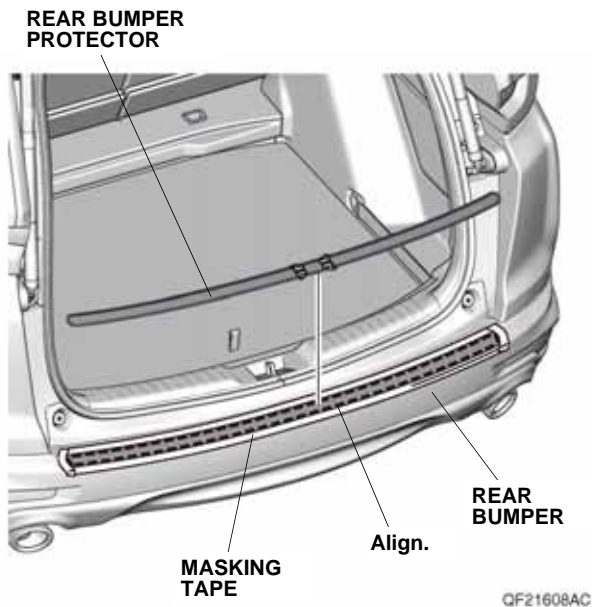

9. While applying light pressure against the rear bumper protector, carefully remove the taped adhesive backings.

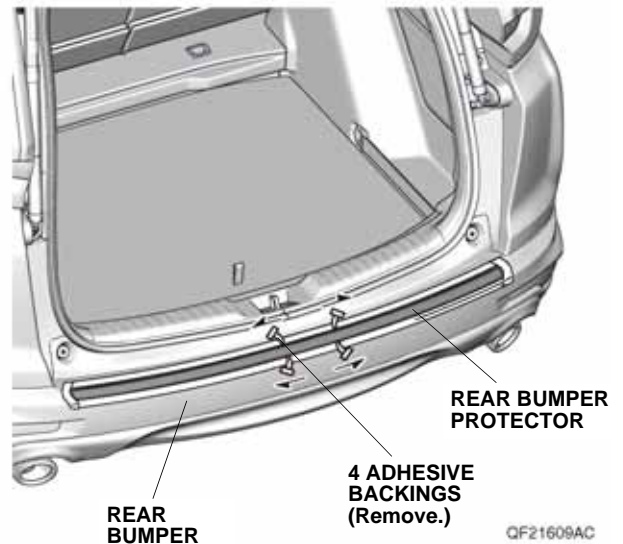

10. Using a rubber roller, apply firm pressure against the rear bumper protector and roll from one end to the other. Apply firm pressure, especially at the ends.

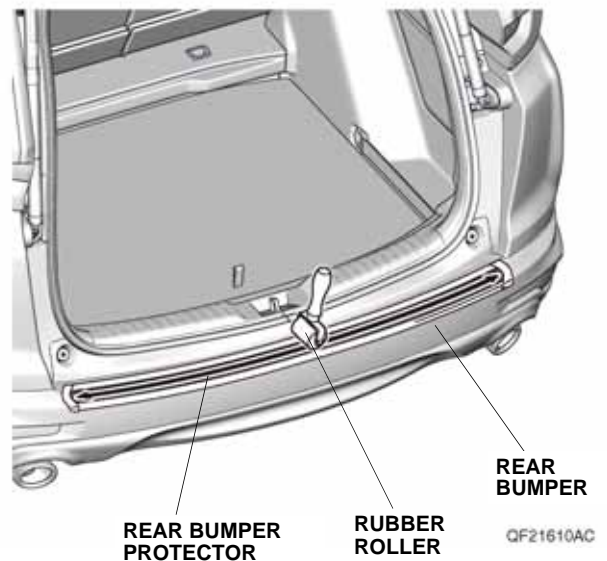

11. Remove the masking tape from the rear bumper and the sticker on the rear bumper protector.