



PARTS LIST


Center cargo liner

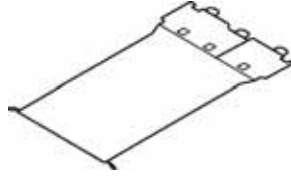

Left cargo liner

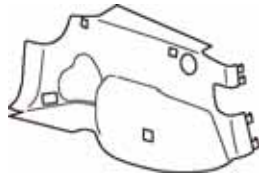

Right cargo liner

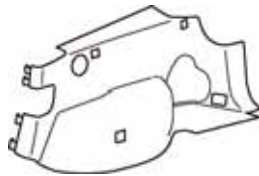

Template A



Template B



Template C



8 Snap-screws



8 Washers



8 Well nuts



Bag



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Drill

3 mm, 6 mm, and 8 mm Drill bits

Pushpin

Tape


Masking tape

File


Ruler

Eye protection (face shield, safety goggles, etc.)

Illustration of the Cargo Liner in the Vehicle

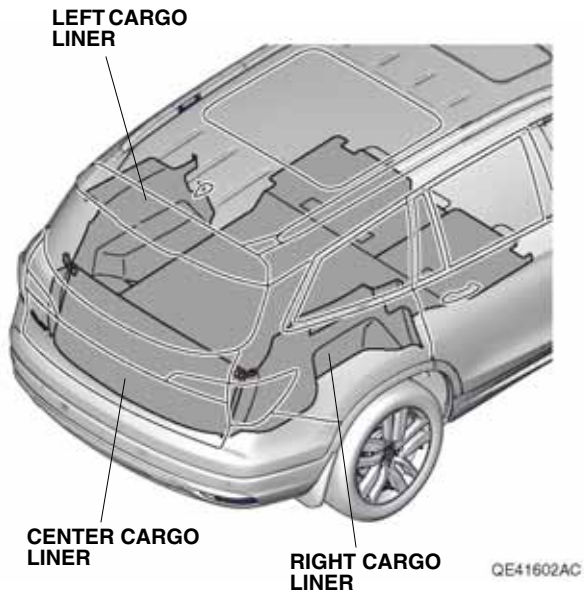

2. Pull each strap, and fold down the third row seats.

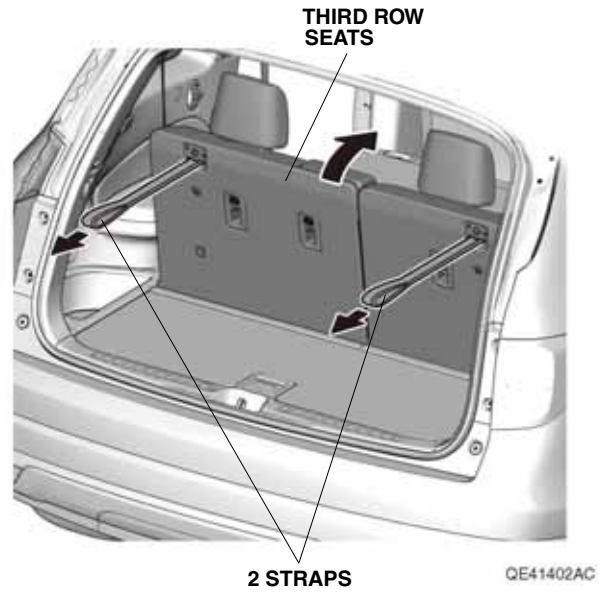

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Be careful not to damage the body.
1. Fold down the left second row seat, and move it rearward. Repeat on the other side.




- Align the templates with the left rear side trim panel as shown. Tape the templates to the left rear side trim panel with strips of masking tape.

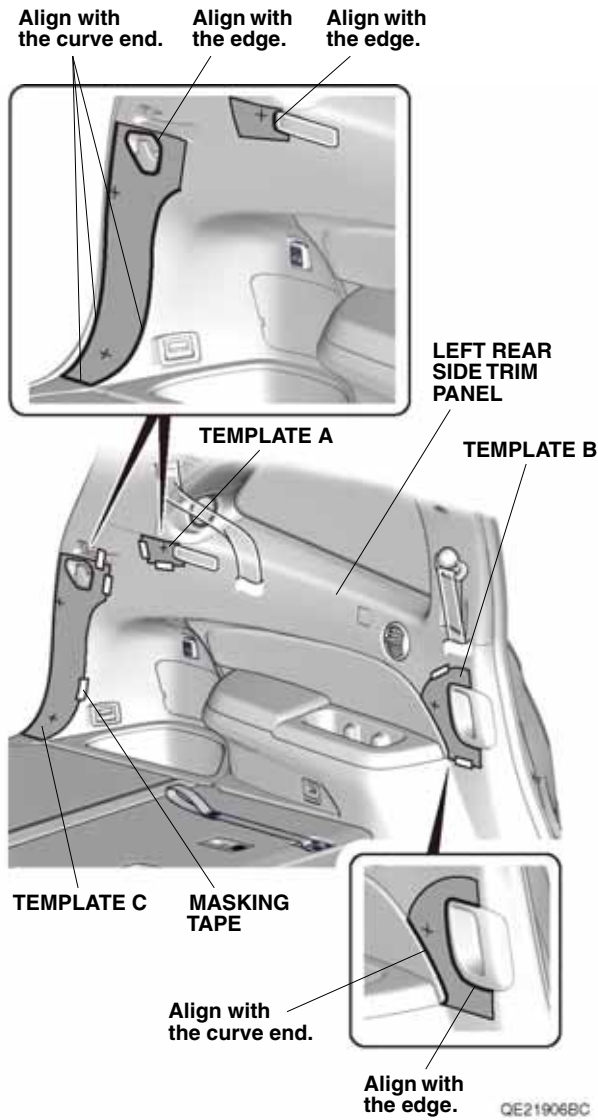


- Using a pushpin, pierce the left rear side trim panel through the templates at the four locations shown on the templates. Remove the templates.

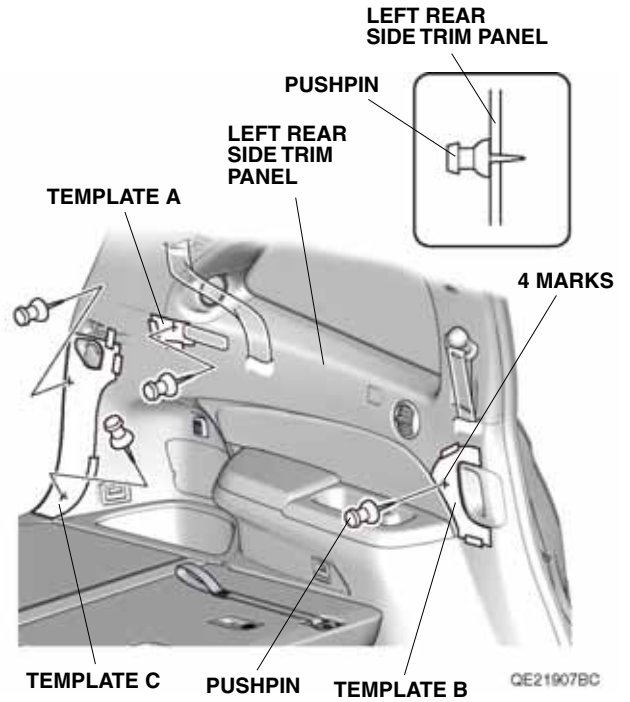

5. While wearing eye protection, drill the four pierced marks in the left rear side trim panel:
 - Wrap tape around a 3 mm, 6 mm, and an 8 mm drill bits, 10 mm (0.39 in.) away from the tip, or use a drill stop.
 - First drill with a 3 mm drill bit, then follow with a 6 mm drill bit, and finish with an 8 mm drill bit.
 - Remove any burrs.

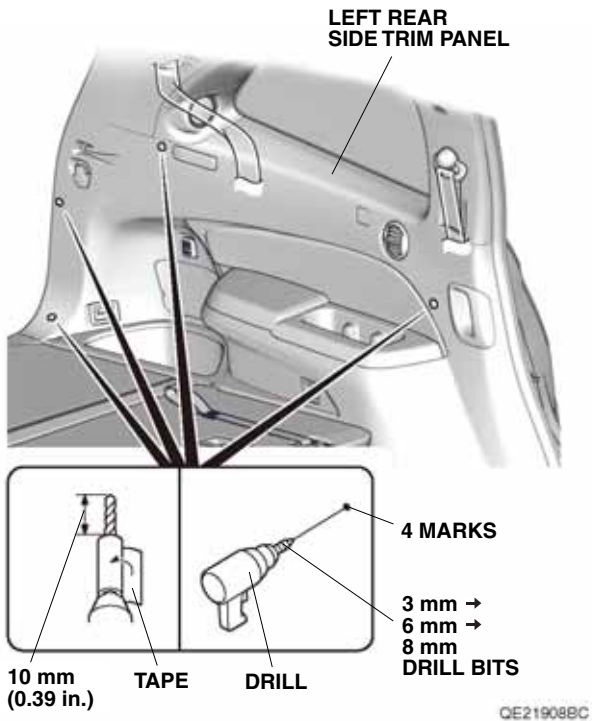


6. Press one well nut into each hole in the left rear side trim panel.

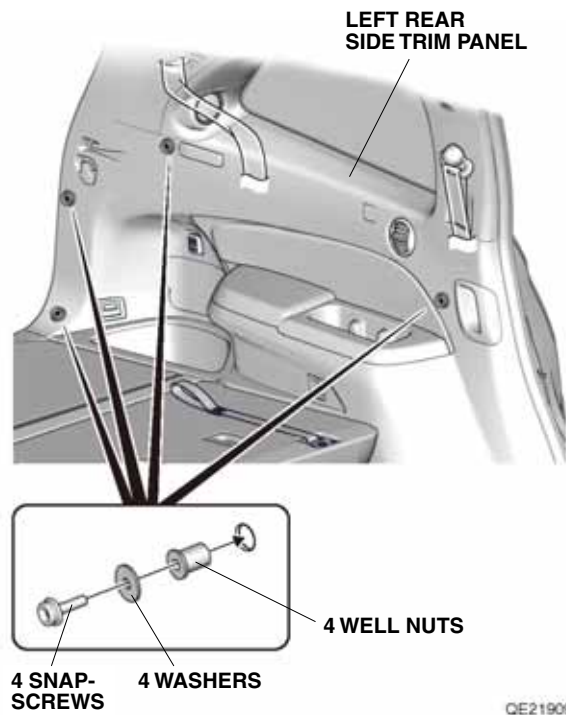


7. Place a washer onto the snap-screw and install four snap-screws into each well nut. Tighten the snap-screws.

- Pass the seat belt holder through the hole in the left cargo liner as shown, then insert the third row seat belt under it.

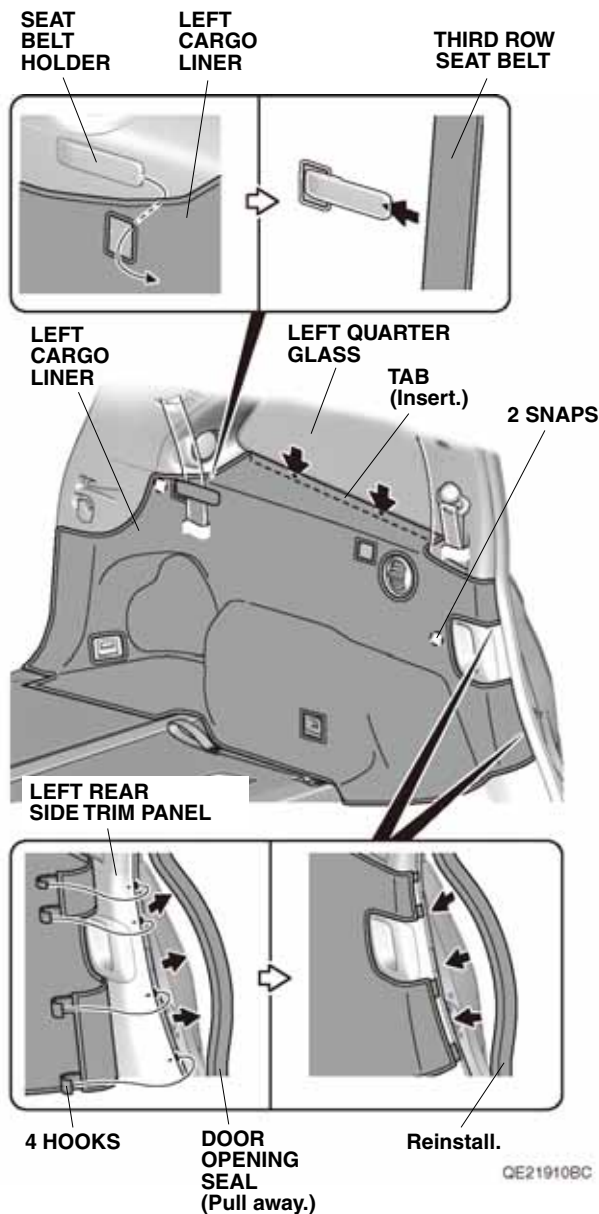


- Secure the two snaps on the left cargo liner to the two snap-screws. Insert the tab on the left cargo liner between the left quarter glass and the left rear side trim panel.
- Pull away the door opening seal. Hook the four hooks on the left cargo liner to the edge of the left rear side trim panel, then reinstall the door opening seal.

- Raise the left third row seat. Insert the bottom end of the left cargo liner between the left third row seat cushion and the left rear side trim panel.

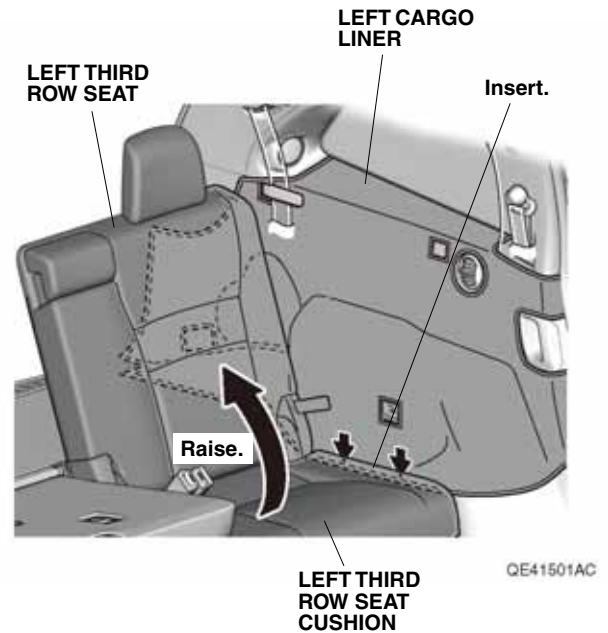


- Fold the left third row seat. Secure the two snaps on the left cargo liner to the two snap-screws.

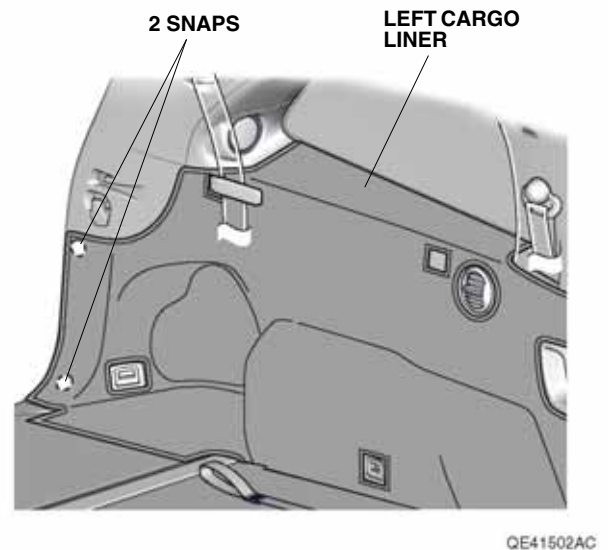


- Turn the templates over, and repeat steps 3 through 12 to install the right cargo liner on the right side of the vehicle.

14. Raise the second row seats. Remove the headrest from the second row seats, then install three loops on the center cargo liner through the headrests as shown.

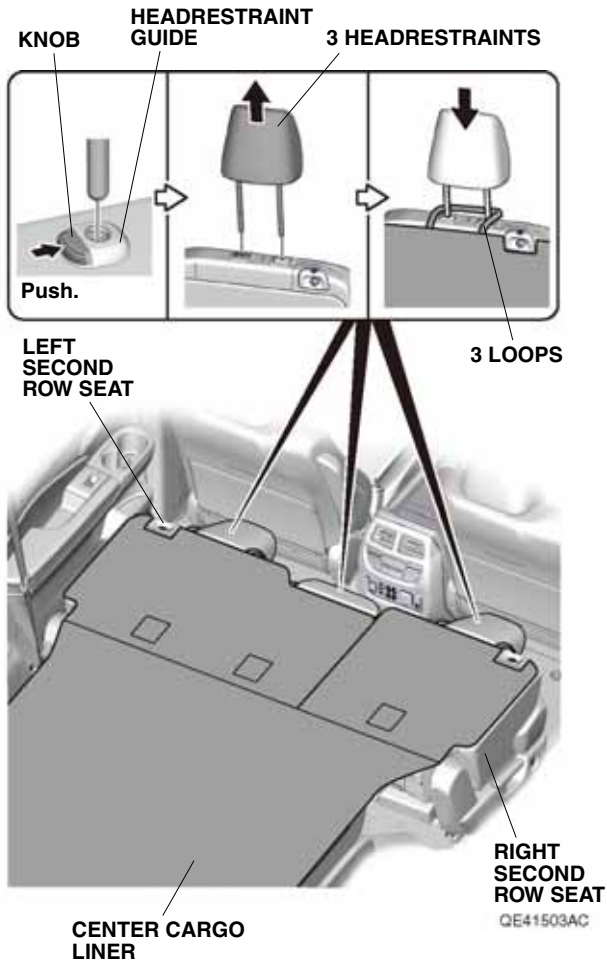


15. Fold down and slide the second row seats rearward fully.

16. Starting from the front, align the center cargo liner with each corner of the left and right second row seats, and secure the center cargo liner to the cargo floor with sixteen fasteners.

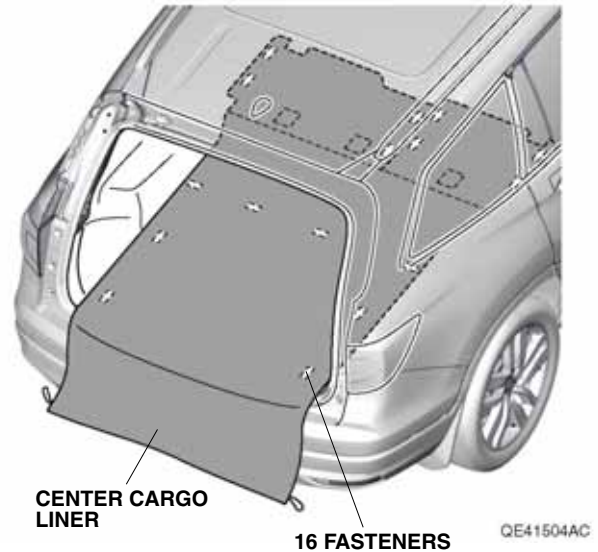

17. Secure the two loops on the center cargo liner to the two hooks.

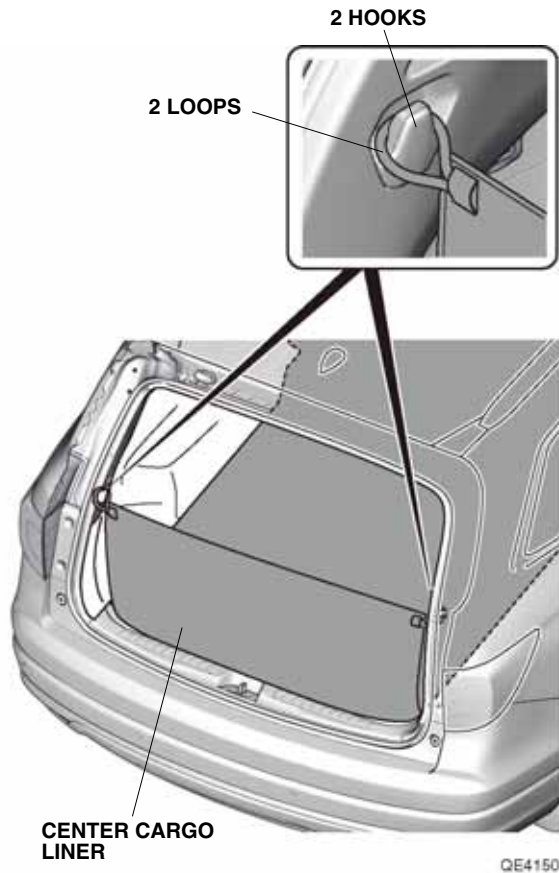

USE AND CARE

- To use the third row seats, center cargo liner must be removed.
- Store the cargo liner in the bag for safe-keeping when it is not being used.