

**HONDA**  
**INSTALLATION**  
**INSTRUCTIONS**

Accessory  
**CARGO NET**  
 P/N 08L96-TGG-100

Application  
**2018 CIVIC**  
**5-DOOR**  
**(EXCEPT Si)**

Publications No.  
**VERSION 1**  
 Issue Date  
**AUG 2017**

**PARTS LIST**


Cargo net



4 Snaps



**Illustration of the Cargo Net Installed in the Vehicle**

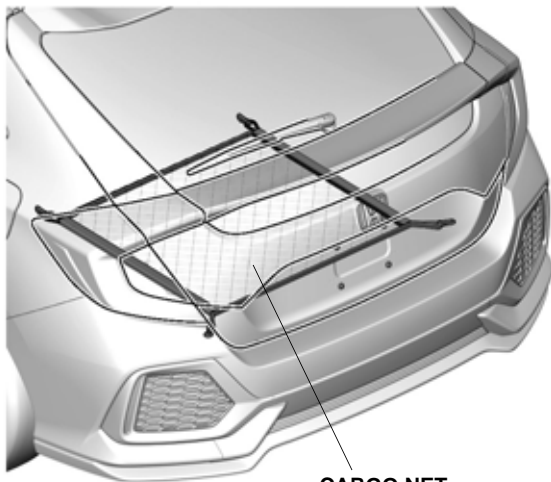


QED2401AJ

**INSTALLATION**


**Installing the Cargo Net**

1. Fold the cargo net in half and attach the four snaps to the cargo net as shown.

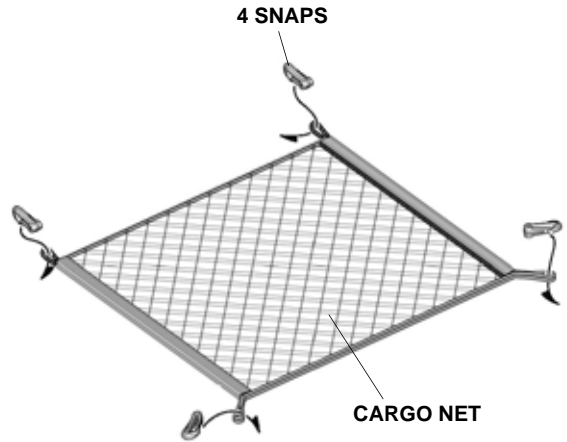

QED2402AJ

2. Open the tailgate, and secure the four snaps to the hooks in the luggage area.

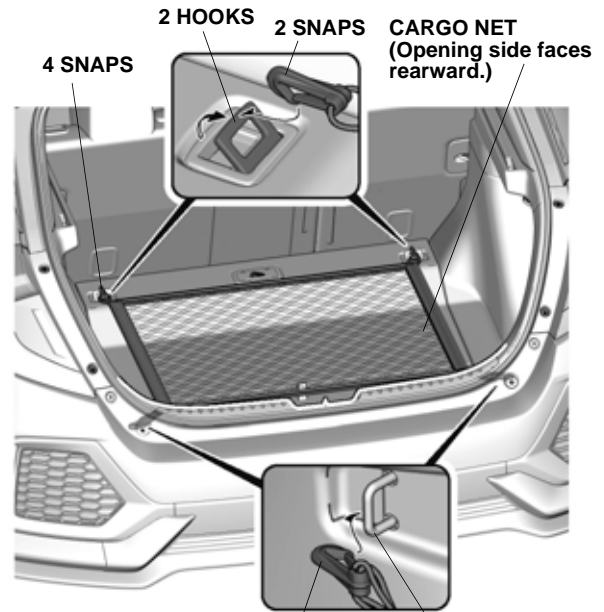

2 SNAPS 2 HOOKS

QED2403AJ