



INSTALLATION INSTRUCTIONS

Accessory
REAR HFP EMBLEM
P/N 08F20-TS9-100

Application
2018 CIVIC
5-DOOR
(EXCEPT Si)

Publications No.
VERSION 1
Issue Date
AUG 2017

PARTS LIST


HFP emblem



TOOLS AND SUPPLIES REQUIRED

- Shop towel
- Isopropyl alcohol
- Masking tape
- Ruler

Illustration of the Rear HFP Emblem Installed on the Vehicle

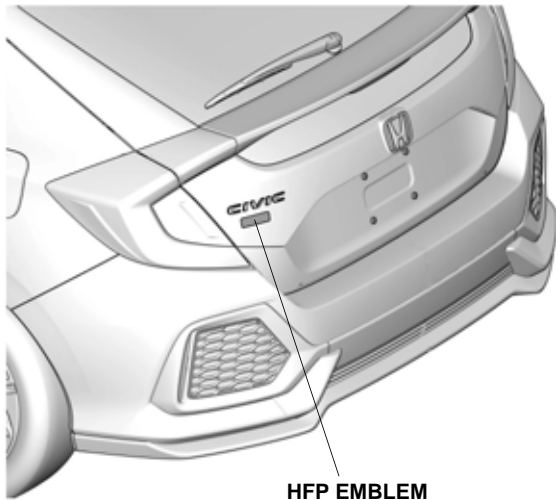

HFP EMBLEM

QF50301AT

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- Be careful not to damage the vehicle body paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.

Installing the HFP Emblem

1. Apply masking tape to the tailgate as shown.

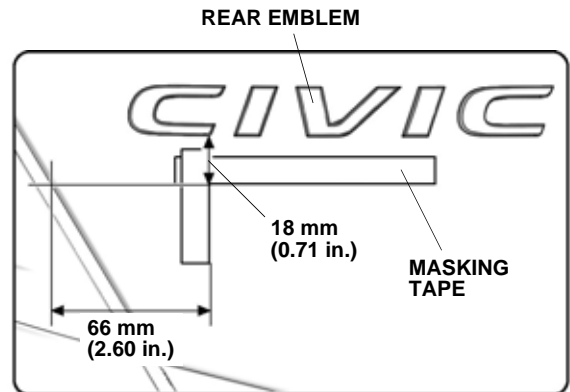

REAR EMBLEM

18 mm
(0.71 in.)

66 mm
(2.60 in.)


MASKING TAPE




TAILGATE

QF50302AT

- Using isopropyl alcohol on a shop towel, thoroughly clean the tailgate where the HFP emblem will attach.

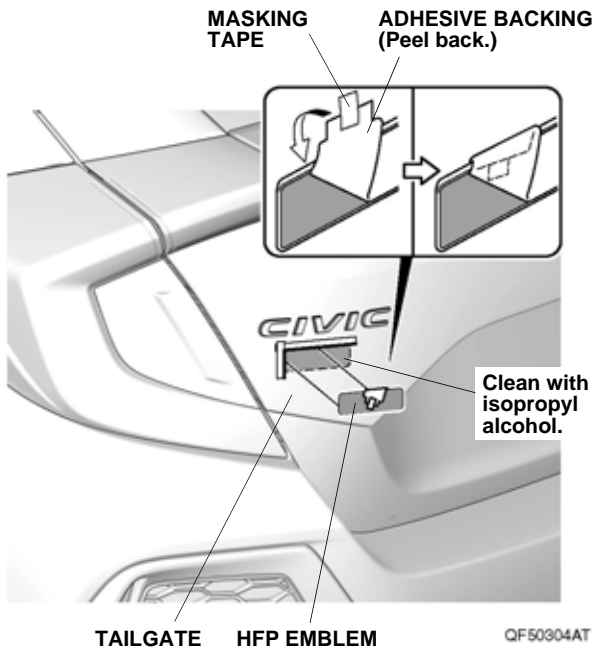

- Peel back the adhesive backing, and tape it to the front surface of the HFP emblem as shown.
- Attach the HFP emblem to the tailgate.
- Gently hold the HFP emblem against the tailgate and remove the adhesive backing.

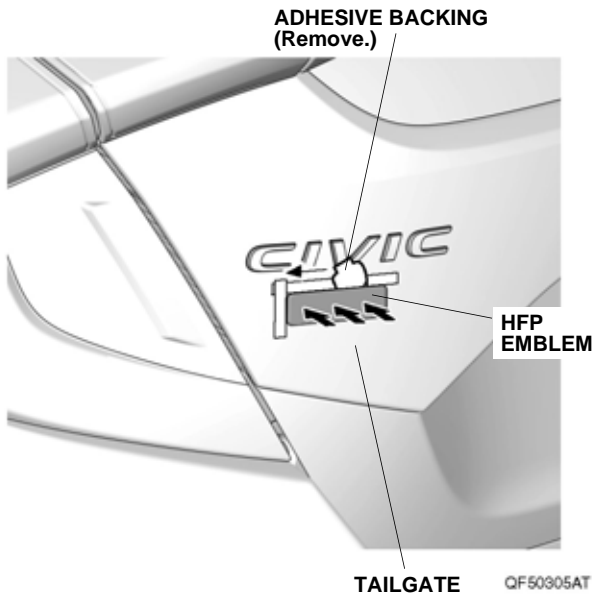

- Using the palm of your hand, firmly press the HFP emblem against the tailgate for 30 seconds.
- Remove the masking tape.