


BLACK EMBLEMS	2026 Prelude MODEL SERIES	Publications No. VERSION 1
---------------	------------------------------	-------------------------------

GENERAL VIEW

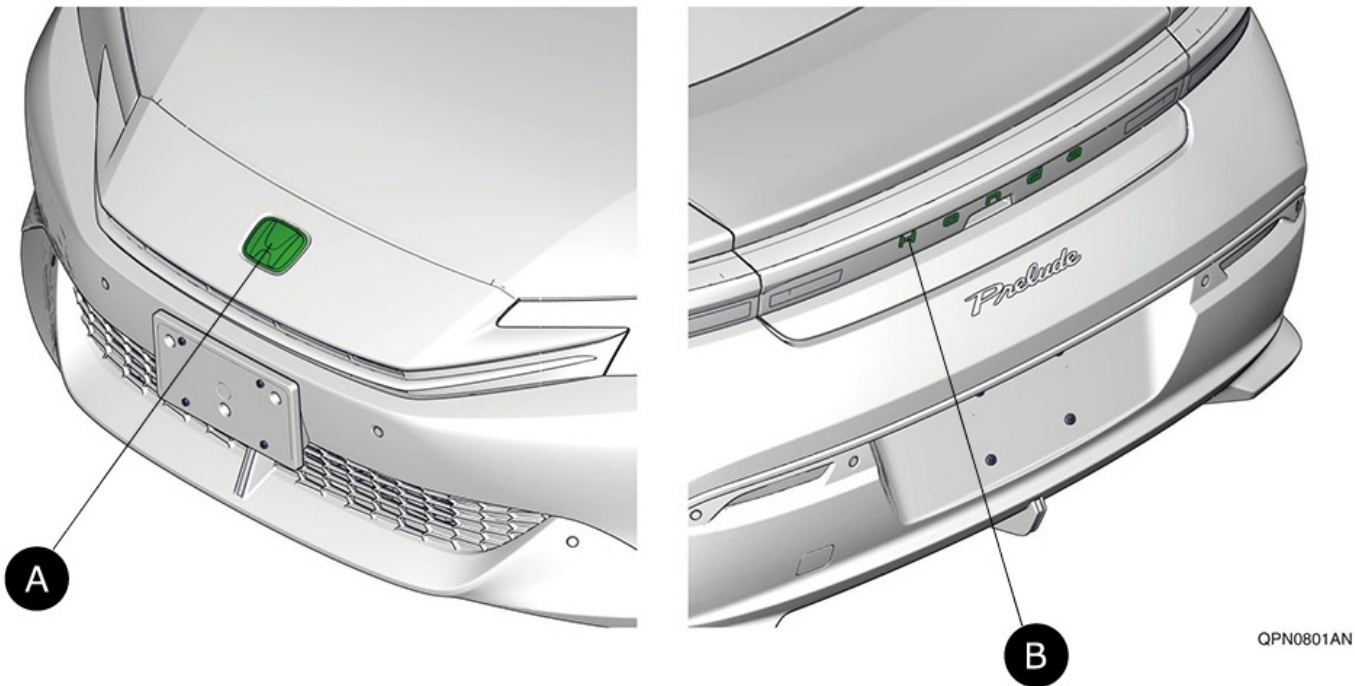

A	H EMBLEM
B	Honda EMBLEM

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

 **NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

 **NOTE**

Gives helpful information or instructions to be followed when installing this product.





Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.







*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Work by two or more people.		Place the part on a blanket.
	Mark with felt-tip pen.		Mark with pushpin. (Pierce through.)
	Mark with center punch.		Remove any burrs.
	Use touch-up paint and allow to dry.		Wrap the masking tape around the flat-tip screwdriver.
	Return the original part to the customer. (Do not reuse.)		Apply firm pressure while rolling, especially at the ends, to set the adhesive.
	Press firmly.		Tighten to the specified torque.
	Work perpendicularly.		Clean with isopropyl alcohol.

These icons indicate the name of part or location (also contain other instructions).

A B C ...	Name of part or location, etc.
A B C ...	Action or work instruction
1 2 3 ...	Order of work
 ...	Position of clip
 ...	Position of retaining tab
(x 2) (x 3) (x 4) ...	Quantity

Wire Harness Routing Precaution

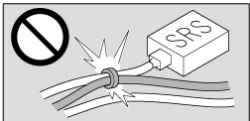	<u>Do not secure the accessory harness to the SRS harness.</u> <u>(except for instruction cases.)</u>		Push the connectors and terminals together until they lock.
	Do not pull the harness to unplug the connectors.		Install removed connectors in their original location.
	Do not pull the harness.		Secure the accessory harness as shown.
	Do not pinch the harness.		Cut off the excess wire tie.

| Safety: General

CAUTION

Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.

NOTICE

- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.

NOTE

The illustrations may differ slightly from the actual accessory.

| Safety: Electric Parts

NOTICE

Always disconnect the negative cable from the battery before beginning work.



| Safety: Accessory

NOTICE

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Black Emblems Kit (P/N 08F20-36W-100)

Parts	Parts name	QTY	Remarks
	H emblem	1	
	Film	1	
	Honda emblem	1	
	Push nut	2	
	Alcohol wipe	2	

REQUIRED TOOLS AND SUPPLIES

- Phillips screwdriver
- Stubby Phillips screwdriver
- Flat-tip screwdriver
- 10 mm Open end wrench
- Blanket
- Masking tape
- 6 mm Socket
- Nylon string
- Diagonal cutters

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)

INSTALLATION




Removing the Vehicle Parts

● Disconnecting the Battery Cable

- 1
- Disconnect the negative cable from the battery.

 NOTE

Follow the “12 Volt Battery Terminal Disconnection and Reconnection” described in the service information since the work differs depending on the vehicle.

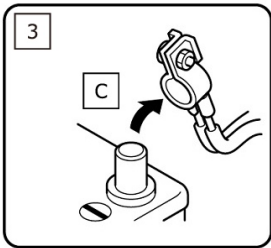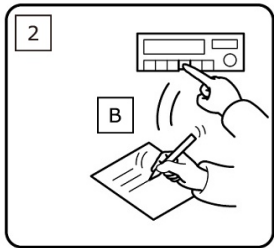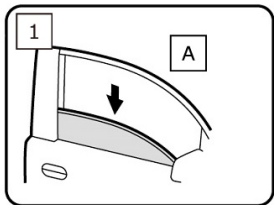

QCD0502BM



A	Lower.
B	Record.
C	Disconnect.

● Front Bumper

2 Attach masking tape to protect the vehicle.


NOTE

To prevent damage, do not remove the masking tape until after the parts are installed.

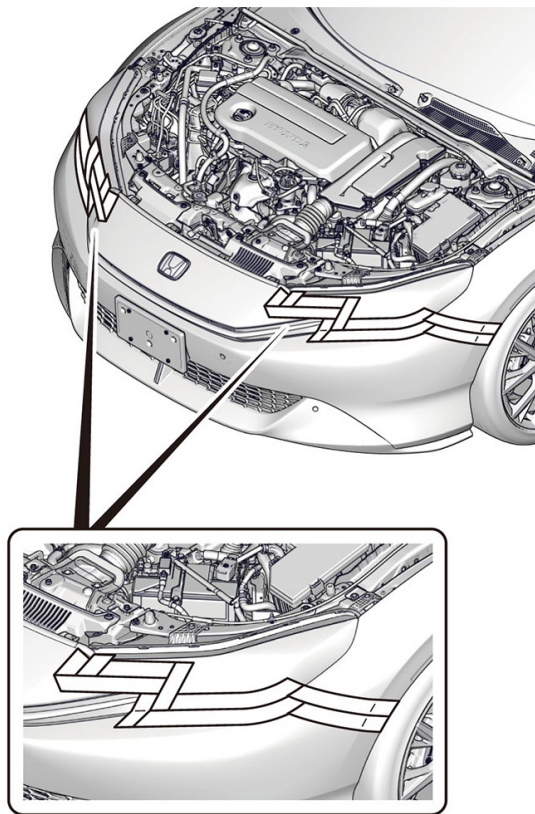

QP01802AD



3 Remove the clips.

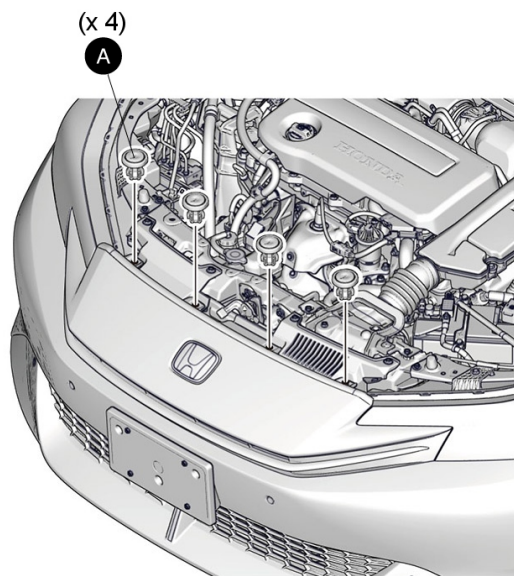

QP01803AD

A	CLIP
---	------

4 Remove the clips and self-tapping screws.

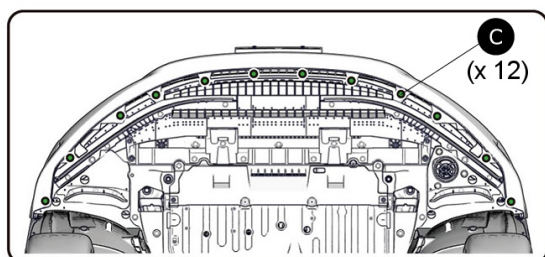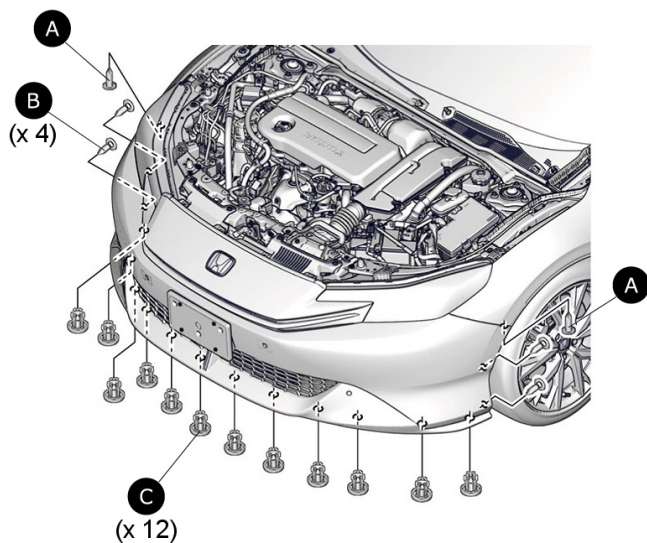



QP01804AD

A	SELF-TAPPING SCREW (round head)
B	SELF-TAPPING SCREW (flat head)
C	CLIP

5 Release the retaining tabs.

NOTE

- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.

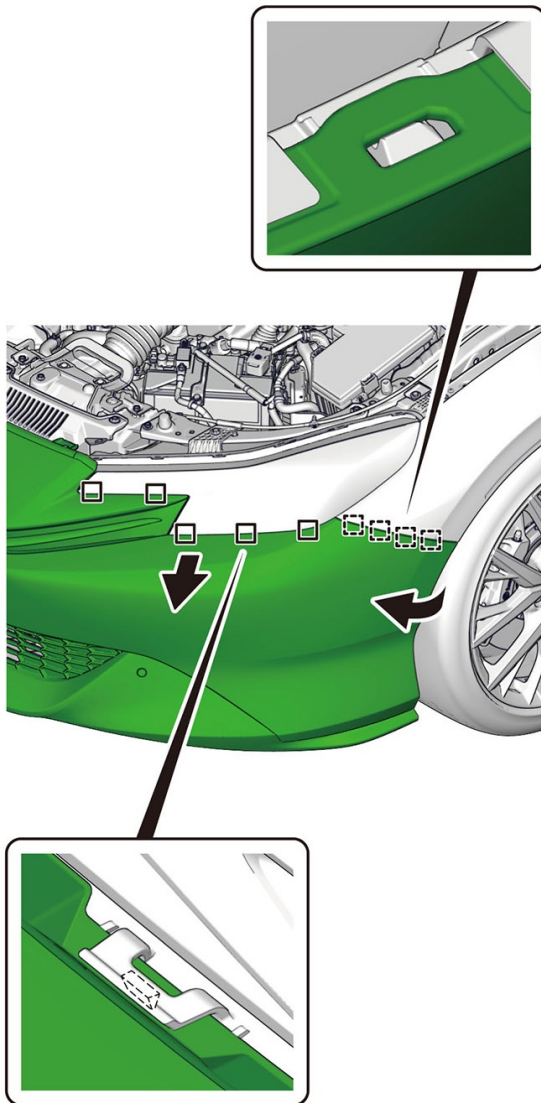



	RETAINING TAB
	RETAINING TAB

QP01805AD

6 Repeat step 5 on the other side.


7 Remove the front bumper.

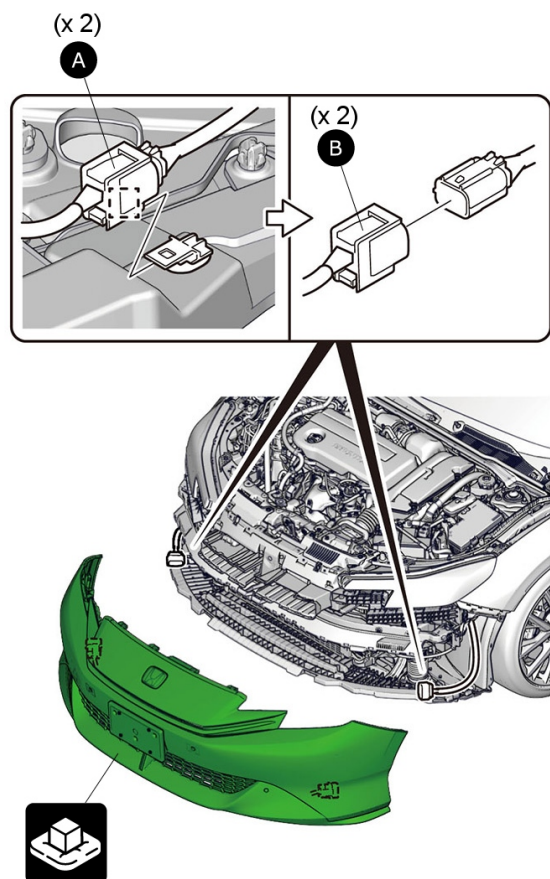

QP01806BD


Installing the H Emblem

8 Cut the pins.

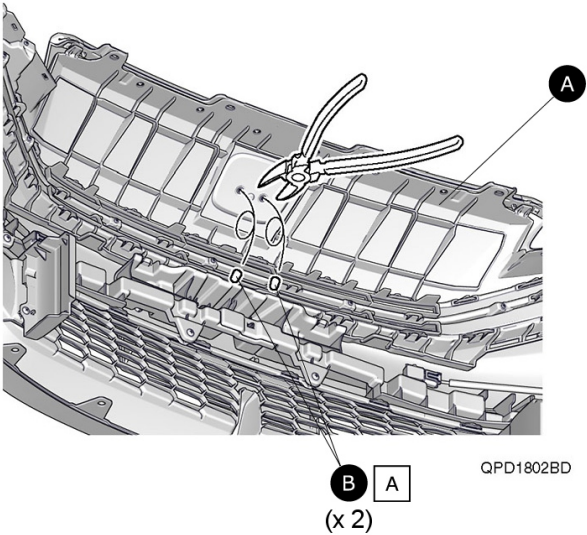

A	FRONT BUMPER (inside)
B	PIN
A	Cut.


9 Remove the push nuts.

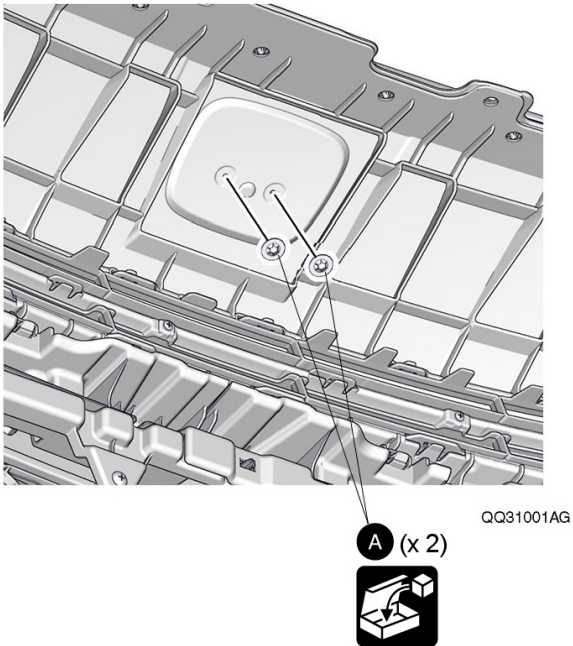

A	PUSH NUT
---	----------

10

Attach masking tape to protect the vehicle.

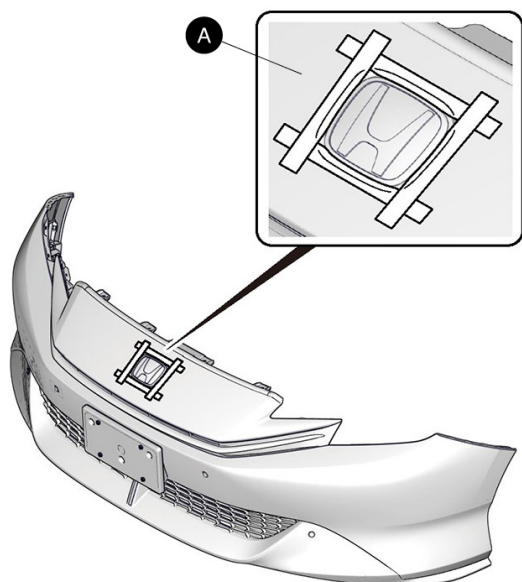

A	FRONT BUMPER (outside)
---	------------------------


QPN0802BN

11

Remove the vehicle H emblem.

NOTE

- Do not damage the front bumper when removing the vehicle H emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the front bumper.

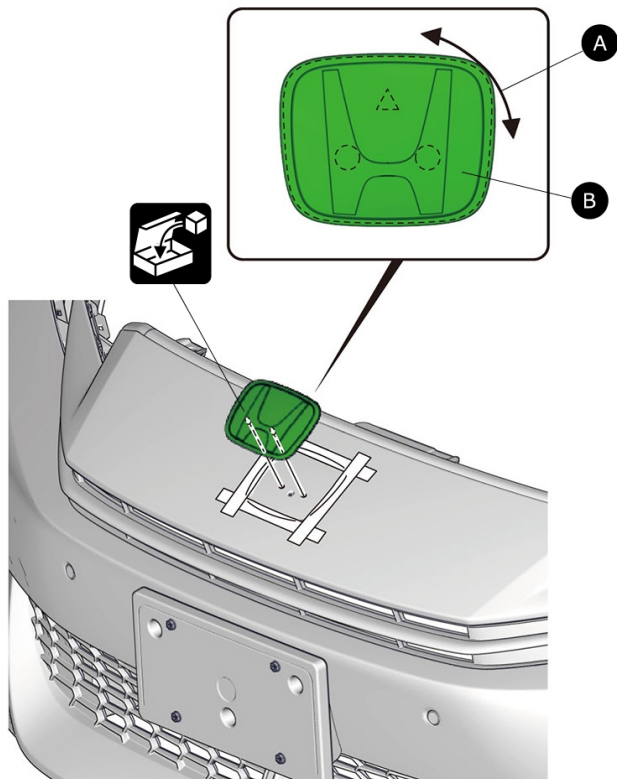

QPN0804BN

A	NYLON STRING MOVEMENT
B	ADHESIVE TAPE

12

Remove the masking tape.


13

Clean the attaching area.

NOTE


Allow to dry thoroughly.

ALCOHOL WIPE

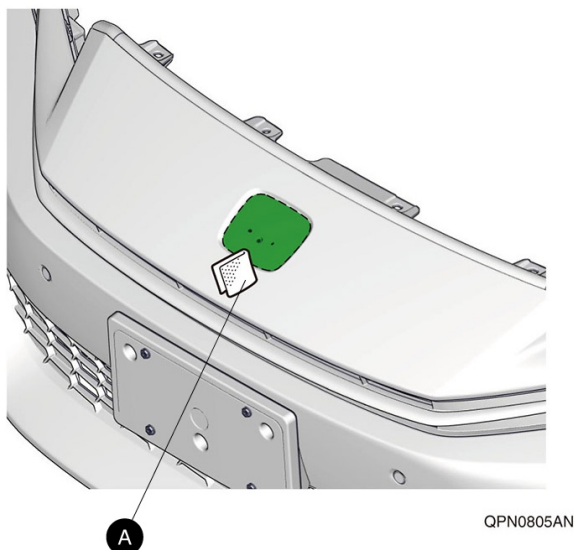

14

Attach the film.

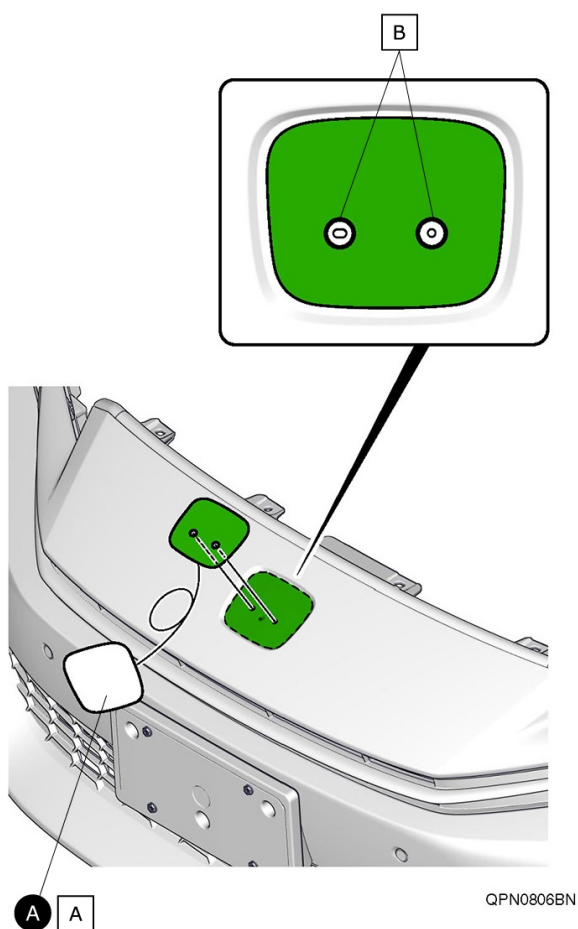

A	ADHESIVE BACKING
A	Remove.
B	Line up with the holes in the front bumper.


15

Clean the attaching area.

NOTE

Allow to dry thoroughly.

ALCOHOL WIPE

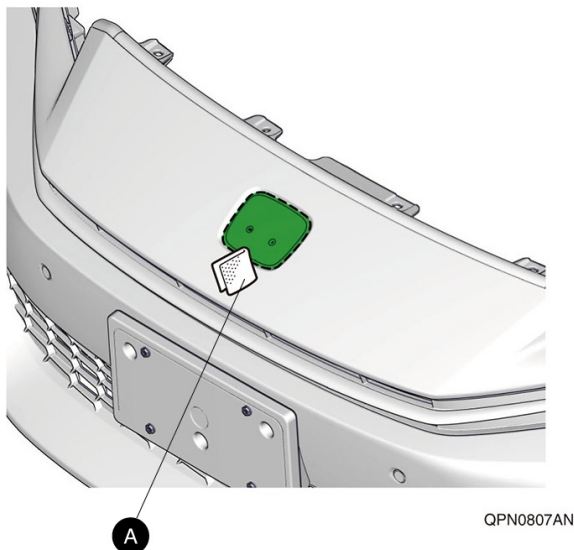


16

Install the new H emblem.

 NOTE

- Make sure to install the push nuts in the correct orientation.
- Check the position of double-sided adhesive tapes and make sure to press firmly.

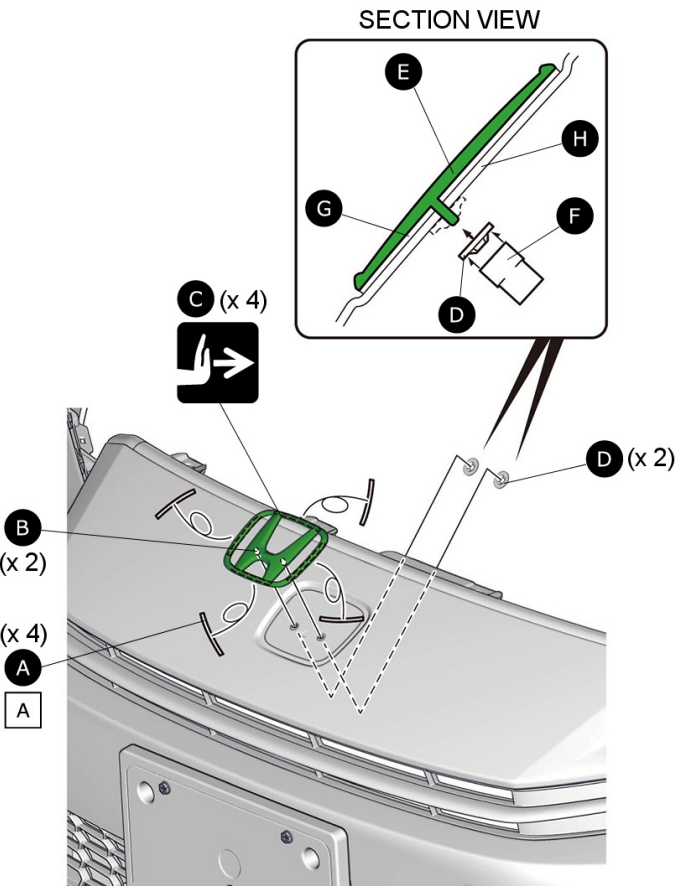

A	ADHESIVE BACKING
B	PIN
C	DOUBLE-SIDED ADHESIVE TAPE
D	PUSH NUT (supplied)
E	NEW H EMBLEM
F	6 mm SOCKET
G	FILM
H	FRONT BUMPER
A	Remove.

QPN0808AN


17 Secure the new H emblem.



QPN0809AN

Installing the Honda Emblem

18 Remove the guide form.

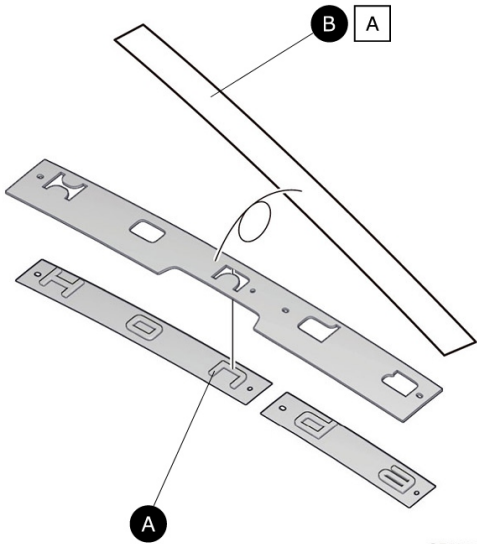


QPN0810AN

A	NEW Honda EMBLEM
B	POSITION FILM
A	Remove.

19

Install the guide form.



QPN1101AN

20

Attach masking tape.



QPN1102AN

21 Remove the guide form.




QPN1103AN

22 Remove the vehicle Honda emblem.

NOTE


- Do not damage the tailgate when removing the vehicle Honda emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tapes from the tailgate.

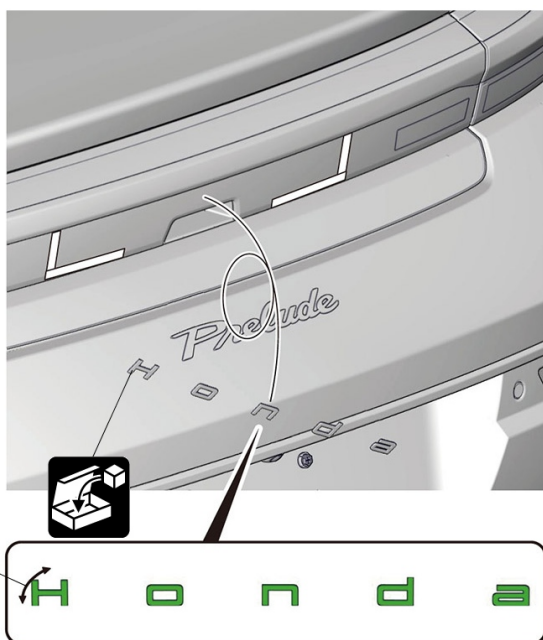


NYLON STRING MOVEMENT

QPN1104AN

23 Install the guide form.

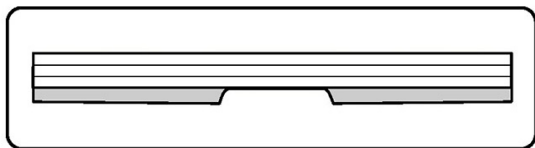

A	NEW Honda EMBLEM
---	------------------

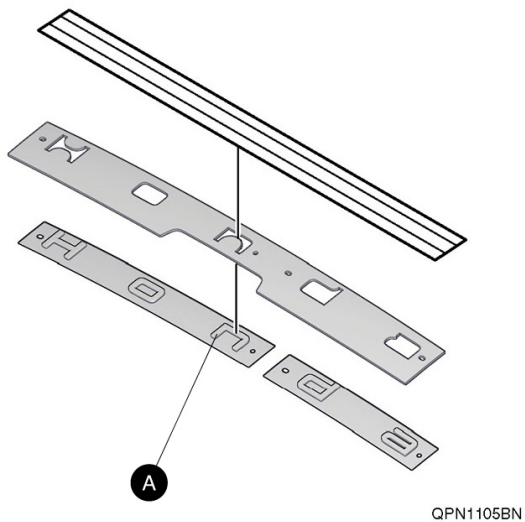


24 Attach masking tape.

25

Clean the attaching area.

NOTE

Allow to dry thoroughly.

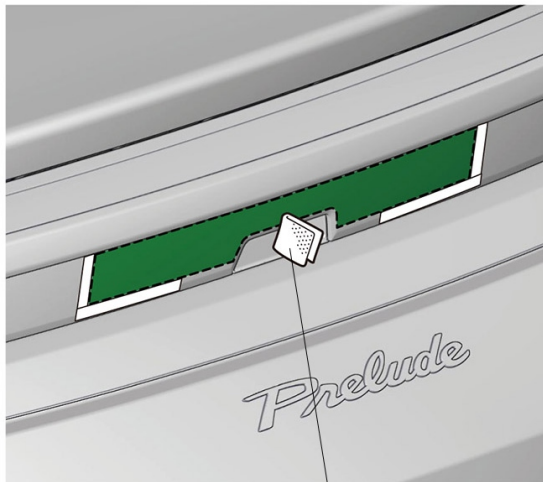

A

QPN1106AN

A


ALCOHOL WIPE

26

Attach the new Honda emblem.


 NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

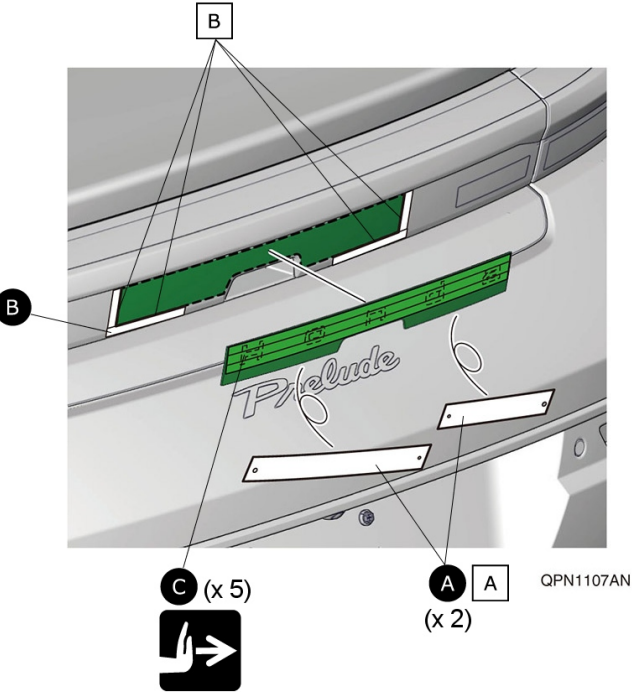

A	ADHESIVE BACKING
B	MASKING TAPE
C	DOUBLE-SIDED ADHESIVE TAPE
A	Remove.
B	Line up with the masking tape.

27 Secure the new Honda emblem.

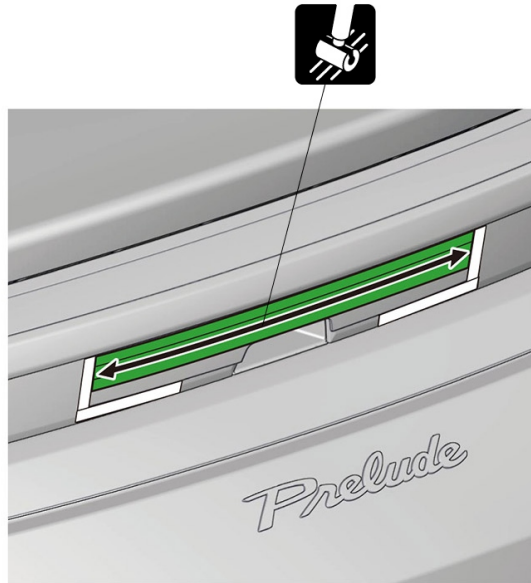

QPN1108AN

28 Remove the guide form.



QPN1109AN

29 Remove the masking tape.

Check After Installation

30 Check that all parts are installed and properly routed.

NOTE


- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

Installing All Removed Parts

31 Install all removed parts.

Vehicle Check

32 Connect the negative cable to the battery.

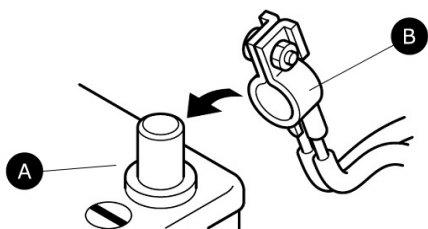

Q060702BM

A	BATTERY
B	NEGATIVE CABLE

33 Make sure all accessories and systems operate properly.

34 If necessary, restore the systems back to normal operation as described in the service information.

35 Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.