



INSTALLATION INSTRUCTIONS


Accessory
ARMREST WITH STORAGE

Application
2004 ODYSSEY


Publications No.
All 25996
Issue Date
AUG 2003

PARTS LIST


Armrest with storage

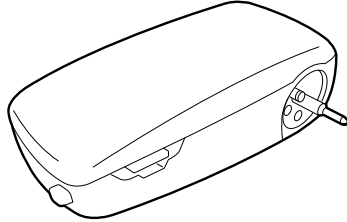

Base

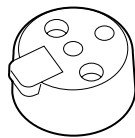

Plate

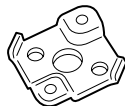


2 Socket bolts



2 Washer-bolts



Owner's Manual

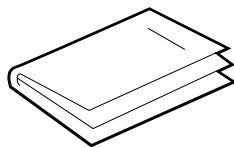


TOOLS REQUIRED

- Phillips screwdriver
- Flat-tip screwdriver
- Ratchet
- 14 mm and 17 mm Sockets
- 5 mm Hex wrench
- Torque wrench

INSTALLATION


NOTE: Be careful not to damage the seat-back when installing the armrest with storage.

1. Zip open the armrest cover on the existing driver's seat, and turn over the cover as shown.

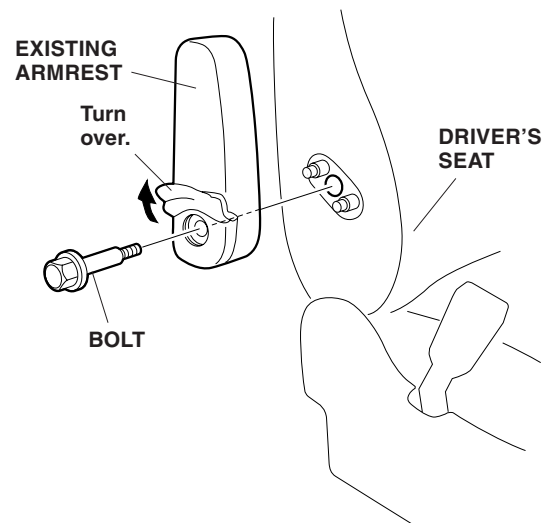


2. Remove the bolt that secures the existing armrest, and remove the armrest.


- Remove and discard two bolts from the pin base.

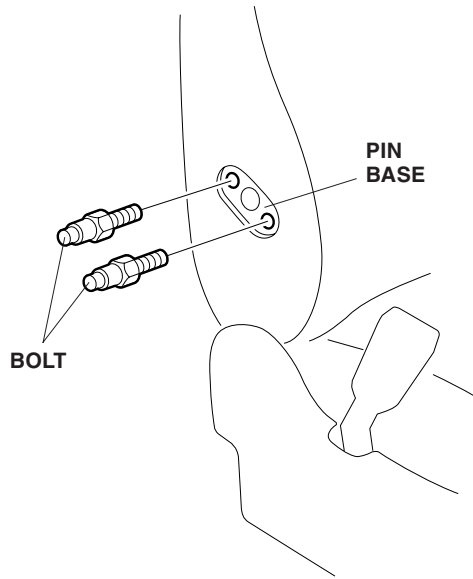


- Position the plate on the pin base, and install the two bolts. Torque the bolts to 38 N·m (28 lb-ft).

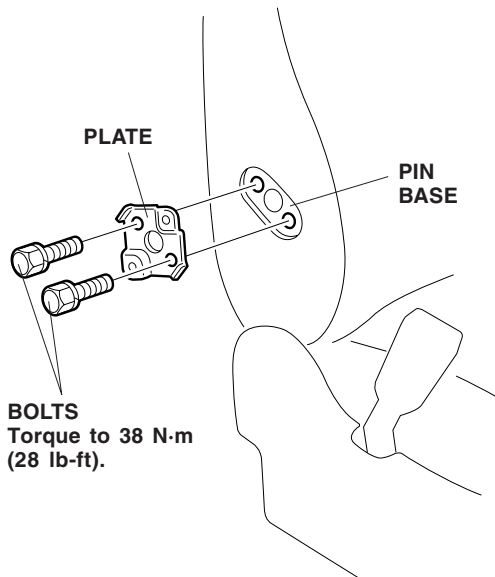

- Position the base on the plate, and install the two socket bolts. Torque the socket bolts to 10 N·m (7 lb-ft).

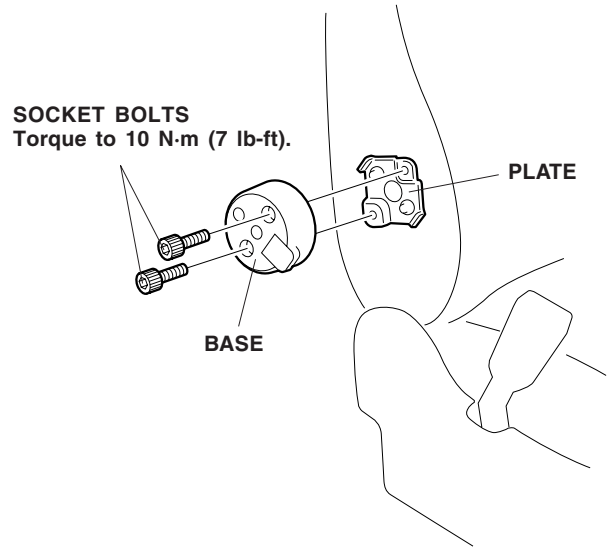

- While pressing down on the push knob, insert the pin and two tabs on the armrest into the holes in the base. Make sure that the recessed portion (white) of the push knob can be seen.

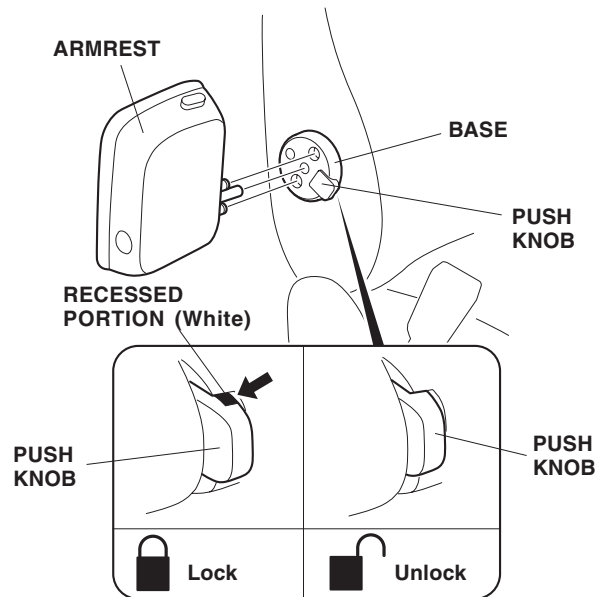

- After inserting the armrest, verify that the armrest locks securely.
- Check that the armrest operates properly by moving it up and down with your hand.
- Put the armrest Owner's Manual in the glove box.