



INSTALLATION INSTRUCTIONS

Accessory

HONDA MUSIC LINK
(FOR IPOD®)

Application

2008 ELEMENT
(EX)

Publications No.

All 36536


Issue Date

MAY 2007


PARTS LIST

Attachment Kit (sold separately)
P/N 08A28-1H1-800

4 Cushion tapes




Holder cushion

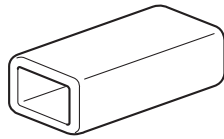


Grommet



8 Wire ties

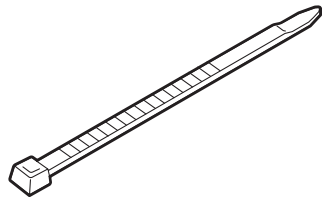


2 Long wire ties

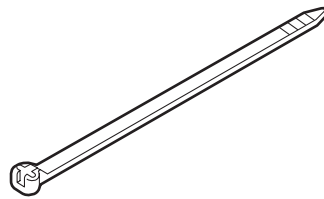


Music Link Adapter Kit (sold separately)
P/N 08A28-1H1-100


Music Link adapter unit

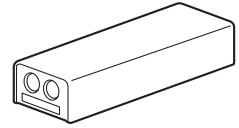


Bus cable

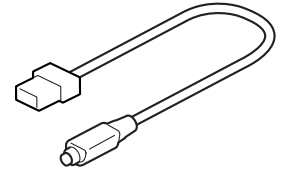


Music Link harness

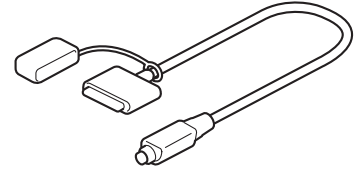

CD-ROM

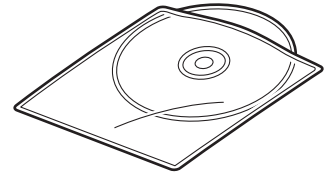


Quick reference guide

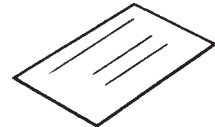

Bus Cable 2 Port (sold separately)
P/N 08A31-0F1-000


Bus cable 2 port

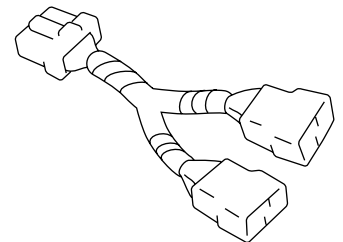

TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Diagonal cutters
Scissors
Ratchet
10 mm Socket
10 mm Combination wrenches
Drill
Drill bit (3 mm)
19 mm Hole saw (3/4")
Shop towel
Utility knife
Electrical tape
Pushpin
Eye protection
Isopropyl alcohol
Felt-tip pen

Illustration of the Music Link System Installed on the Vehicle

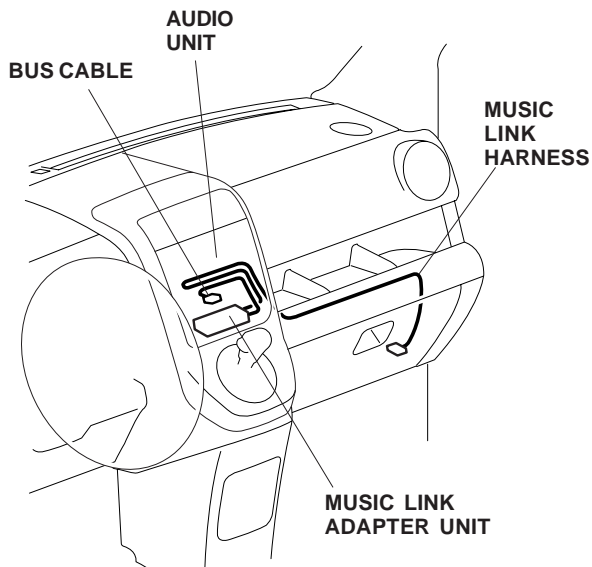


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.

3. Wrap the tip of the flat-tip screwdriver with electrical tape, and insert it into the grooves in the audio panel. Pull the audio panel out toward you to release the five clips, and remove the audio panel. Take care not to damage the clips.

5 CLIPS

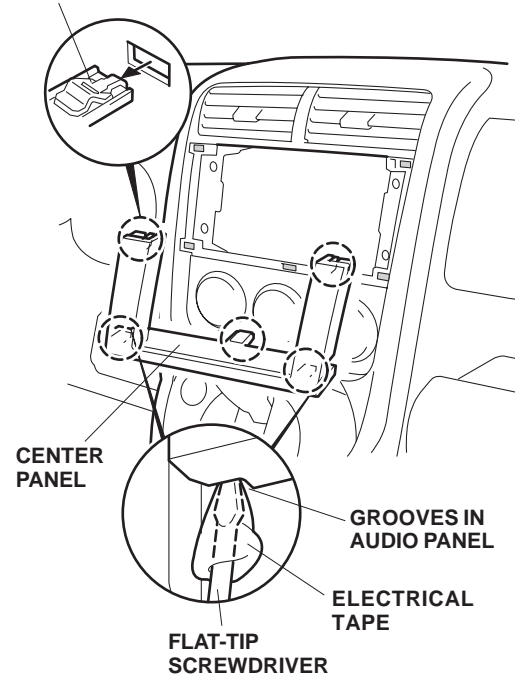


4. Remove the four washer-screws, and pull out the audio unit.

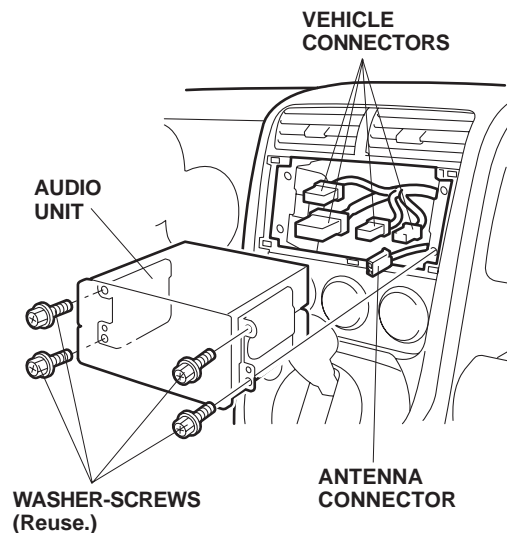


5. Disconnect the four vehicle connectors and the antenna connector, then remove the audio unit.


- Remove the center panel (release the eleven clips, and unplug the vehicle connectors).

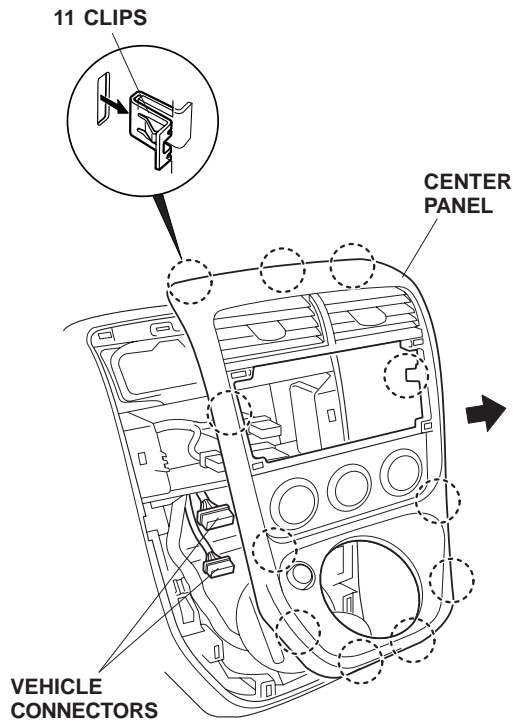


- Remove the passenger's lower dashboard cover (disengage the three clips, and disconnect the two pins).

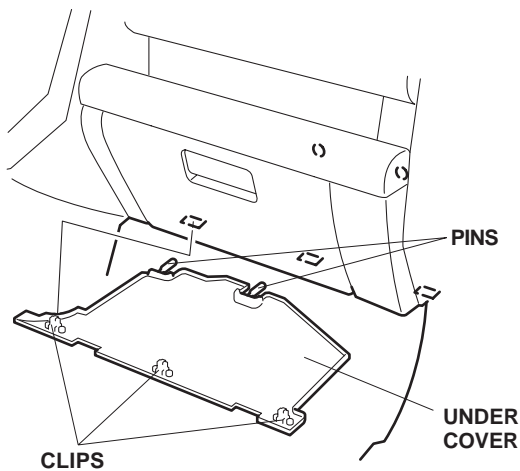


- Open the glove box, and remove the two stoppers by releasing the two retaining tabs for each stopper. Remove the two screws that fasten the glove box, then remove the glove box.

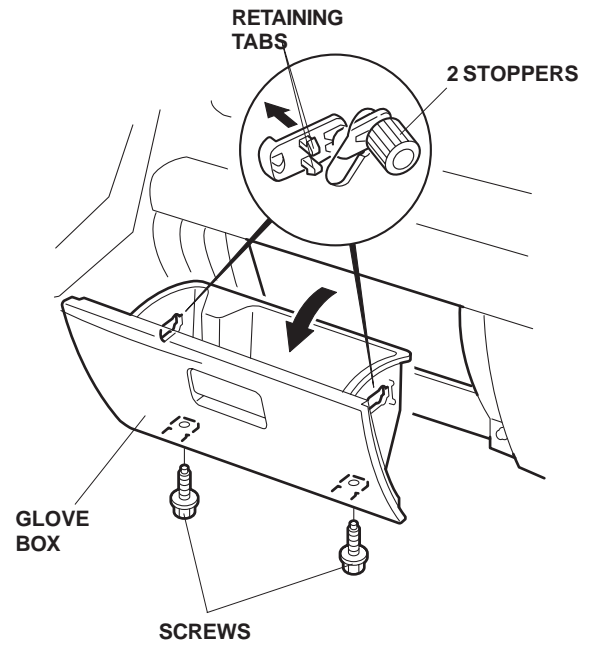


- At the center panel opening, route the bus cable as shown.

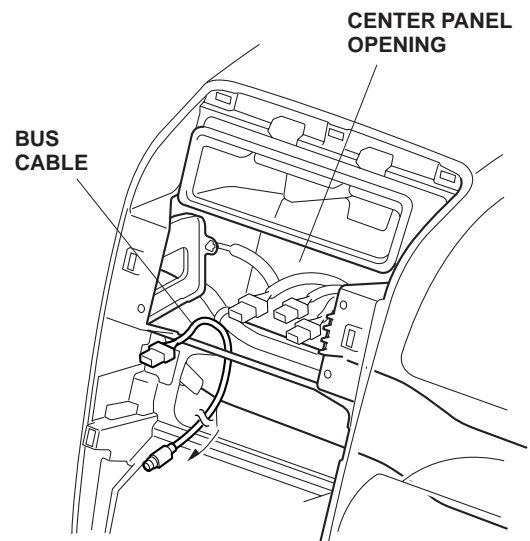


- Using a felt-tip pen, mark the music link harness at the location shown.

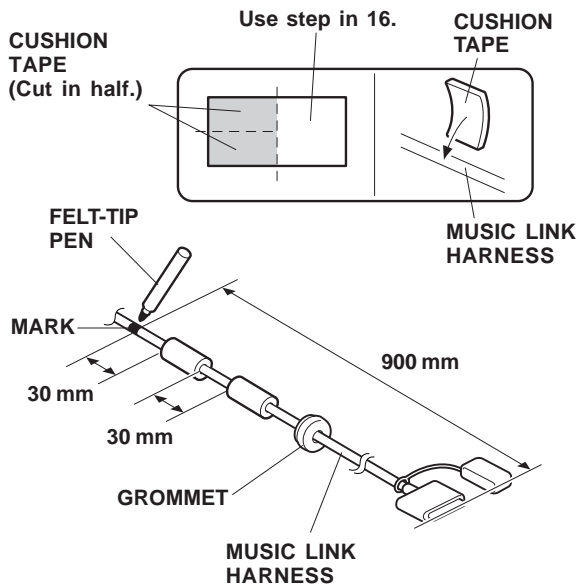


- Install the grommet through the Music Link harness.
- Cut one cushion tape into 3 pieces. Wrap the two smaller pieces of cushion tape to the Music Link harness.
- Cut the rib of the glove box as shown. After cutting the rib, thoroughly remove any burrs.

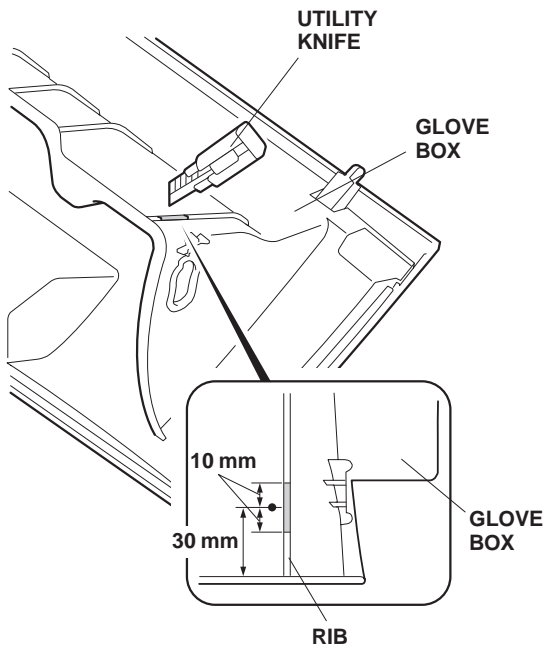


- To prevent damage, wrap electrical tape around the drill bit at a point about 30 mm away from the tip. While wearing eye protection, drill a 19 mm (3/4") hole through the marked location. Remove any burrs from the drilled hole.

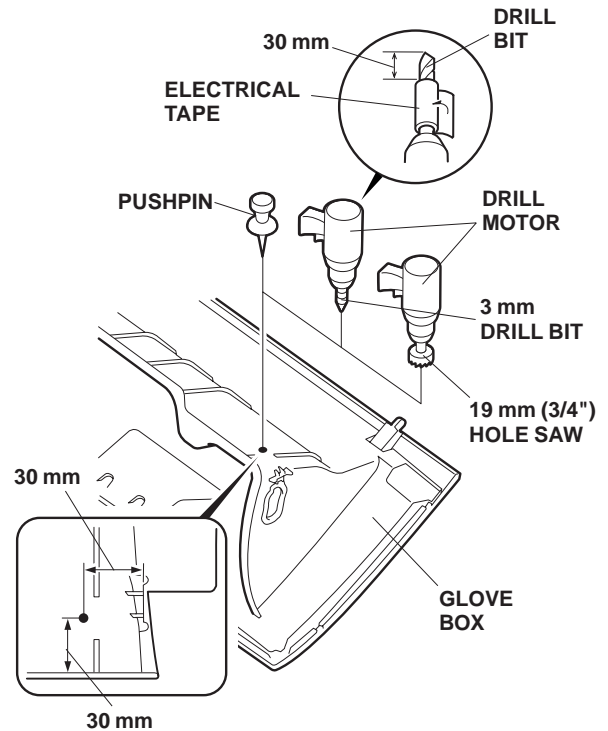


- Route the Music Link harness DIN connector into the 19 mm hole in the direction shown, and install the grommet to the 19 mm hole.

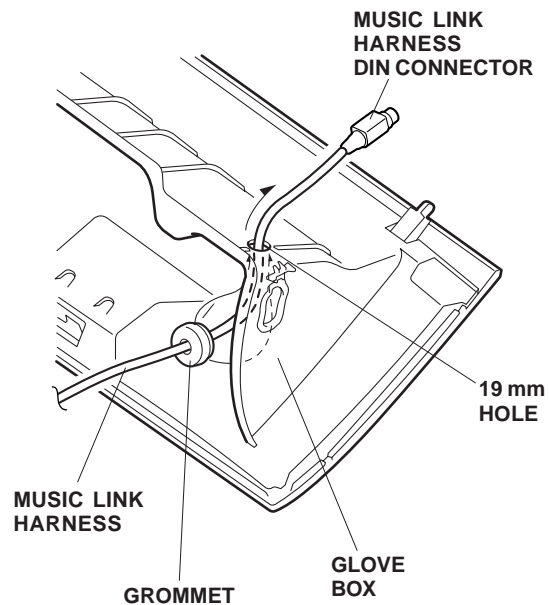


16. Clean the vehicle pipe with isopropyl alcohol where the cushion tape will attach. Attach a cushion tape (remaining piece of the cut cushion tape) to the vehicle pipe as shown.

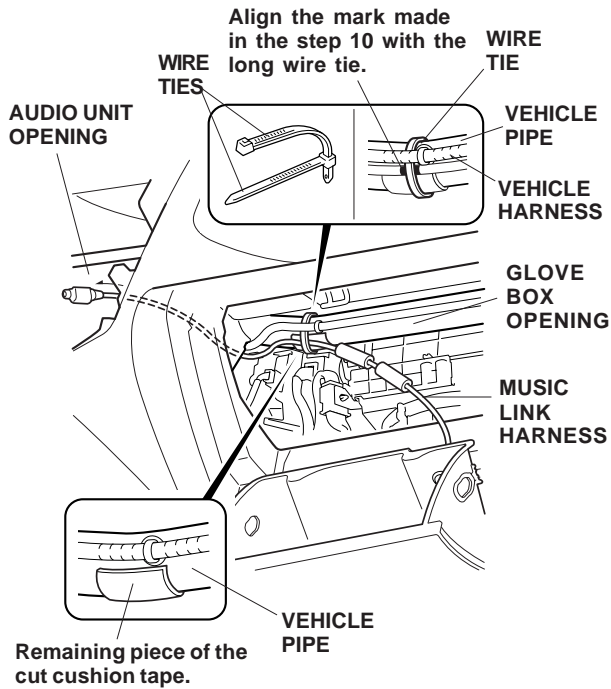


17. Route the Music Link harness to the audio unit opening from the glove box opening.
18. Secure the Music Link harness to the vehicle pipe (on the attached cushion tape) with the two wire ties. (Align the mark you made in step 10 with the wire tie as shown.)
19. Clean the vehicle pipe with isopropyl alcohol where the cushion tape will attach. Attach a cushion tape to the vehicle pipe.

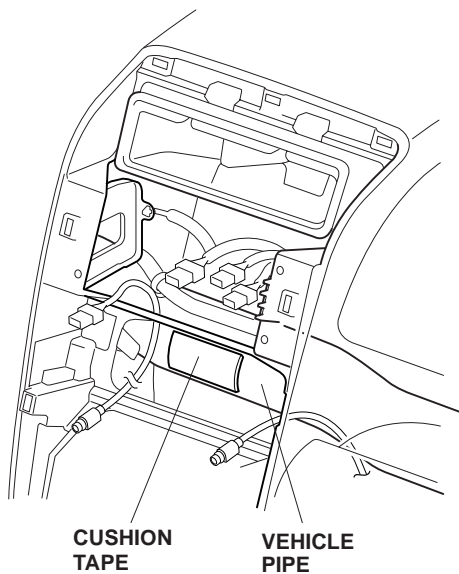


20. Insert the Music Link adapter unit into the unit cushion.

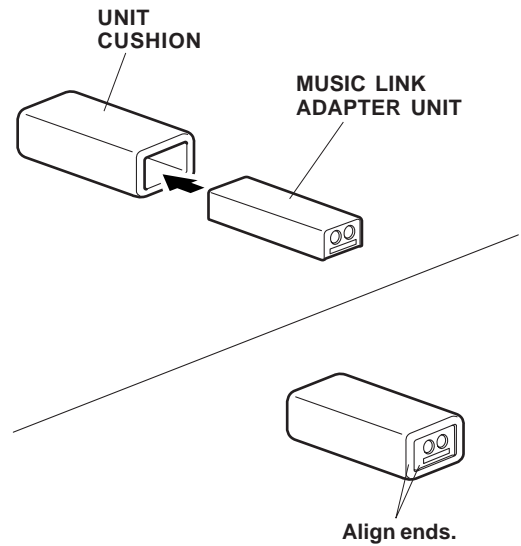

21. Route the Music Link harness and bus cable through the audio unit opening and connect the Music Link harness DIN connector (White) and bus cable DIN connector (Black) to the Music Link adapter assembly. Note the location of the connectors and the terminals.

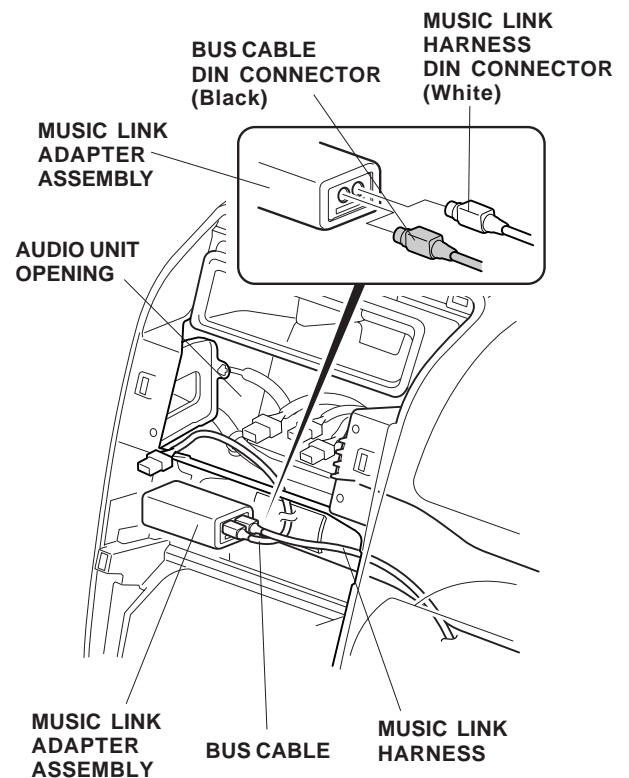


22. Secure the Music Link adapter assembly to the vehicle pipe with the two long wire ties.

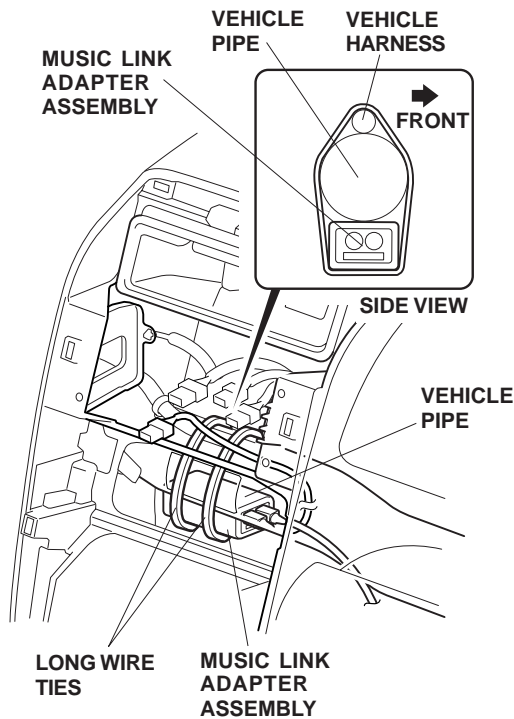


23. Secure the bus cable:

Without XM Radio or CD Changer: Align the bus cable 14-pin connector with the vehicle 20-pin connector. Bundle up the excess bus cable and Music Link harness, and secure the bus cable and Music Link harness to the vehicle harness with the two wire ties.

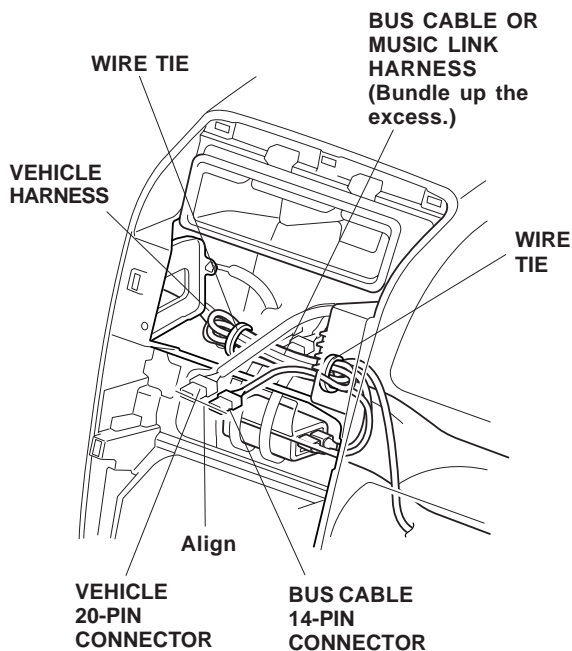


With XM Radio or CD Changer:

- Connect the bus cable 14-pin connector and vehicle 14-pin connector (for XM radio) or CD changer bus cable 14-pin connector to the bus cable 2 port 14-pin connectors.
- Attach one cushion tape around each bus cable 2 port 14-pin connector.

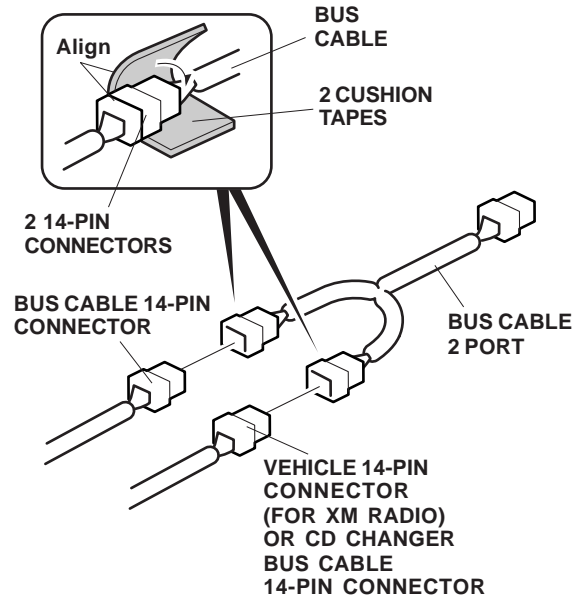


- Bundle up the vehicle harness or the CD changer bus cable. Secure the bus cable and bus cable 2 port with the two wire ties as illustrated.


VEHICLE HARNESS OR CD CHANGER BUS CABLE (Bundle up the excess.)

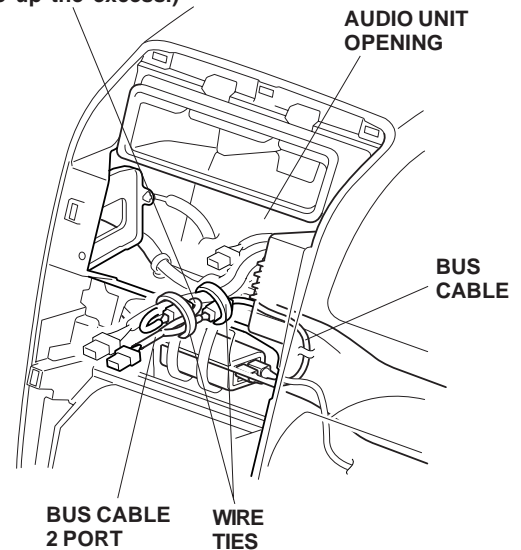


- Align the bus cable 2 port 14-pin connector with the vehicle 20-pin connector. Bundle up the excess bus cable and Music Link harness, and secure the bus cable and Music Link harness to the vehicle harness with the two wire ties.

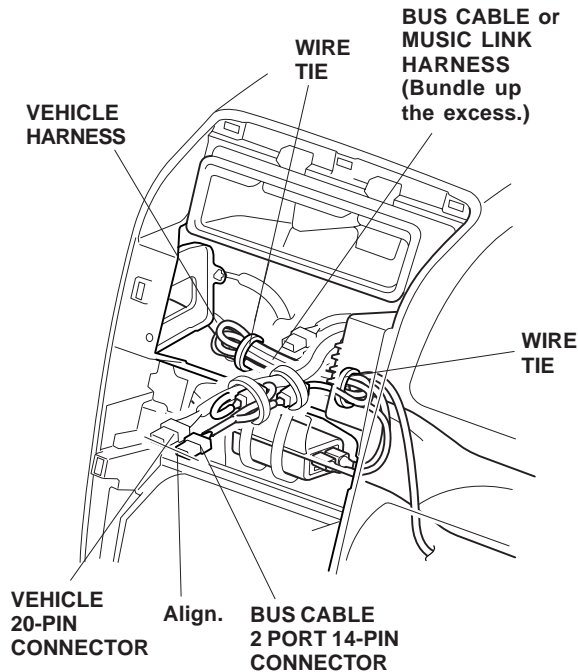

- Reinstall the glove box.

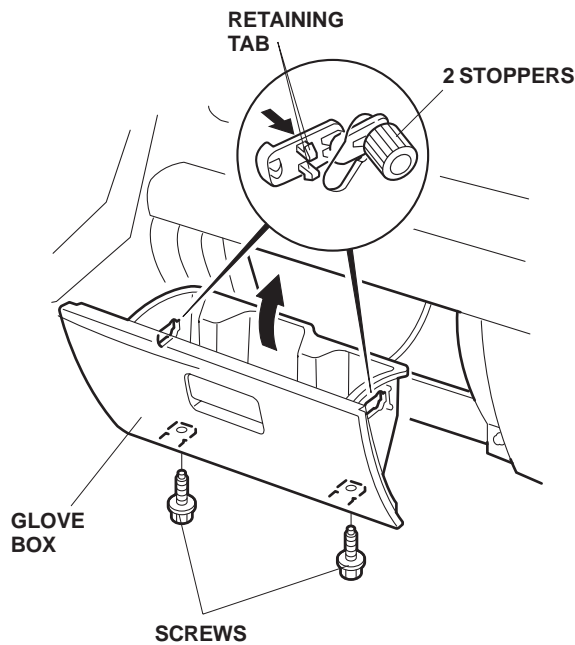

- Connect the vehicle connectors and bus cable 14-pin connector (or bus cable 2 port 14-pin connector) to the audio unit, and reinstall the audio unit.

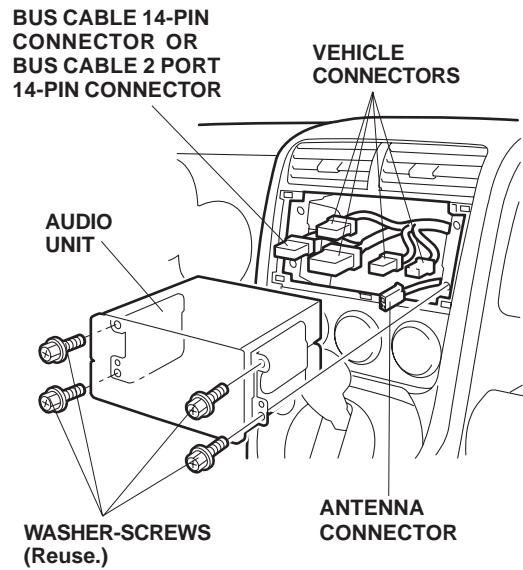

- Check that all wire harnesses are routed properly, and all connectors are plugged in.
 - Reconnect the negative cable to the battery.
 - Enter the customer's radio anti-theft code, and reset the radio station presets and the clock.
 - Reinstall all removed parts.
 - Turn the audio unit to ON. Check that "CD EJECT" is shown on the display while in the CD changer mode (the Music Link should be recognized as CD changer 4).
- NOTE: Whenever the battery is disconnected, the driver's window AUTO function is disable.
- Start the engine. Push down on the driver's window switch until the window is fully open.
 - Pull up on the driver's window switch fully to close the window completely, then hold the switch for 2 seconds or more.
 - Test the window AUTO function.