HONDA

INSTALLATION INSTRUCTIONS

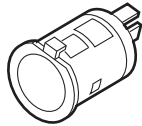| Accessory	Application	Publications No.
CIGARETTE LIGHTER **P/N 08U96-S9A-101**	**2010 CIVIC** **2- AND 4-DOOR**	**AII 42476**
		Issue Date **AUG 2009**

PARTS LIST
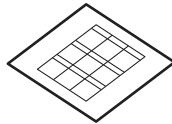
Cigarette lighter

Socket

Ring

Fuse label

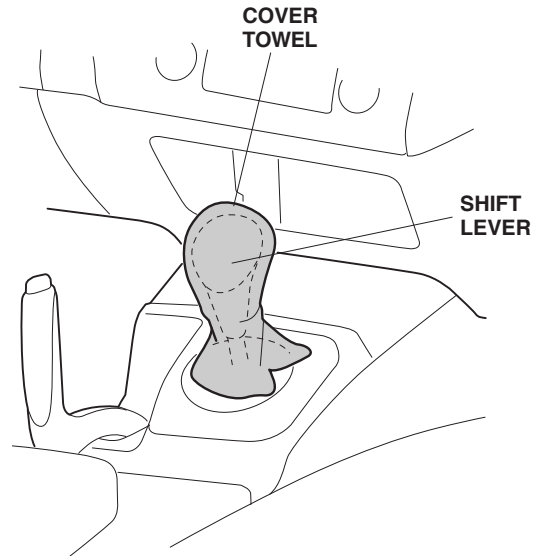## TOOLS AND SUPPLIES REQUIRED

Shop towel
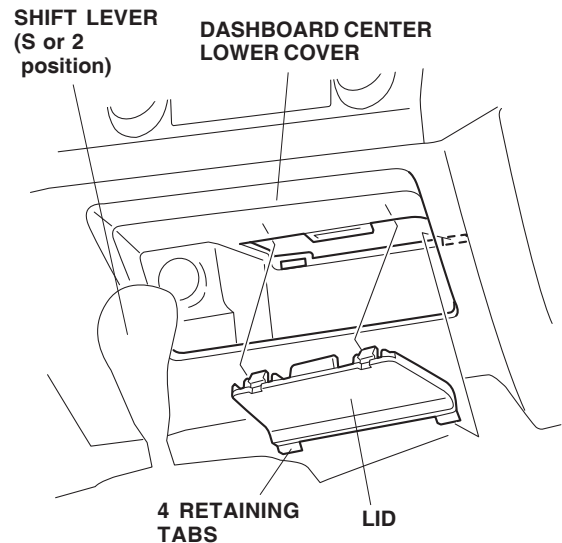
Small flat-tip screwdriver

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the audio unit, then write down the radio station presets.

2. Disconnect the negative cable from the battery.

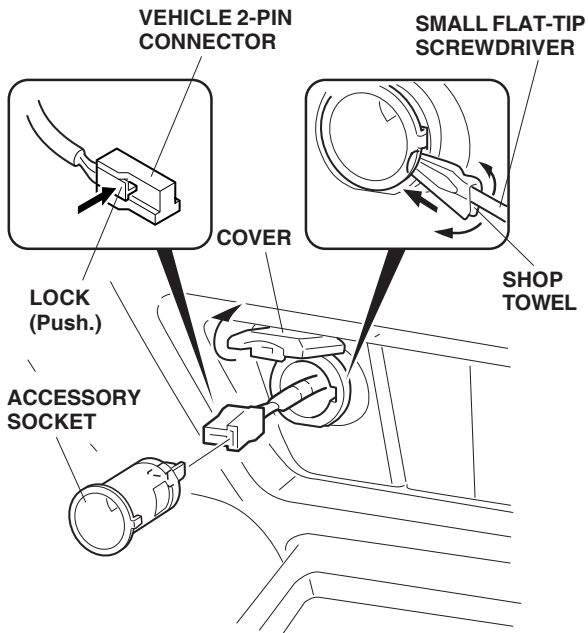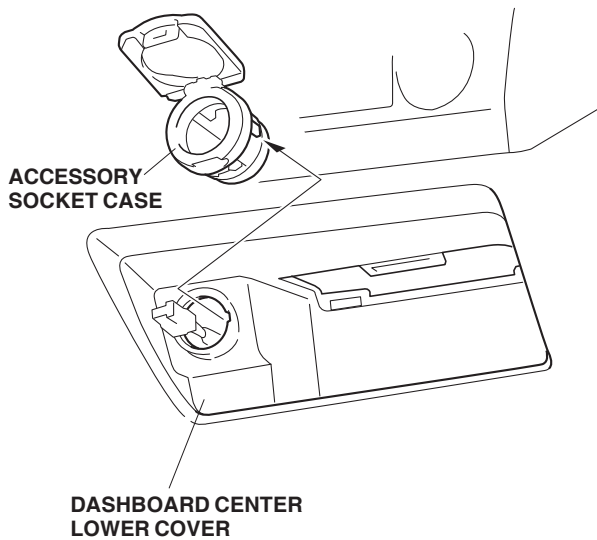3. Cover the shift lever with a shop towel to protect it from damage.

COVER TOWEL

SHIFT LEVER

4. Shift to S or 2. Remove the lid from the dashboard center lower cover (four retaining tabs).

SHIFT LEVER (S or 2 position)
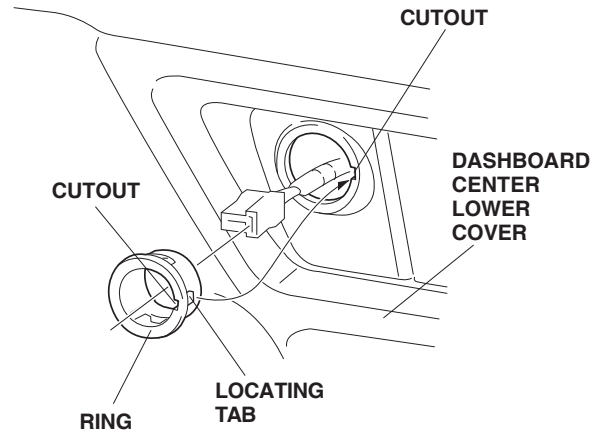
DASHBOARD CENTER LOWER COVER

4 RETAINING TABS

LID

5. Open the accessory socket cover. Using a shop towel around a small flat-tip screwdriver, gently pry on the accessory socket to pop it out. Disconnect the vehicle 2-pin connector from the accessory socket.
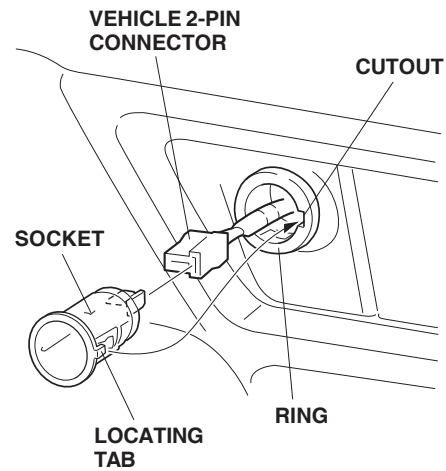
VEHICLE 2-PIN CONNECTOR

SMALL FLAT-TIP SCREWDRIVER

COVER

LOCK (Push.)

SHOP TOWEL

ACCESSORY SOCKET

6. Pull out the accessory socket case from the dashboard center lower cover.

ACCESSORY SOCKET CASE

DASHBOARD CENTER LOWER COVER

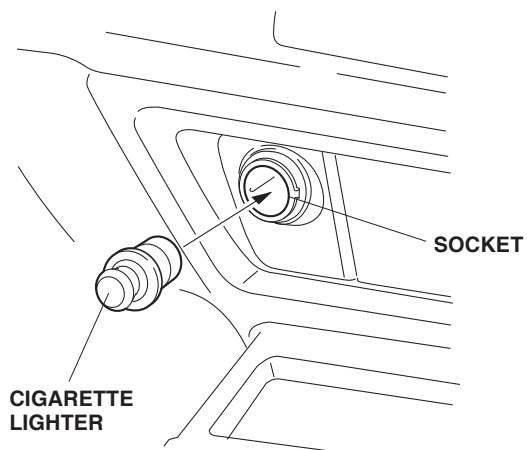7. Slide the ring into the hole in the dashboard center lower cover in the direction shown.

CUTOUT

CUTOUT

DASHBOARD CENTER LOWER COVER

RING

LOCATING TAB

8. Connect the vehicle 2-pin connector to the socket.

VEHICLE 2-PIN CONNECTOR
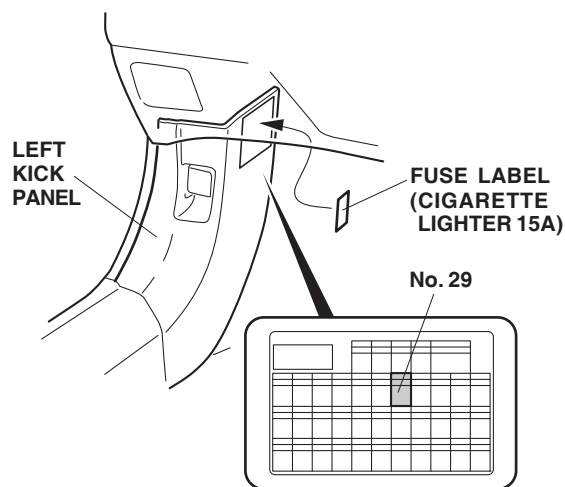
CUTOUT

SOCKET

LOCATING TAB

RING

9. Align the locating tab on the socket with the cutout in the ring, and slide the socket into the ring.

10. Push the cigarette lighter into the socket.

SOCKET

CIGARETTE LIGHTER

11. Attach the 15A fuse label to the No. 29 slot to the left kick panel.

LEFT KICK PANEL

FUSE LABEL (CIGARETTE LIGHTER 15A)

No. 29

12. Reinstall the lid in the dashboard center lower cover.

13. Reconnect the negative cable to the battery.

14. Enter the customer's audio unit anti-theft code, and reset the radio station presets.

15. Reset the clock.

16. Test the cigarette lighter.

17. Initialize the auto up/down function of the front windows.

AII 42476 (0908)