



**PARTS LIST**


Steering wheel cover

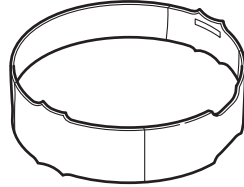

Needle

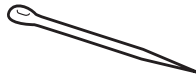

Lacing string

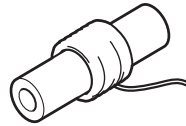**TOOLS AND SUPPLIES REQUIRED**

Shop towel

Gloves

Masking tape

Isopropyl alcohol


Scissors

**INSTALLATION****NOTE**

- Review all the steps before beginning work.
- Using isopropyl alcohol, thoroughly clean the steering wheel before installing the wheel cover.
- You may want to wear gloves to protect your hands during installation.


1. Center the steering wheel.

2. Put the steering wheel cover on the steering wheel so the adhesive tapes on the inside of the steering wheel cover and the cut-outs in the cover align with each spoke of the steering wheel.


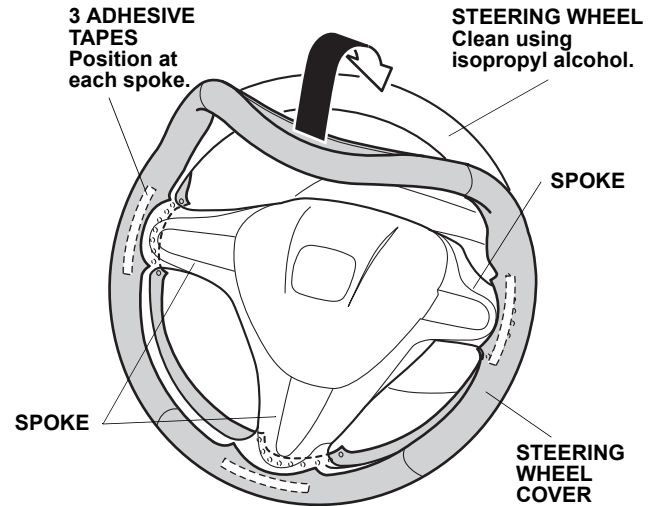


3. Locate the positions where the adhesive tapes will attach, and clean the steering wheel with isopropyl alcohol.
4. Fold back the front of the steering wheel cover. Peel back the adhesive backings partway as shown, and temporarily attach the backings to the front of the steering wheel cover with masking tape.


**3 ADHESIVE BACKINGS**  
(Peel back the adhesive backings and temporarily attach them to the front of the steering wheel cover with masking tape.)

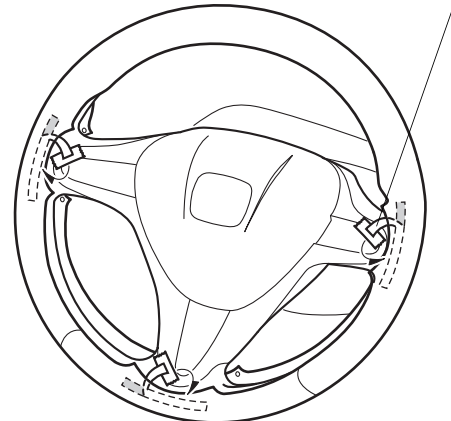


5. Thread the lacing string onto the needle. Make inclined stitches in the back of the steering wheel cover up to the hole that is right above the spoke as shown. Stick the needle into the steering wheel cover at the point marked below, and start stitching.

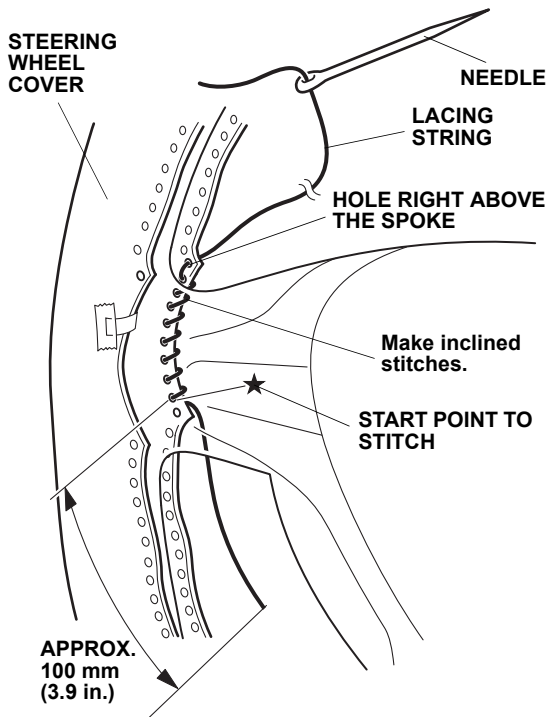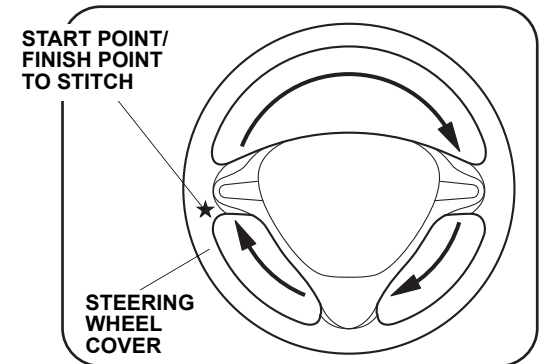


6. Stitch twice at the hole right above the spoke, and pull the lacing string to close the seam securely. Pull the lacing string securely to bring both ends of the steering wheel cover together very closely.

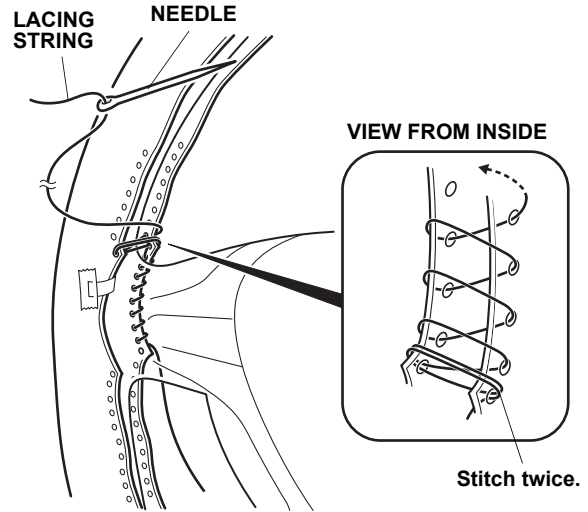


7. Keep stitching the steering wheel cover so the stitches show the inclined line pattern (right side up) until you get to the fourth stitch, then go to step 8.
- Pull the lacing string and close the seam securely at each stitch.
  - Keep stitching the steering wheel cover so the seam follows the center line on the inside of the steering wheel.

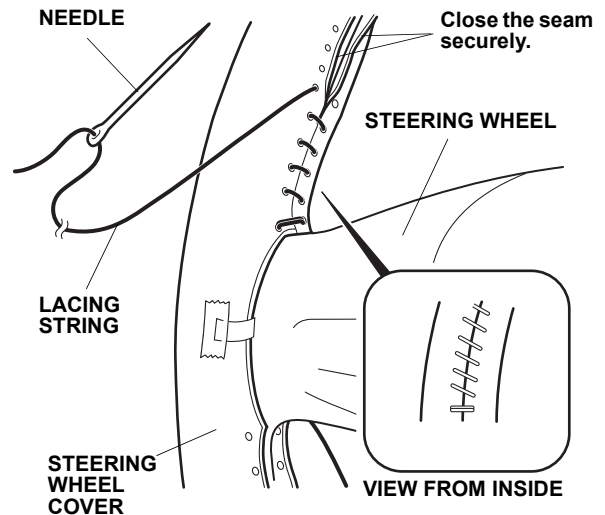

- Keep stitching while adjusting the steering wheel cover so the joints on both sides of the cover are aligned.

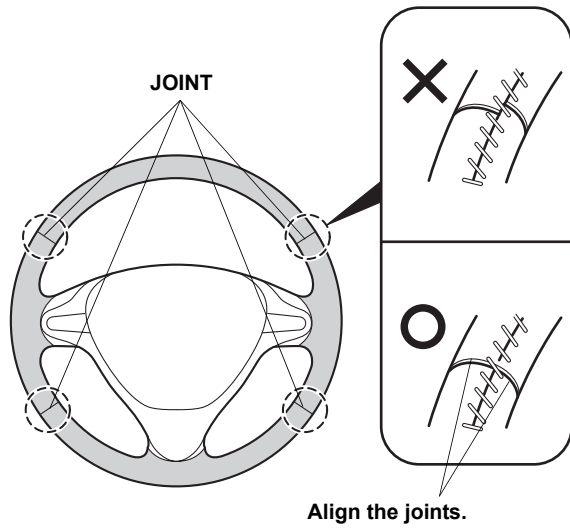


- Stitch the spoke area of the steering wheel cover as shown. Stitch twice at the holes in the steering wheel cover that are right above and right below the spoke.

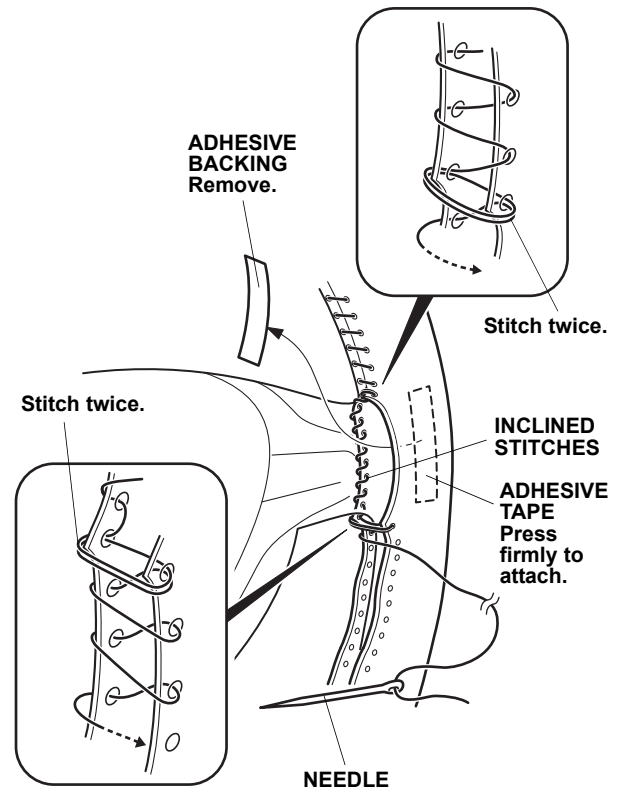

- Remove the adhesive backings on the spoke, and press the adhesive tapes firmly to attach.
- Stitch the lower part of the steering wheel cover in the same manner.

12. After stitching the steering wheel cover and before removing the adhesive backings, pull the finishing end of the lacing string out of the joint of the steering wheel cover. Be sure that both the starting end and finishing end of the lacing strings are out of the joint of the steering wheel cover.

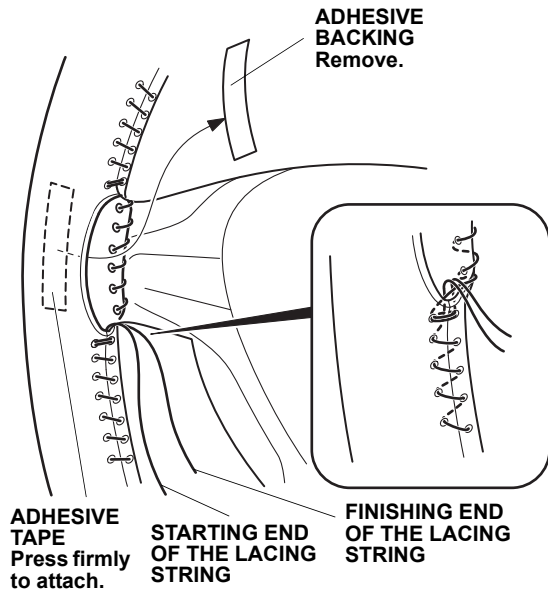

13. Make a knot twice in the end of the lacing strings, and cut off the excess.
14. Put the knots inside the steering wheel cover.
15. Remove the adhesive backings on the spoke, and press the adhesive tapes firmly to attach.