

INSTALLATION	Accessory	Application	Publications No. All 13244	
	STEERING WHEEL COVER	2013 FIT	Issue Date JULY 2012	
PARTS LIST Steering wheel cover	2.	so the adhesive tapes or	over on the steering wheel In the inside of the steering spoke of the steering whee STEERING WHEEL Clean using	
Needle		Position at each spoke.	isopropyl alcohol.	
			SPOKE	
Lacing string	Si Si	POKE	STEERING	
TOOLS AND SUPPLIES REQUIRI	ED		COVER	
Shop towel Gloves Masking tape Isopropyl alcohol Scissors	3.	attach, and clean the steering wheel with isopropralcohol.4. Peel back the adhesive backings partway. Use		
		pieces of masking tape to tape the ends of the adhesive backings to the outer surface of the cover		
		<u>j</u>		
 NOTE Using isopropyl alcohol, thoroug wheel before installing the whee 				
 You may want to wear gloves to protect your hands during installation. 		3 ADHESIVE BACKINGS		
 Center the steering wheel. 			Peel back.	


5. Thread the needle. Make inclined stitches in the steering wheel cover up to the hole that is right above the spoke as shown. Insert the needle into the hole in the steering wheel cover at the point marked below, and start stitching.

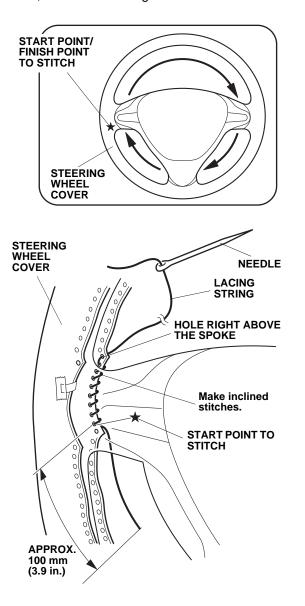


6. Stitch twice through the holes right above the spoke, and pull the lacing string to close the seam securely.

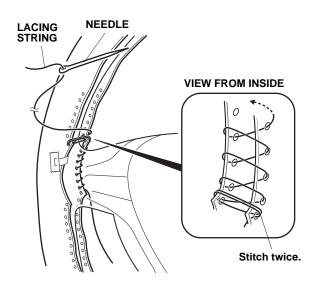


- 7. Keep stitching the steering wheel cover so the stitches show the inclined line pattern (right side up).
 - Pull the lacing string and close the seam securely at each stitch.
 - Keep stitching the steering wheel cover so the seam follows the center line on the inside of the steering wheel.

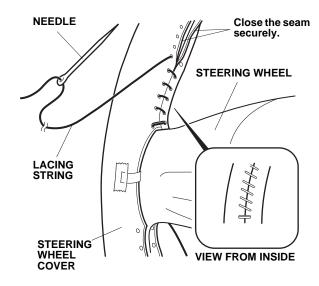

8. Keep stitching while adjusting the steering wheel cover so the joints on the cover are aligned.

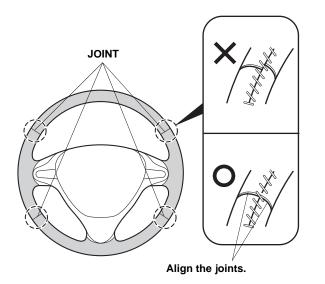


9. Stitch the spoke area of the steering wheel cover as shown. Stitch twice at the holes in the steering wheel cover that are right below and right above the spoke.

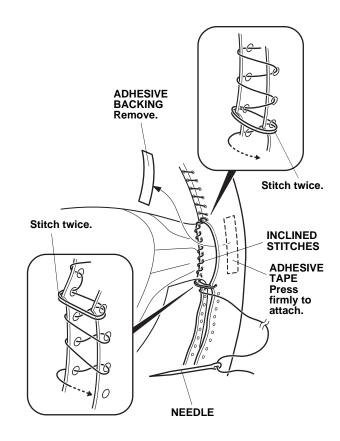

- 10. Remove the adhesive backings on the spoke, and press the adhesive tapes firmly to attach.
- 11. Stitch the lower part of the steering wheel cover in the same manner.

12. After stitching the steering wheel cover while removing the adhesive backings, pull the finishing end of the lacing string out of the joint of the steering wheel cover. Be sure that both the starting end and finishing end of the lacing strings are out of the joint of the steering wheel cover.

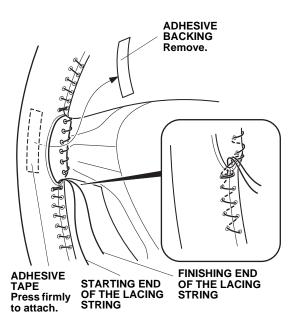

- 13. Make a knot twice in the lacing strings, and cut off the excess.
- 14. Put the knots inside the steering wheel cover.
- 15. Remove the adhesive backings on the spoke, and press the adhesive tapes firmly to attach.