

INSTALLATION INSTRUCTIONS

Accessory

CASSETTE/IN-DASH 6-DISC CD CHANGER **ATTACHMENT KIT**

Application

AII 38194 2008 ODYSSEY

Issue Date


Publications No.

OCT 2007


PARTS LIST

Player Attachment Kit (sold separately): P/N 08B06-SHJ-100

Player bracket

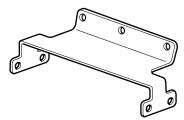


Trim



Bus cable



6 Wire ties




2 Clips



Cassette Player (sold separately): P/N 08A03-5E1-000

Cassette player

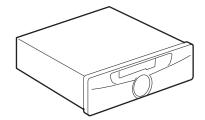

4 Washer-screws, 5 x 8 mm




Accessory User's Information Manual



MP3 Player (sold separately): P/N 08A06-4E1-200

MP3 player



4 Washer-screws, 5 x 8 mm




Accessory User's Information Manual



In-Dash CD Changer (sold separately): P/N 08A06-3E1-300

In-Dash CD changer



6 Washer-screws, 5 x 8 mm (2 not used)



Washer-screw, 4 x 6 mm



Wire tie (not used)



Harness clip



Accessory User's Information Manual



2 Felt strips (not used)




TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Ratchet
10 mm Socket
10 mm Combination wrenches


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


- 1. Make sure you have the anti-theft code for the radio, then write down the radio station presets.
- 2. Disconnect the negative cable from the battery.
- 3. Place the shift lever in the N (Neutral) position.
- 4. Remove the center panel (nine clips, and disconnect the vehicle connectors).

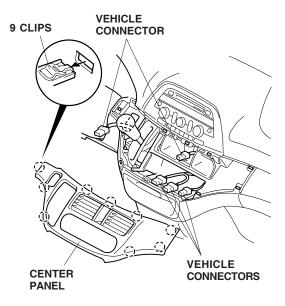


5. Remove the pocket (two bolts and two clips).

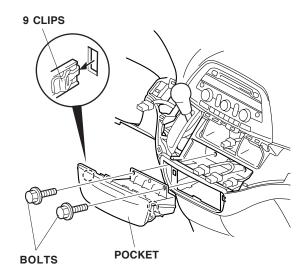


6. Remove the audio unit (three self-tapping screws, two clips, and disconnect the vehicle connectors).

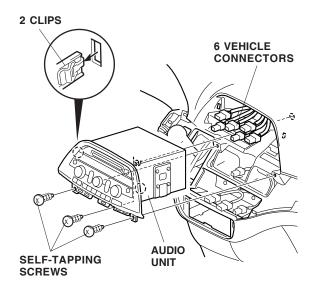

7. Remove the damper arm cover and disconnect the arm.

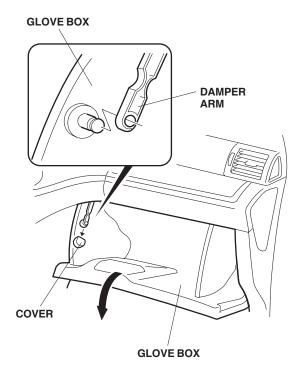



8. Open the glove box and remove the two stops by releasing the two retaining tabs. Remove the two screws that fasten the glove box, and remove the glove box.

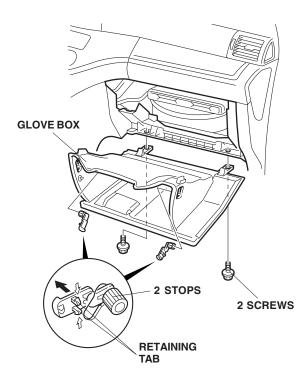


Routing the Harness

9. Align the end of the bus cable with the end of the vehicle 20-pin connector, then route the bus cable towards the glove box opening.

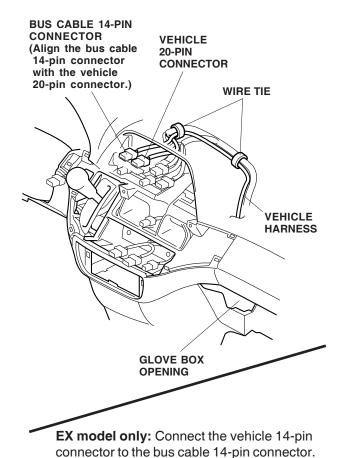


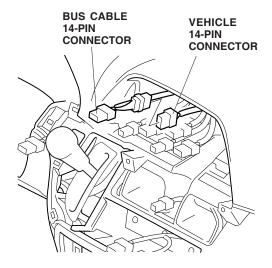

 Inside the upper dashboard opening, secure the bus cable to the vehicle harness with two wire ties. 12. Inside the glove box opening, secure the bus cable to the vehicle harness with two wire ties.

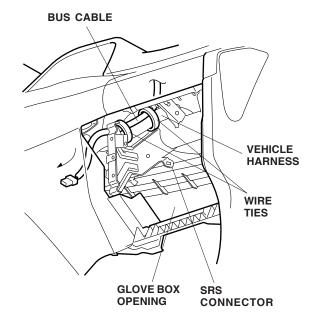


13. Route the bus cable from the glove box area to the pocket opening. Secure the bus cable to the vehicle harness with two wire ties.

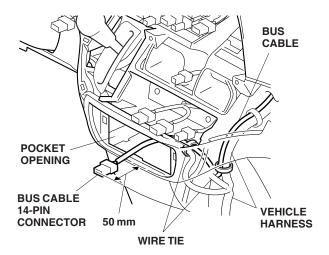


Installing the Player

14. Get the player and the trim. Install the trim on the player.

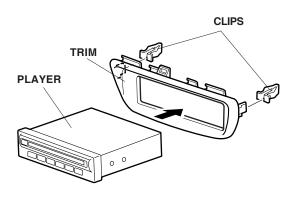


- 15. Install the two clips to the trim.
- 16. If you are installing an in-dash CD changer, install the harness clip to the back of the in-dash CD changer using the 4 x 6 mm washer-screw.


 Secure the connector with the harness clip.

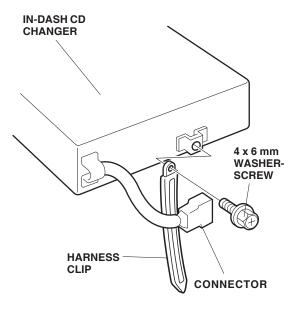


17. Connect the bus cable 14-pin connector to the player, and set the player in the pocket opening.

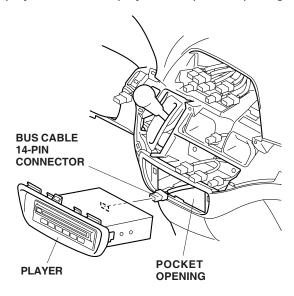

18. Pull out the player. Position the player bracket on the player and tighten the four 5 x 8 mm washerscrews as shown.

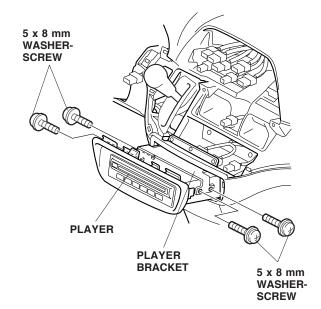

19. Install the player in the player opening using the two vehicle bolts removed in step 5.

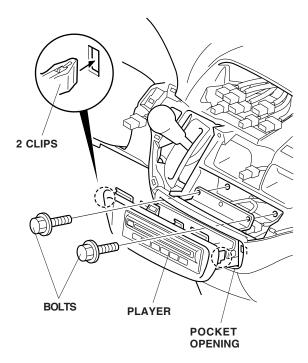

- 20. Reinstall all removed parts.
- 21. Reconnect the negative cable to the battery.
- 22. Check the operation of the player according to the Accessory User's Information Manual provided.
- 23. Put the Accessory User's Information Manual in the glove box.
- 24. Reset the clock and customer's radio station presets.

NOTE: Whenever the battery is disconnected, the driver's window AUTO function is disabled.

- Start the engine. Push down on the driver's window switch until the window is fully open.
- Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
- Test the AUTO window function.