

**INSTALLATION
INSTRUCTIONS**

Accessory

**INTERIOR BICYCLE RACK
P/N 08L07-S0X-100F**

Application

2004 ODYSSEY


Publications No.

All 26016


Issue Date

AUG 2003**PARTS LIST**


Holder

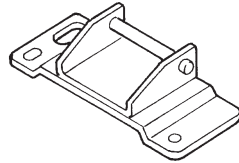


Bracket

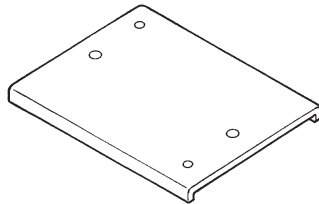


Quick shaft

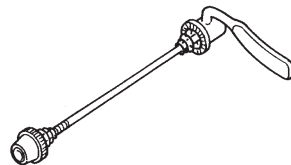

Belt



2 Velcro fasteners

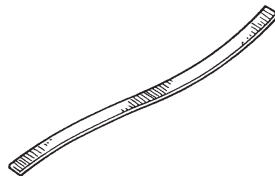

2 Washer-bolts



2 Washer-screws

**TOOLS AND SUPPLIES REQUIRED**

12 mm Combination wrench

Phillips screwdriver

Awl

Felt-tip pen

Gloves

Utility knife

Tape measure

Drill


3 mm, 6 mm and 12 mm Drill bits

File


Eye protection (face shield, safety goggles, etc.)

INSTALLATION

1. Remove the headrest and fold down the rear seat.

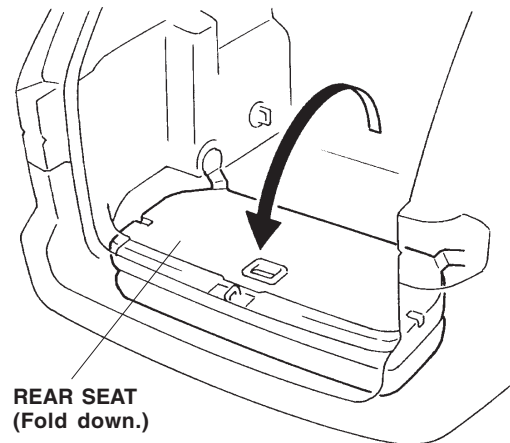


2. Remove the rear seat handle (two self-tapping screws).

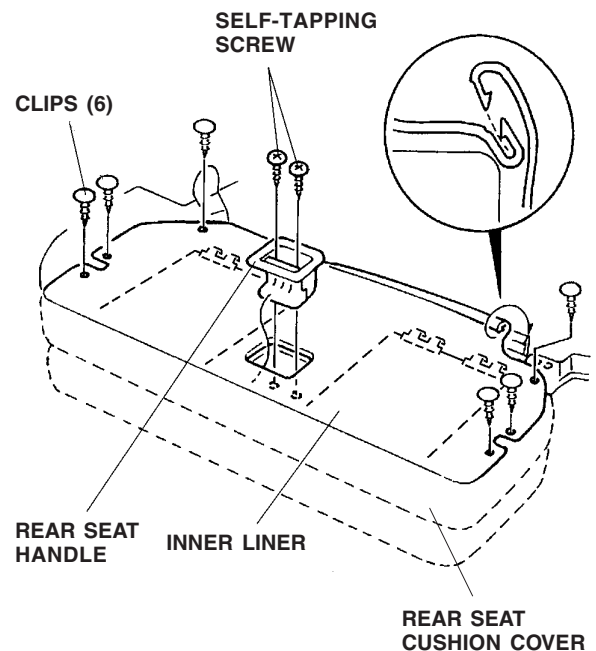


3. Remove the six clips, and unhook the bottom of the cushion cover; then fold the rear seat cushion cover back and out of the way.
4. Detach the four plastic clips securing the inner liner, and fold the inner liner back.

- Using a tape measure and felt-tip pen, measure and mark the seat frame.

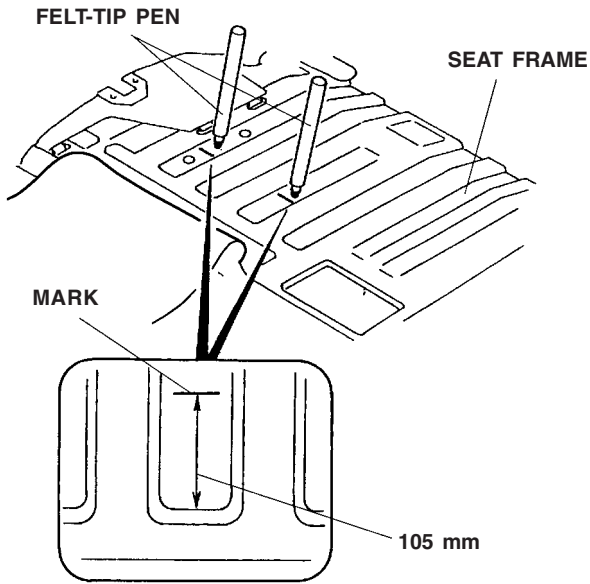


- Set the bracket on the seat frame at the marks you made in step 5; align the large hole in the bracket over the existing hole in the seat frame.

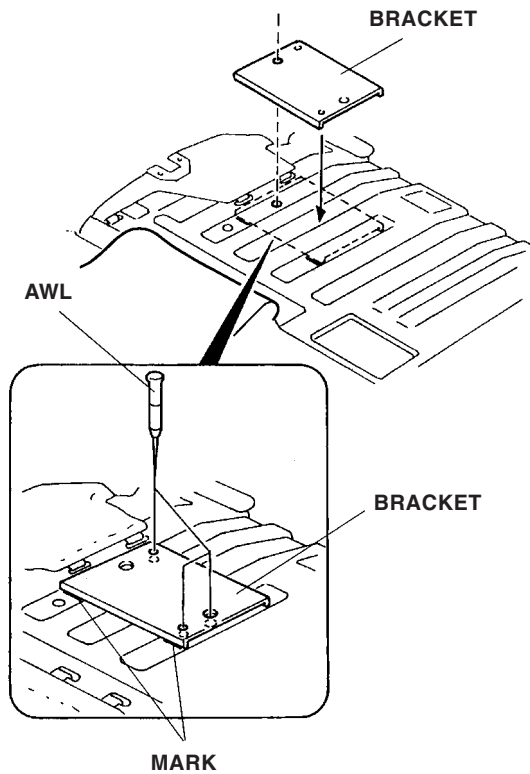


- While holding the bracket in place, mark the seat frame through the three holes using an awl. Remove the bracket.

- While wearing eye protection, center-punch and drill a 12 mm hole and two 6 mm holes through the marks you made.


- First drill with a 3 mm bit, then with a 6 mm bit, and finish with a 12 mm bit.
- After drilling, remove all burrs and apply touch-up paint.

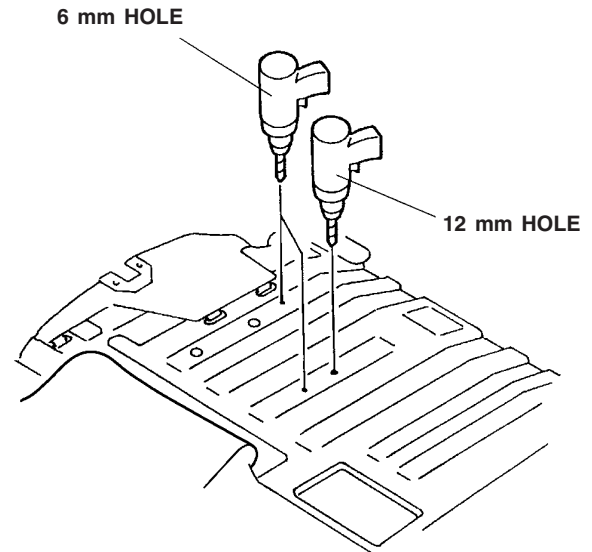


- Temporarily reinstall the rear seat handle with the two self-tapping screws, then unfold the rear seat.

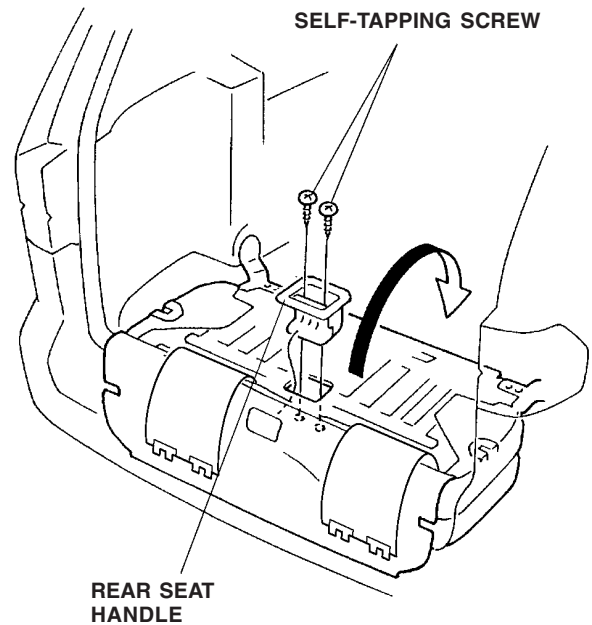


- Have an assistant hold the seat in the upright position. While wearing gloves, position the bracket between the seat cushion pad and seat frame and install the two washer-screws. You will need to turn the bracket sideways, then fit it between the wires.

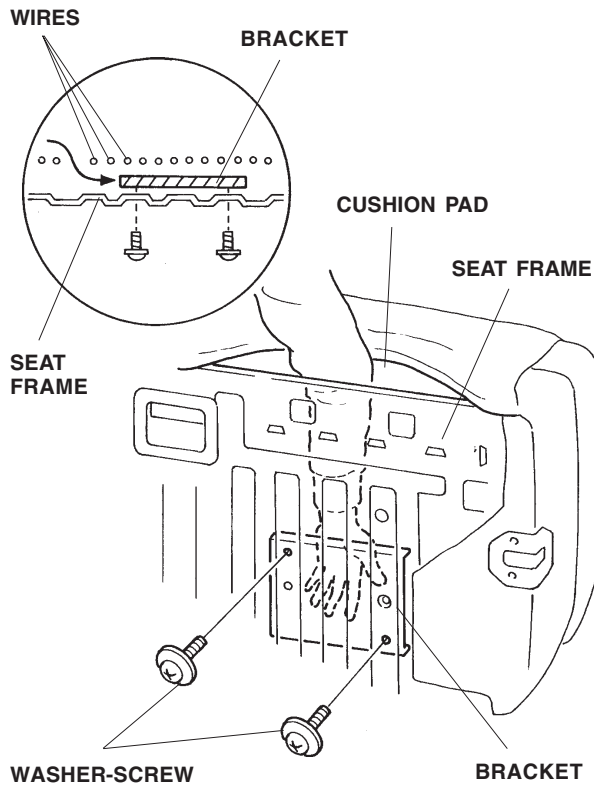


- Fold the rear seat down, and remove the rear seat handle from the seat.

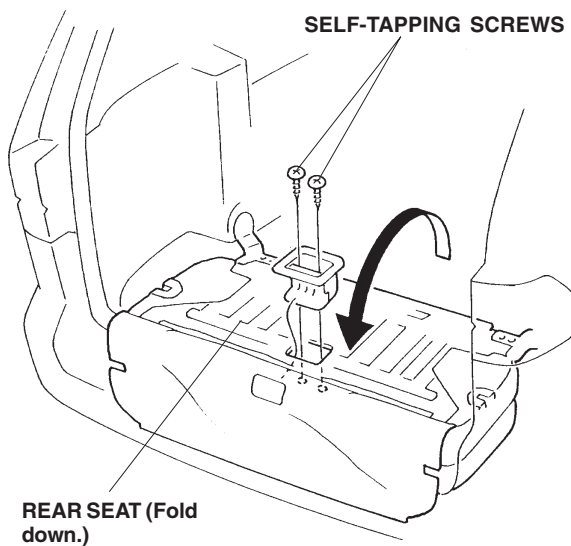

- Reinstall the rear seat cushion cover using the six clips, then reinstall the rear seat handle.

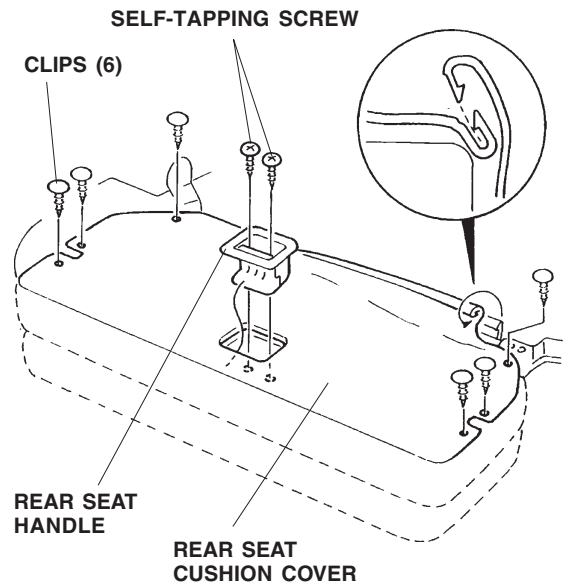


- While pressing on the rear seat cushion cover with the tip of your finger, locate the two washer-screws you installed in step 10.

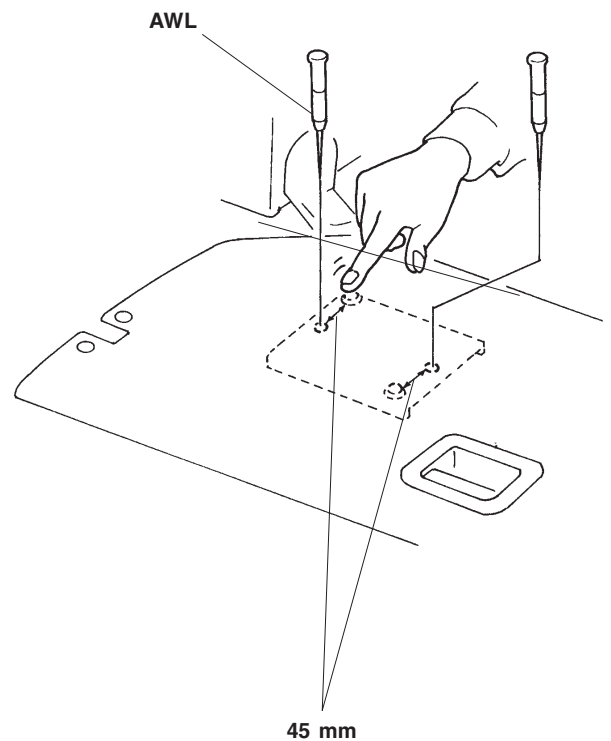


Holder Installation

14. Attach the holder to the bracket using the two washer-bolts.

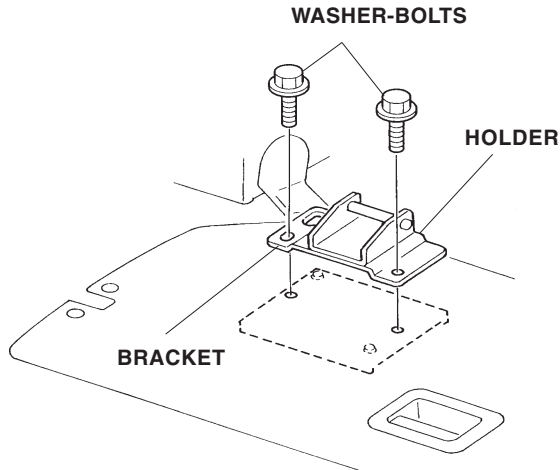


The holders can be installed in two directions, position A or B, according to the type or the number of the bikes to be mounted on the holders. The position of the bike is changed by about 90 mm in longitudinal direction when the direction of the holder is changed.

Position A:

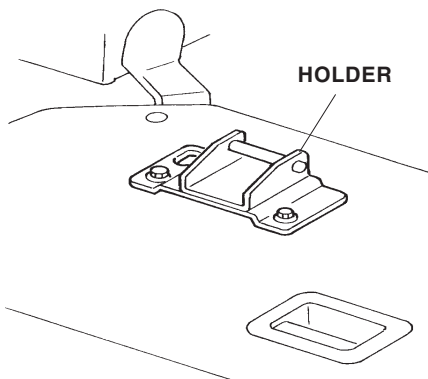

Position B:

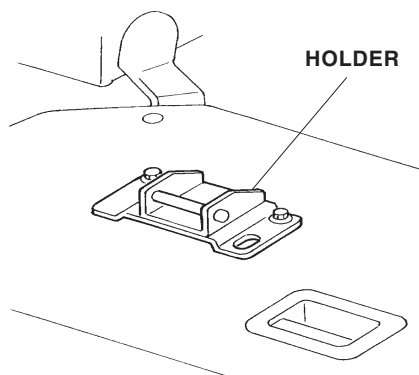

15. Remove the adjusting nut from the quick shaft, then slide the shaft through the pipe on the holder in either direction.

