
HONDA – INSTALLATION INSTRUCTIONS	Accessory ALL SEASON RUBBER FLOOR MATS
Put this information in the glove box v	
PARTS LIST	Г
Front mat	F
and the second se	l
Rear mat	E
3 Front floor mat anchors	-
3 Self-tapping screws	
	₩

Washer-screw



Rear floor mat anchor



2011 ELEMENT (DOG FRIENDLY PACKAGE) Publications No. All 43462

> Issue Date **OCT 2010**

ox with the vehicle owner's manual.

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver Utility knife Tape measure Drill Electrical tape 3 mm and 6 mm Drill bits Eye protection (face shield, safety goggles, etc.) File

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- A floor mat anchor prevents the front mat from sliding forward and possibly interfering with the pedals.
- If you remove the front mat, make sure you re-anchor it when you put it back in your vehicle.
- If you replace the floor mat, use factory floor mats designed to be used with the floor mat anchor.
- If you use a non-factory floor mat in the driver's foot well, make sure it fits properly, and that it can be used with the floor mat anchor.
- Do not put additional floor mats on top of the anchored mat. Any additional mats may slide forward and possibly interfere with the pedals.


Installing the Front Anchors

1. In front of the driver's and passenger's seats, locate the projections on the plastic floor cover. Using a utility knife, cut out the projections to expose the plastic grommets.


Driver's Seat

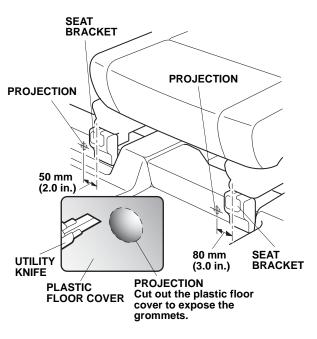

Passenger's Seat

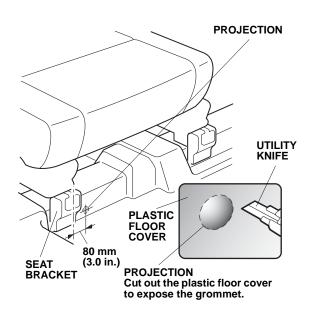


2. Install a front floor mat anchor to each of the three grommets using one self-tapping screw for each floor mat anchor.

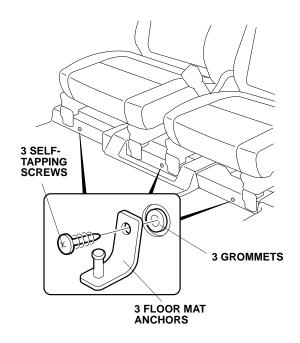


Installing the Rear Anchor


- 3. Locate the dimple at the bottom of the right rear side trim, and drill a 6.5 mm hole:
 - Wrap electrical tape around a 3 mm, and 6.5 mm drill bit 10 mm (0.4 in.) away from the tip.
 - While wearing eye protection, first drill with a 3 mm drill bit, and finish with a 6.5 mm drill bit.
 - After drilling, remove all burrs from the hole.

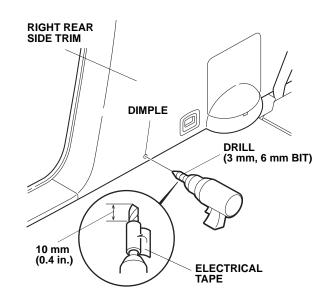

4. Insert the rear floor mat anchor behind the right rear side trim.

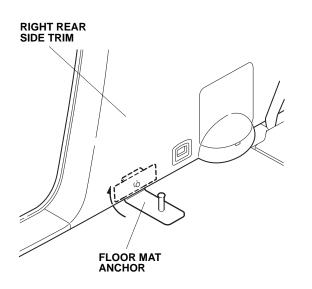


5. Align the floor mat anchor with the hole in the right rear side trim and install the washer-screw. Tighten the washer-screw.

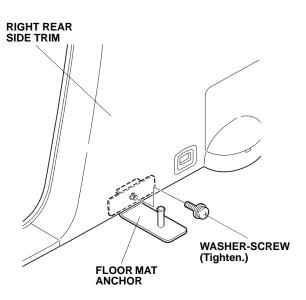

Installing the Floor Mats

6. Install the front mat by inserting the three front mat rings over the three anchor pins.

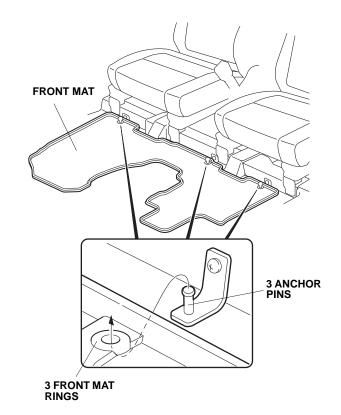

7. Install the rear mat by inserting the ring in the floor mat over the rear floor mat anchor.

