



INSTALLATION INSTRUCTIONS

Accessory
FULL NOSE MASK
P/N 08P35-TG7-100

Application
2017 PILOT

Publications No.
VERSION 1
Issue Date
OCT 2016

PARTS LIST

Mask
(hood section)



Mask
(bumper section)



6 Snap-screws



6 Washers




Elastic cord



TOOLS AND SUPPLIES REQUIRED

- Stubby Phillips screwdriver
- Flat-tip screwdriver
- Scissors

Illustration of the Full Nose Mask on the Vehicle

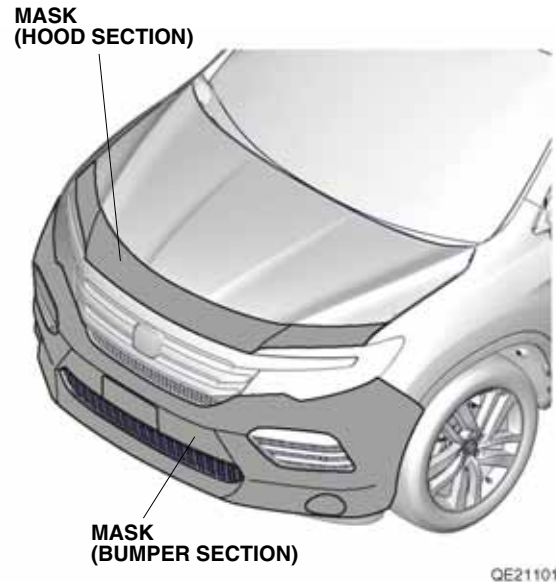

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Make sure the vehicle and nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure to install the nose mask securely. If the nose mask starts to flap or comes loose while driving, safely pull to the side of the road, stop the vehicle, and secure or remove the nose mask.

Displaying the License Plate

If your state law requires the display of both license plates, cut out the piece of the full nose mask section that covers the front license plate:

- Face the inside of the mask toward you.
- Carefully cut out the overcast stitching with scissors. Remove the stitching and license plate section.

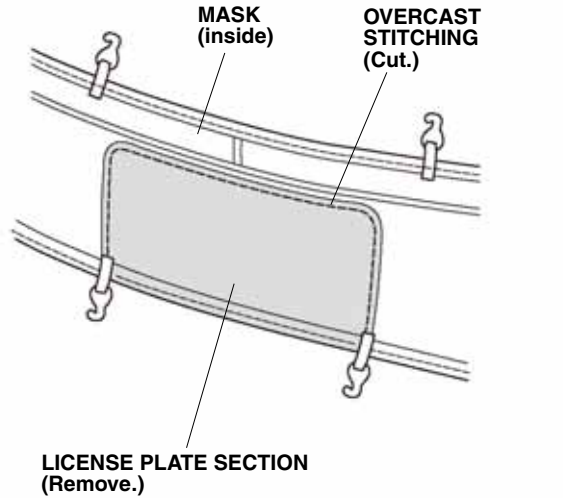


QE21102BA

With Fog Lights

If the vehicle is equipped with the fog lights, cut out the piece of the full nose mask section that covers the fog lights:

- Face the inside of the mask toward you.
- Carefully cut out the overcast stitching with scissors. Remove the stitching and fog light section.


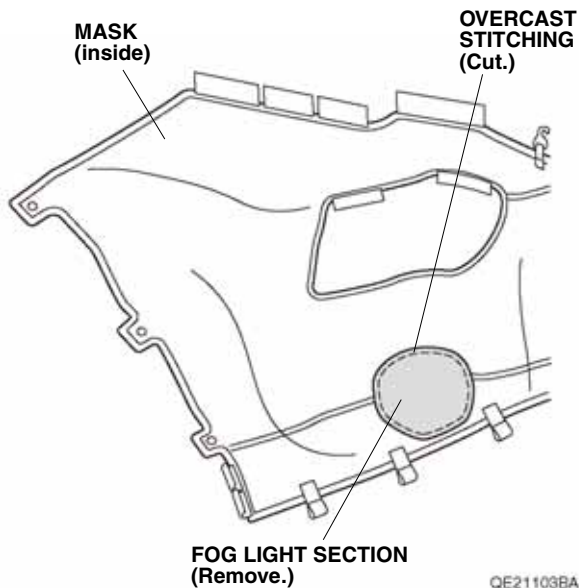


QE21103BA

Removing the Vehicle Parts


1. Wrap a shop towel around the hood latch.

HOOD LATCH
(Wrap with a shop towel.)

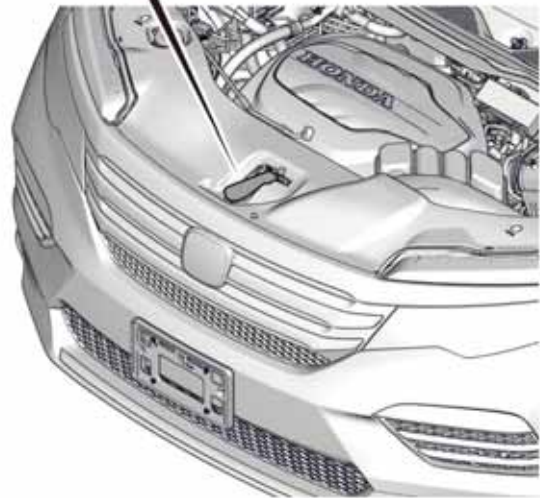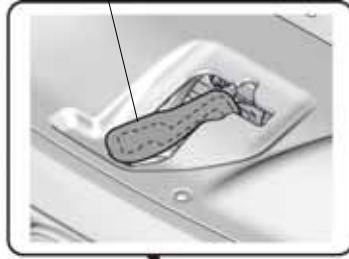


QDN1301AA

2. Remove the front bulkhead cover.

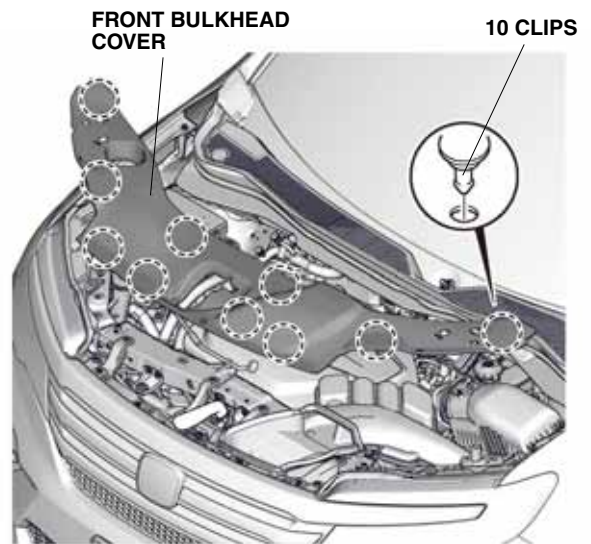


QDN1302AA

- Remove the intake air guide.

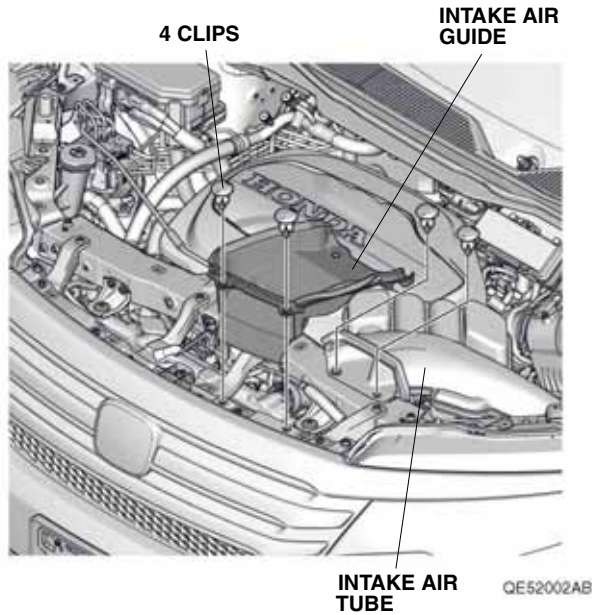


Installing the Hood Section

- Fit the corners of the mask (hood section) around the hood. Adjust the mask so that it fits smoothly over the edges. Attach three hooks to the hood. Do not fold back the rubber seal inside the hood when installing the hook. Remove / install the hooks by inserting your finger into the belt of each hook. Pulling the hooks with excessive force can break the hook strap.

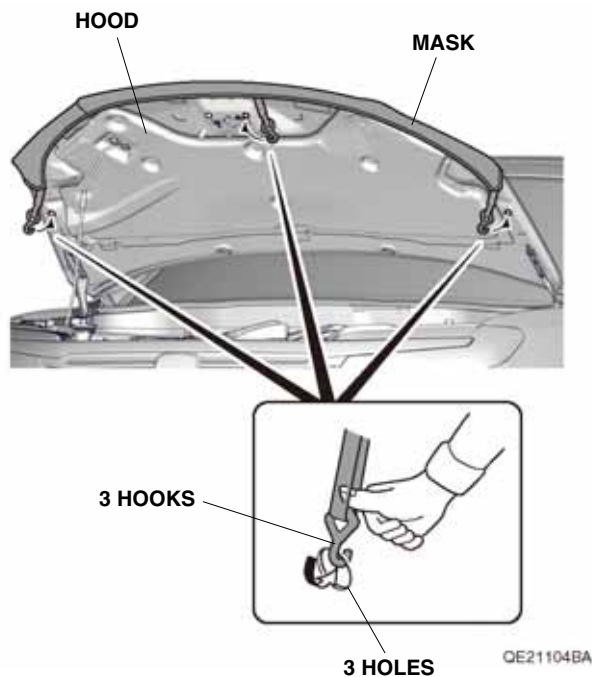


Installing the Bumper Section

- Remove the three self-tapping screws from the left front fender and front bumper.

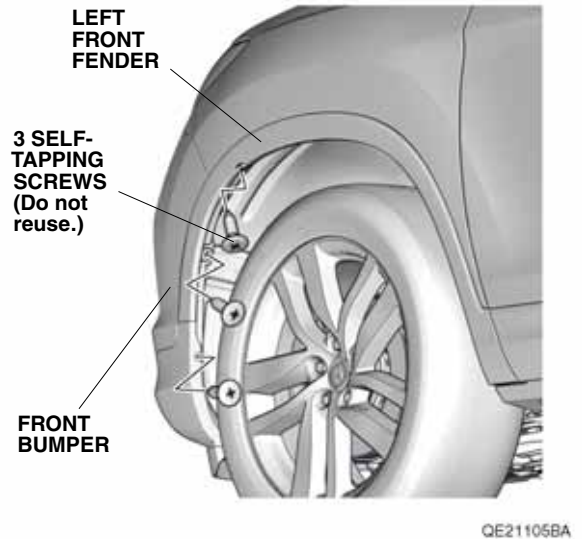


- Place three washers onto the three snap-screws, then install and securely tighten the three snap-screws.

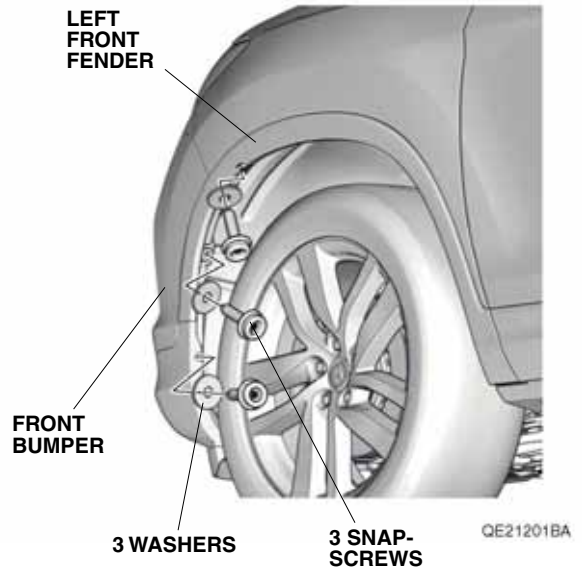


- Repeat steps 5 and 6 on the right side of the vehicle.

8. Pull the mask back toward the fenderwell, smooth out any wrinkles, and then secure the three snaps on the mask onto the three snap-screws.

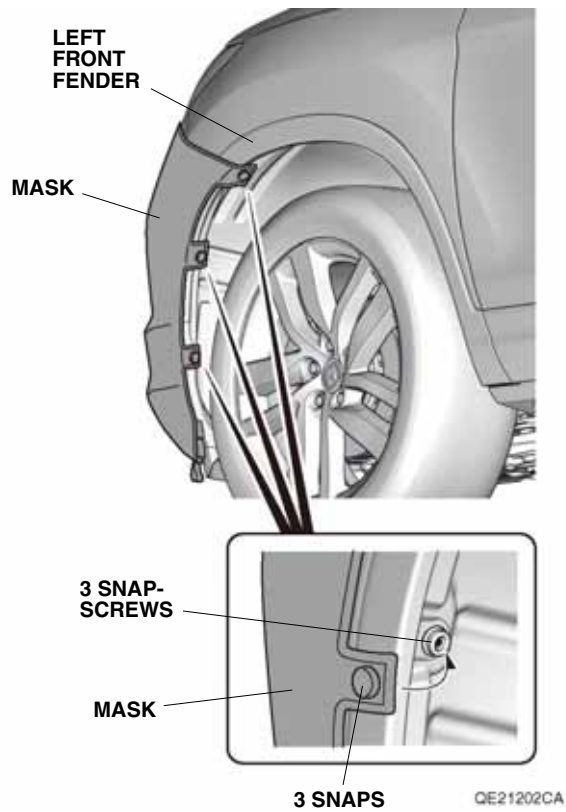


9. Attach two hooks to the fenderwell.

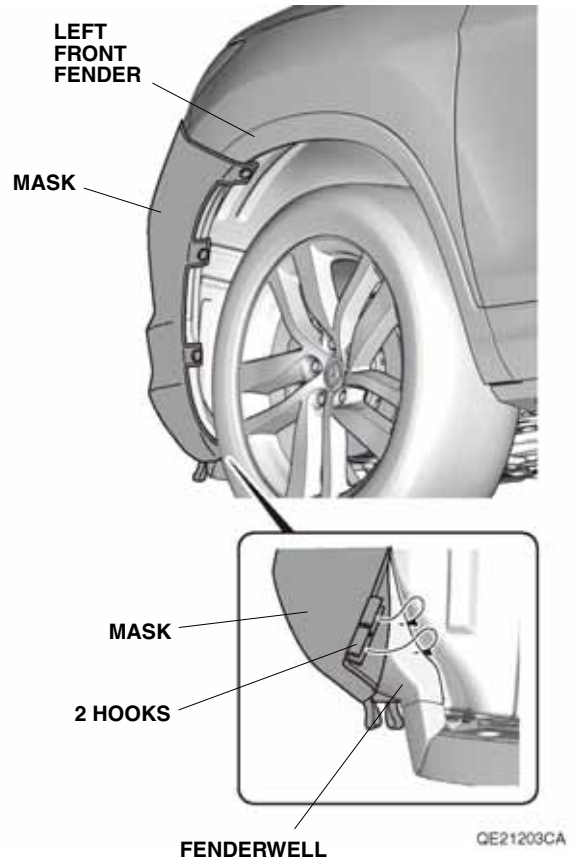


10. Repeat steps 8 and 9 on the right side of the vehicle.

11. Insert four tabs under the left headlight.

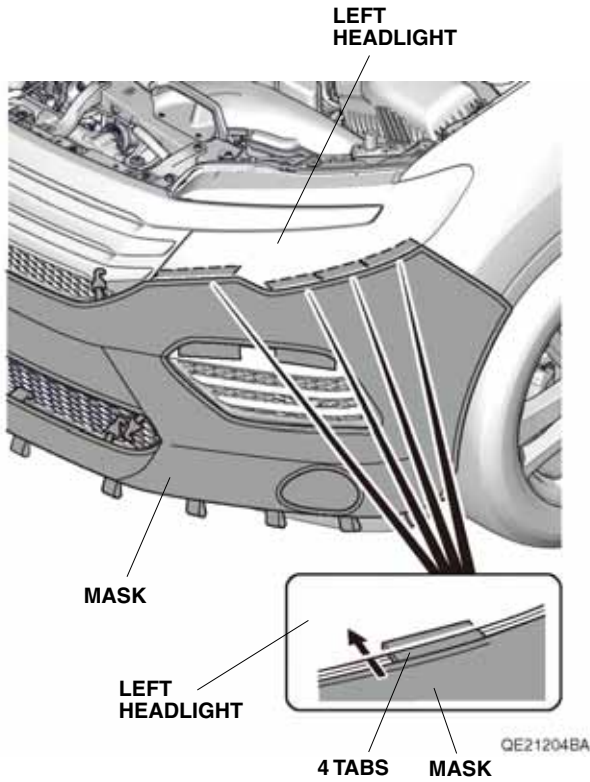


12. Insert two tabs onto the left parking light.

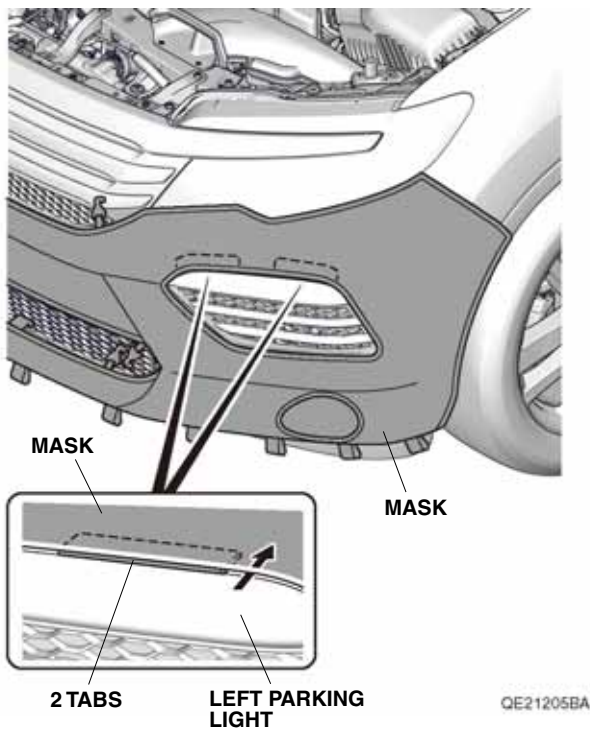


13. Repeat steps 11 and 12 on the right side of the vehicle.


14. Attach four hooks to the inside edge of the front grille.

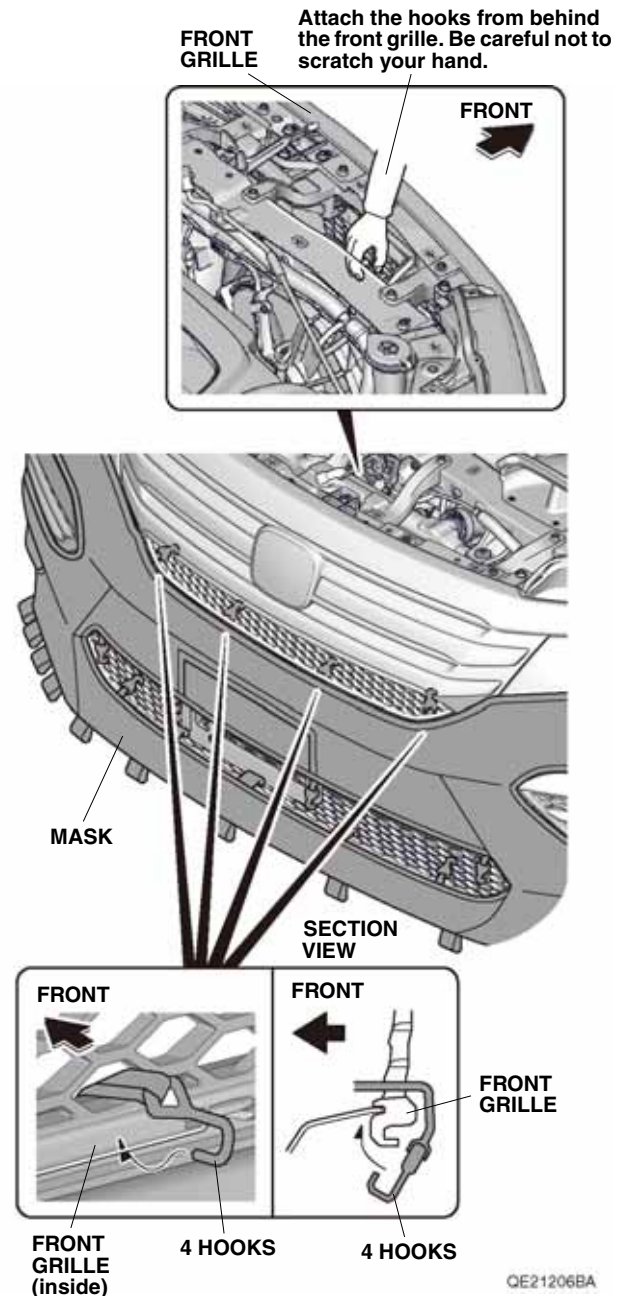


15. Attach five hooks to the inside edge of the front lower grille.

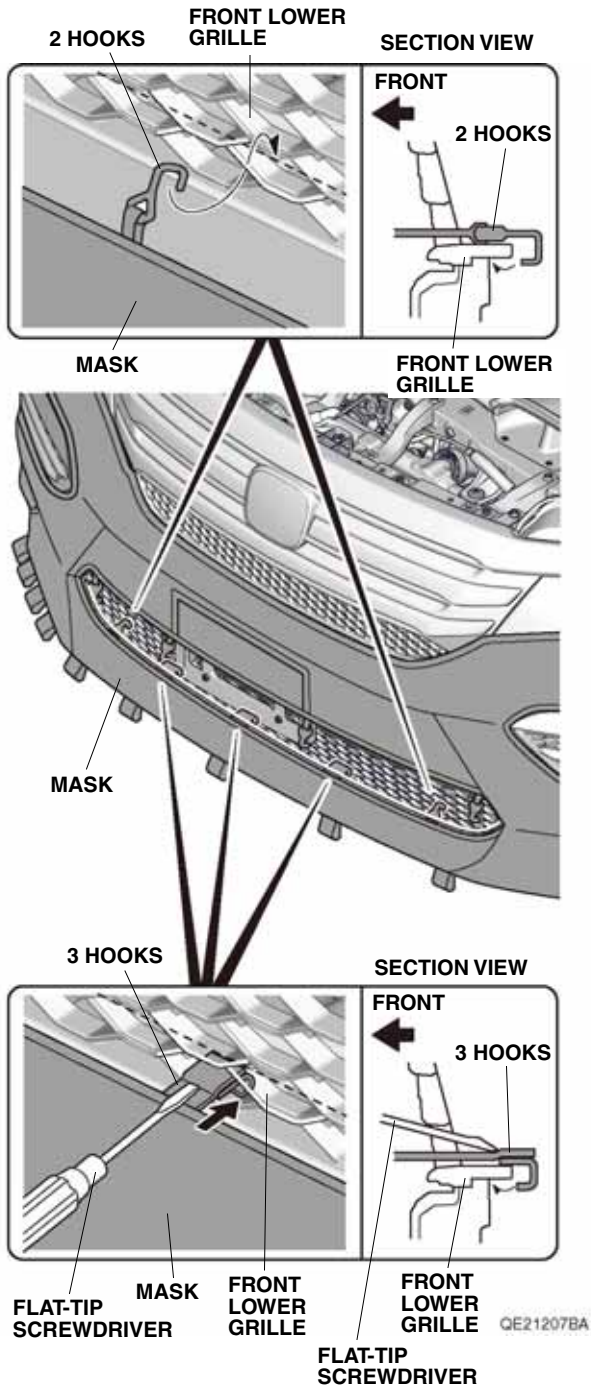

16. Attach four hooks to the inside edge of the front lower grille.

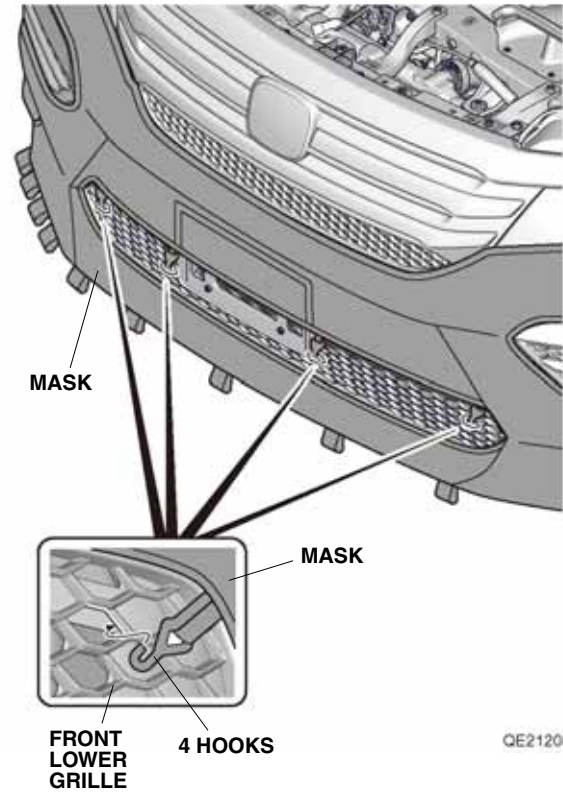

17. Route the elastic cord through the thirteen loops on the bottom of the mask. Attach one hook to the gap of the inner fender and front bumper. Stretch out the elastic cord after routing it through each loop then secure the other hook to the gap of the inner fender and front bumper on the other side.

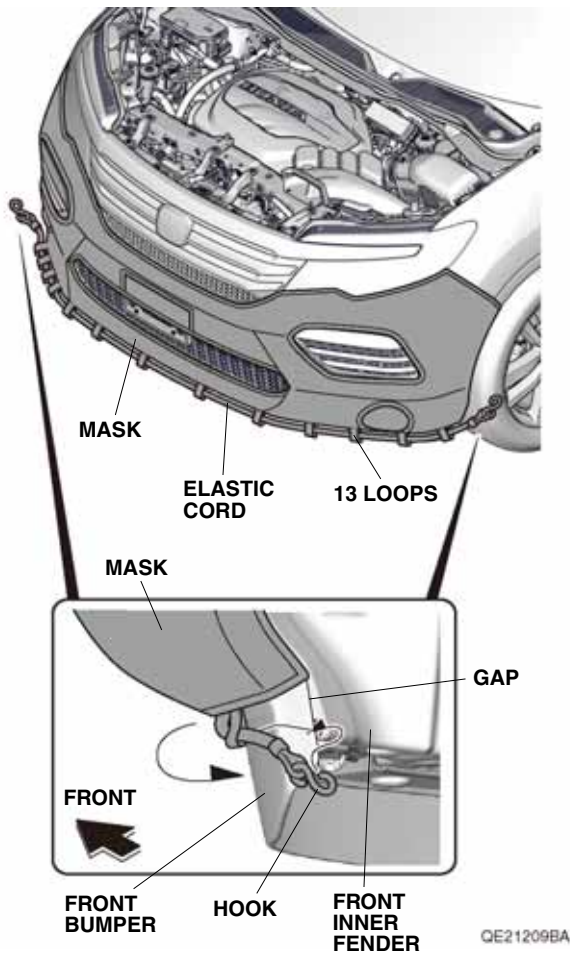

18. Install all removed parts.

CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry out of direct sunlight. Make sure the mask is completely dry before you reinstall it.